




# Kodak EasyShare LS743 Microphone Replacement

Replace microphone

Written By: Odessa

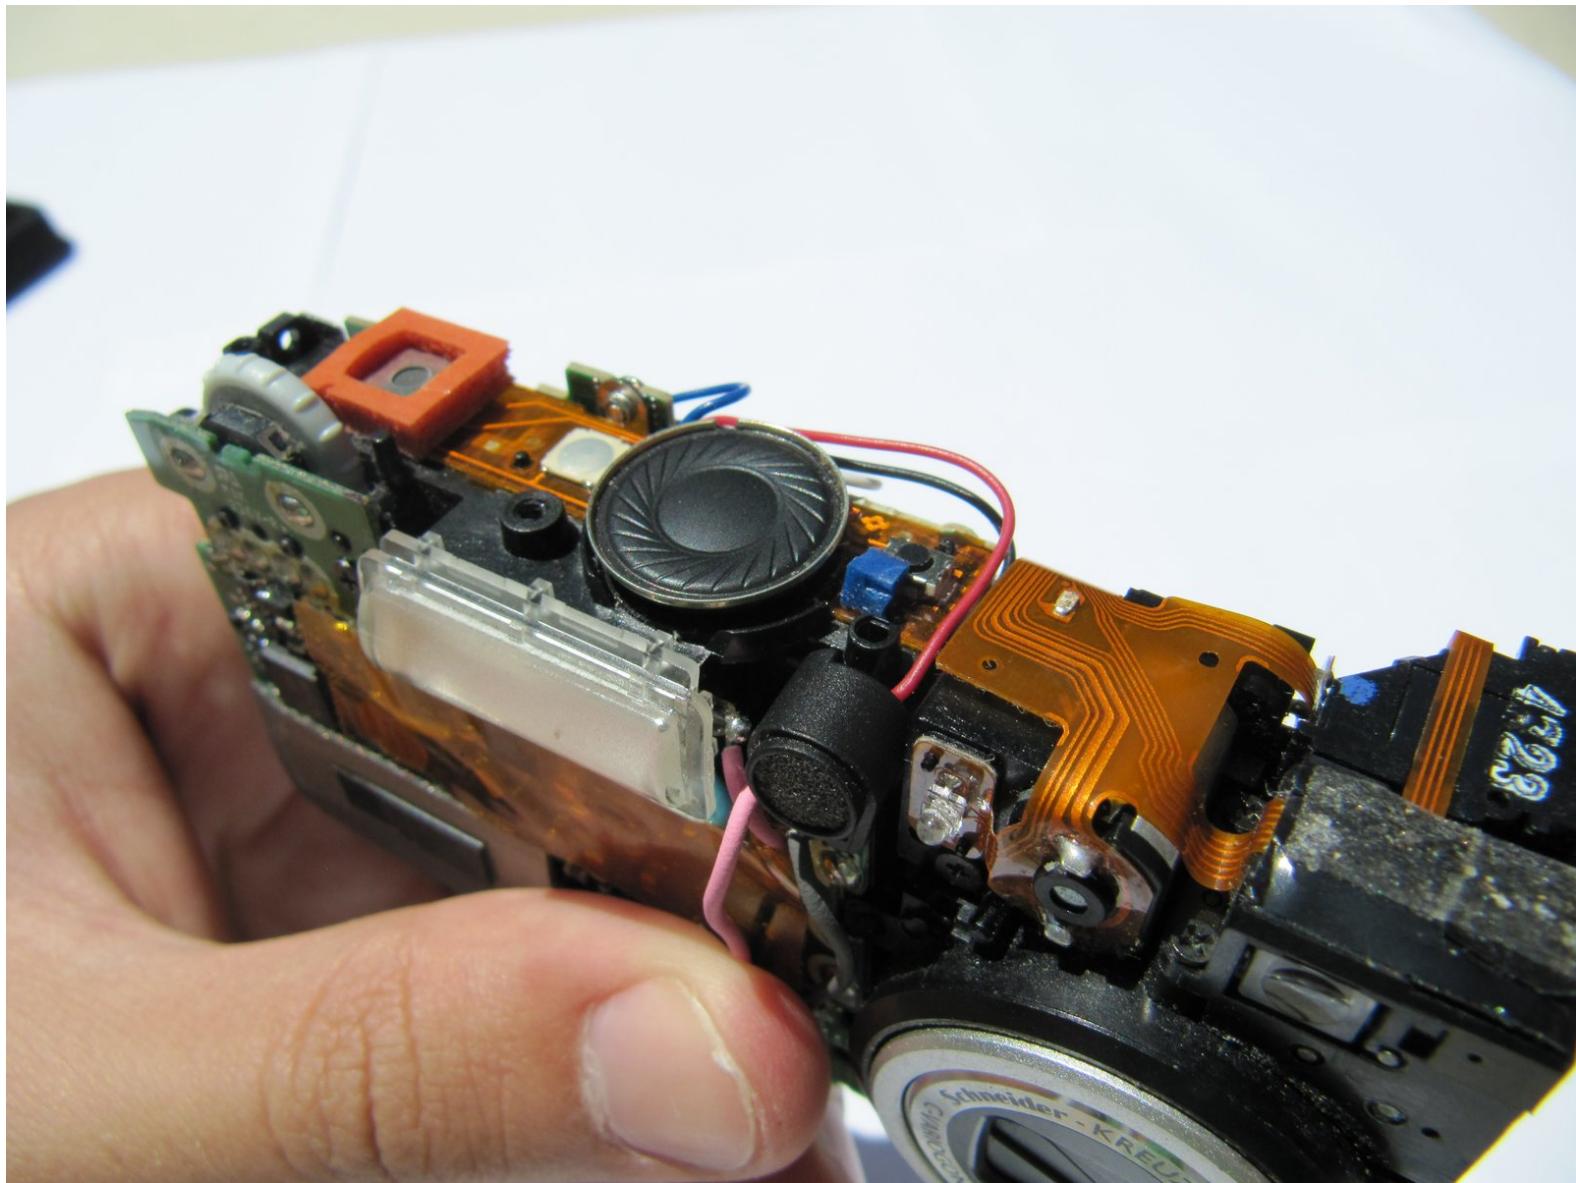

## INTRODUCTION

This will show a step-by-step process in replacing the camera's mic.

### TOOLS:


- [Phillips #00 Screwdriver](#) (1)

## Step 1 — Battery



- Open the battery cover.

## Step 2

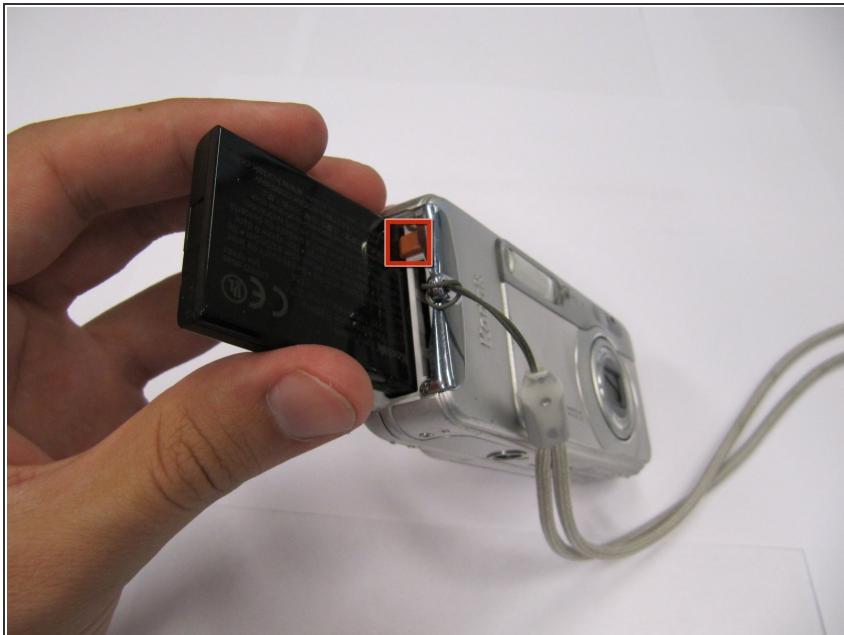


- Slide the orange latch sideways to eject the battery.
- Remove the battery.

## Step 3 — Kodak EasyShare LS743 Camera Case Disassembly




- Remove 7 screws.
  - 1 (6.25 mm) screw located on the top right corner, next to the view screen.
  - 4 (4.45mm) screws on the bottom of the camera.
  - 2 (2.95mm) screws on the left side of the camera.

## Step 4

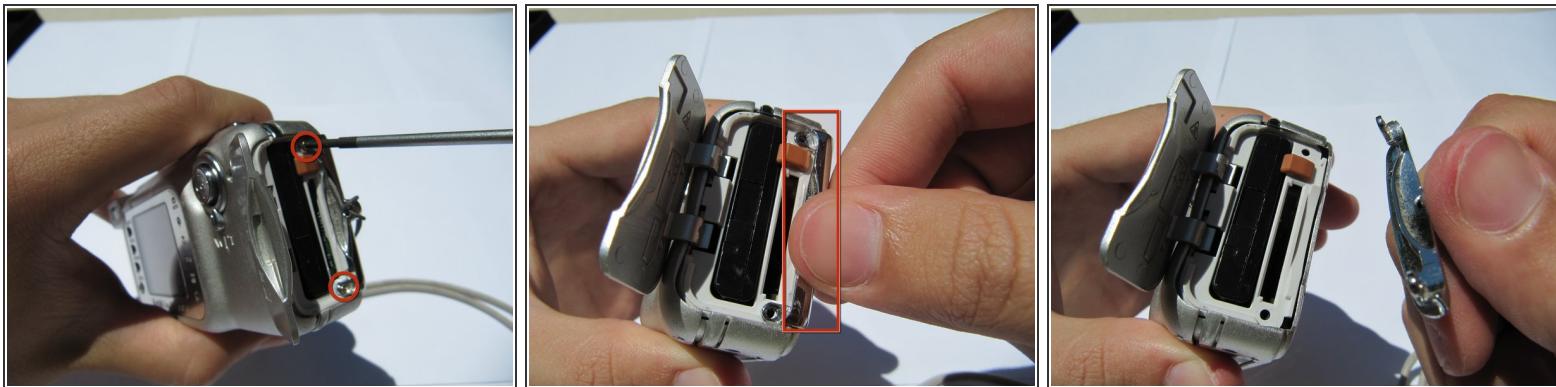



- There will be 2 (5.39mm) screws. Remove the screws in order to remove the lanyard.

## Step 5

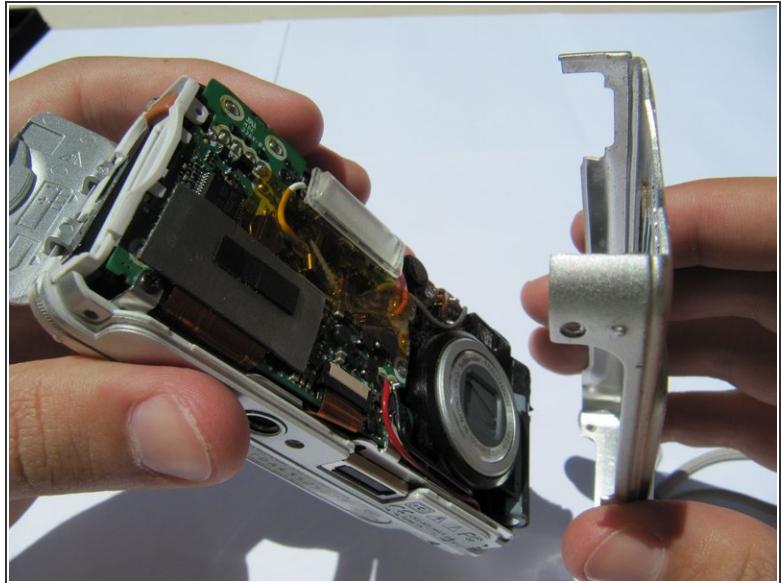



- Remove the rear camera casing.
- Remove the front casing.

## Step 6 — Top and menu buttons

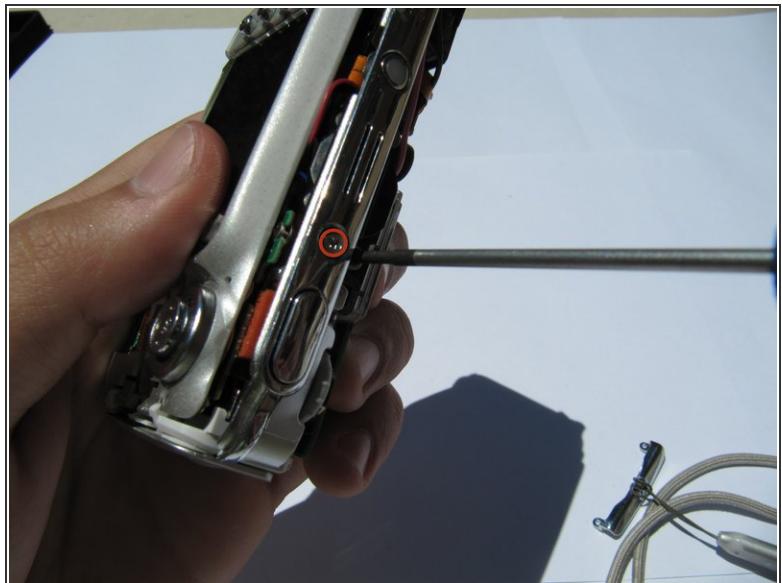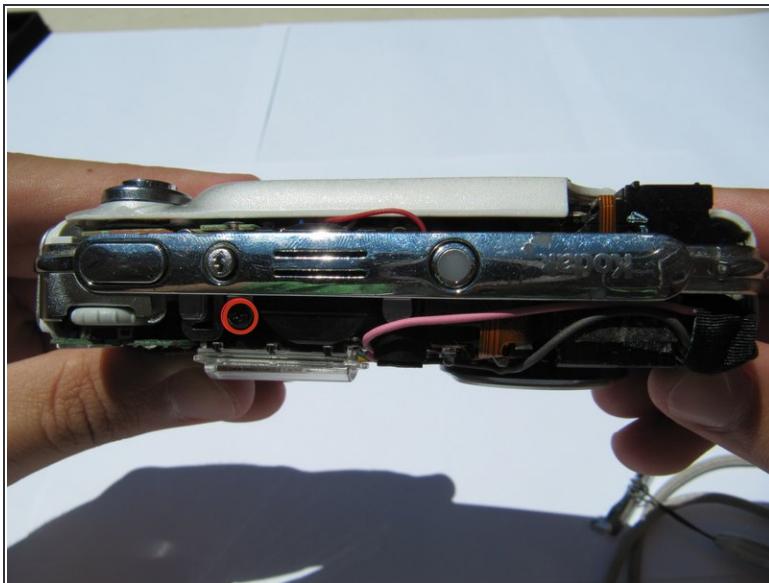

- Remove the top panel screw (1x 4.37mm).

## Step 7

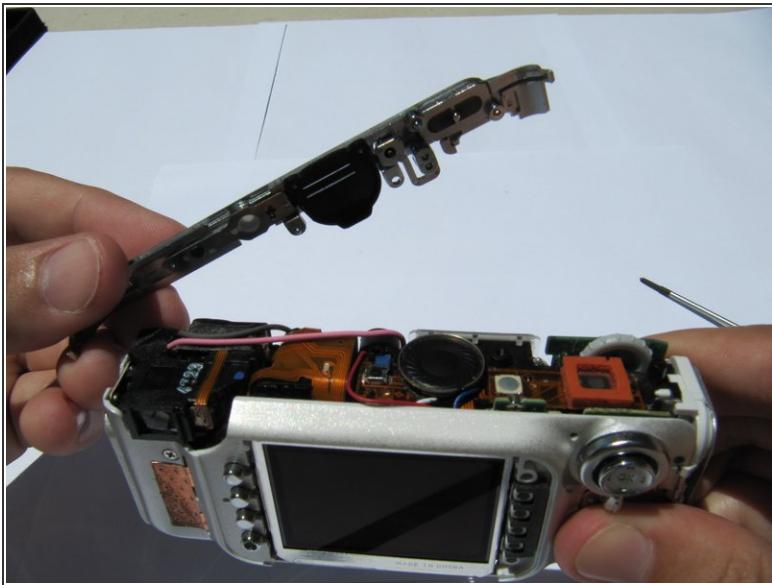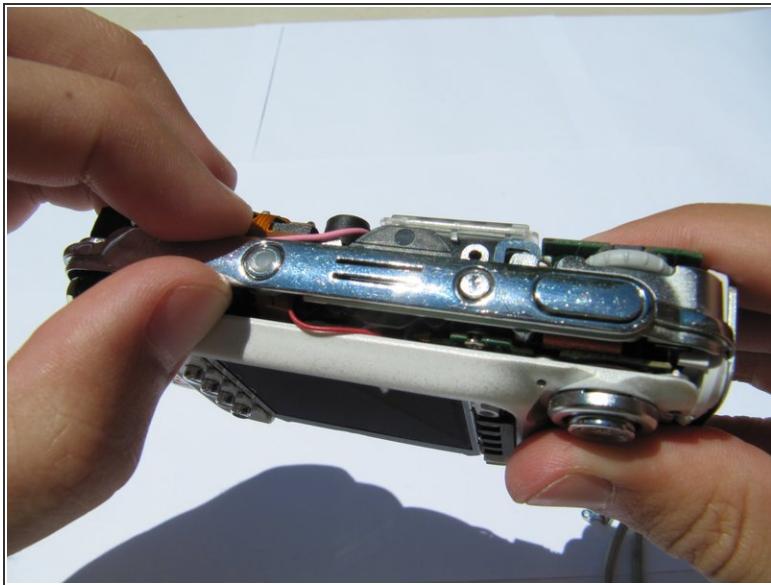


- Remove the top panel.

## Step 8




- Remove the back panel screws (1x 3.33mm, and 1x 3.40mm).

## Step 9

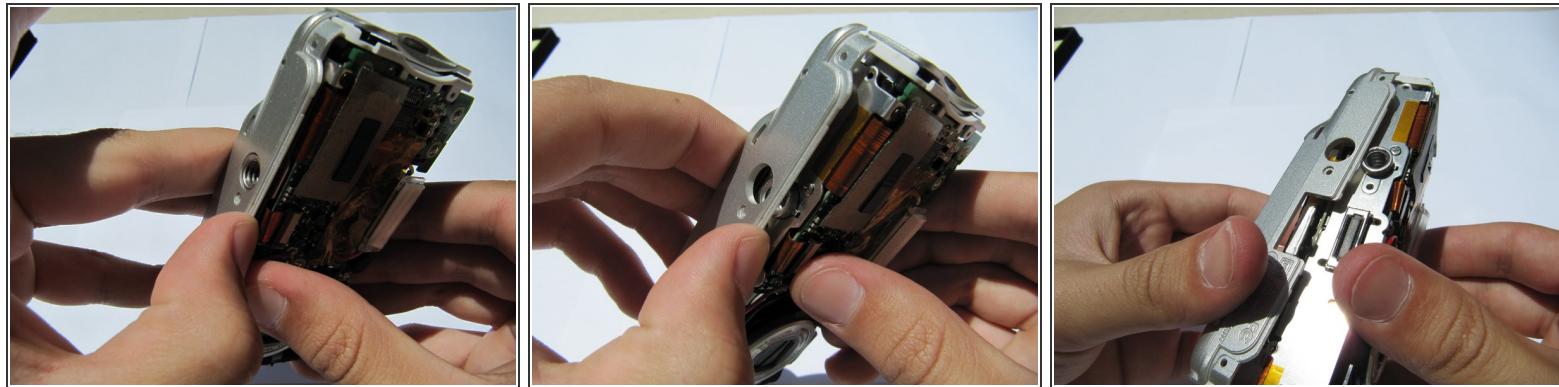


- Separate the inner casing from the tripod mount.

## Step 10

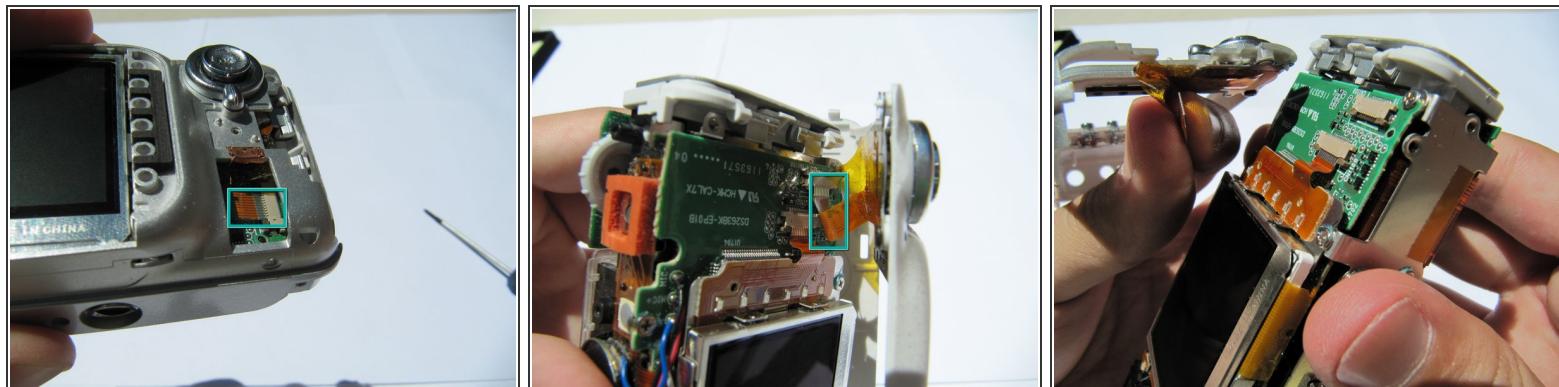


- Gently pull the orange tab out of the circuit board.

## Step 11

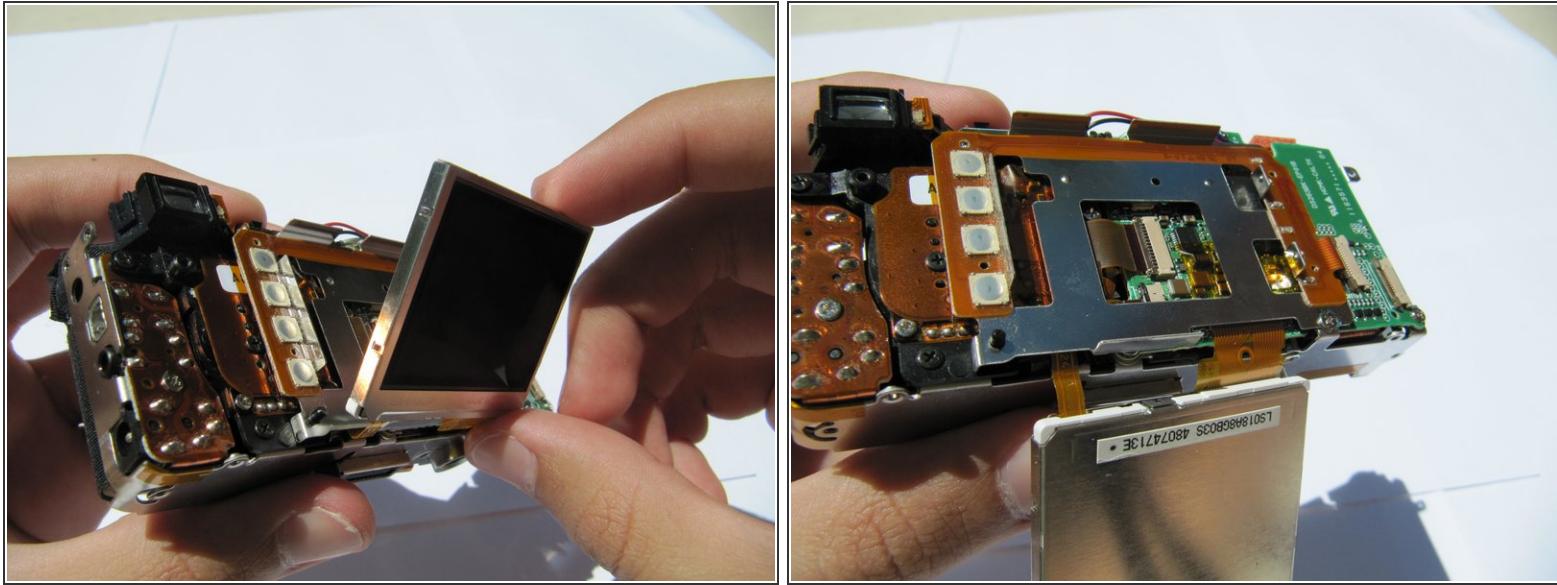


⚠ Carefully flip the LCD panel to expose the central circuit board.

## Step 12

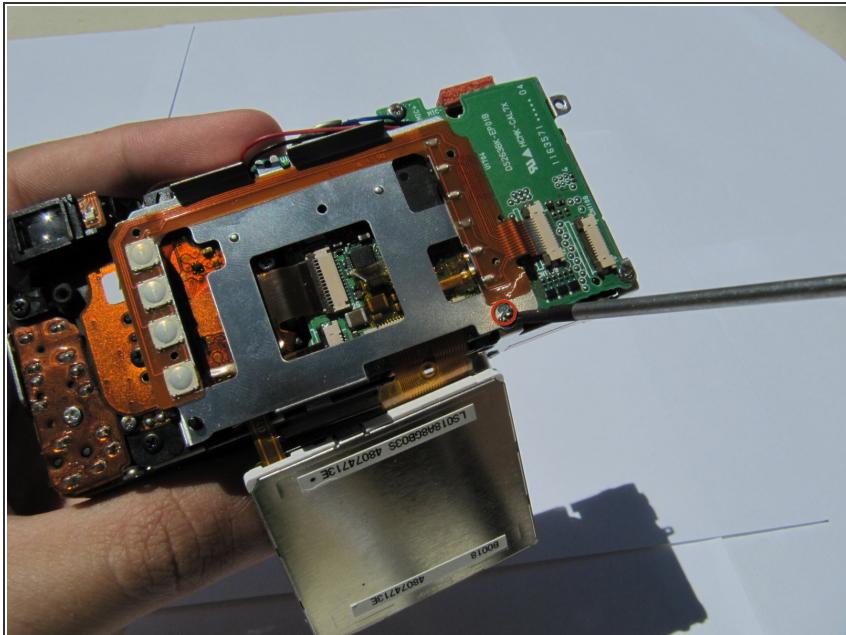


- Remove the (1x 3.33mm) screw from the menu button panel .

## Step 13

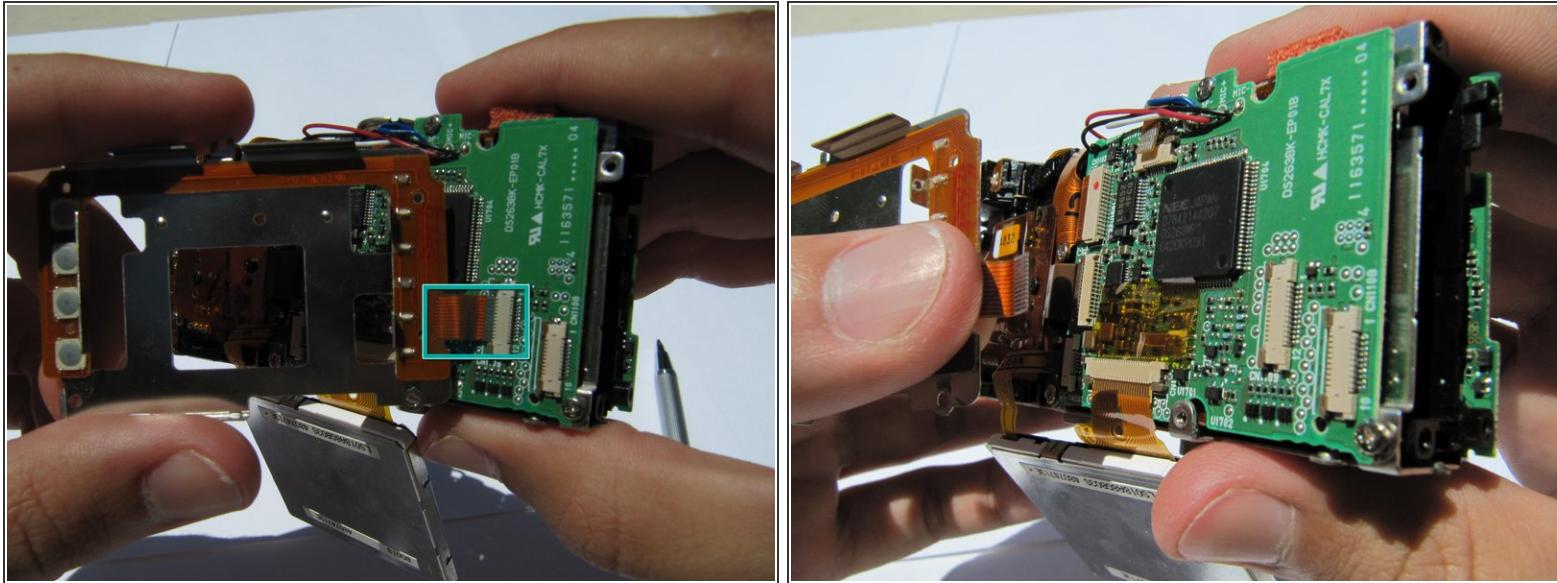


- Pull the second orange tab from the circuit board and remove the buttons.

## Step 14 — Removing LCD

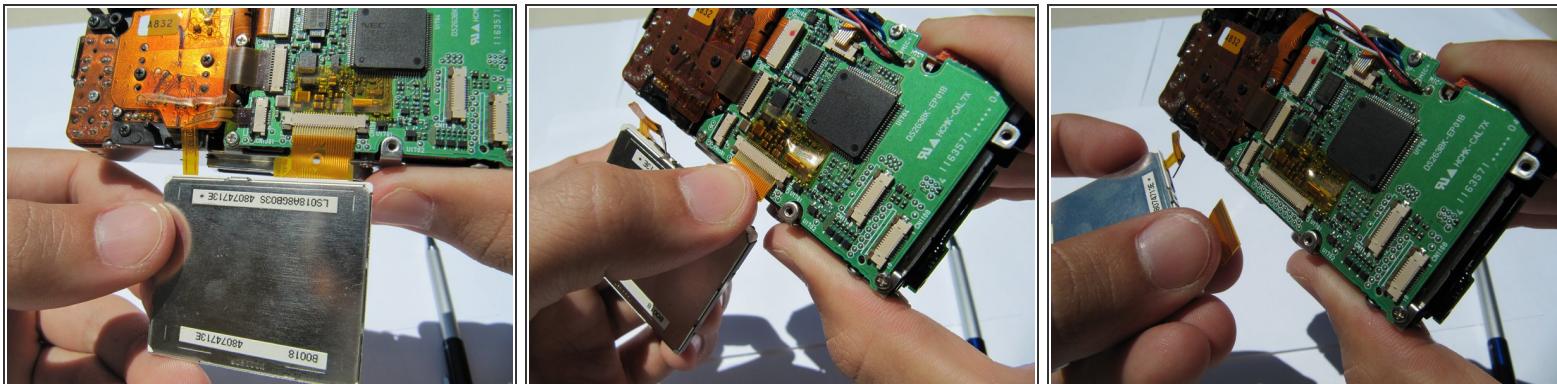


- Flip up the LCD screen to reveal the two orange ribbon cables.
- Disconnect the two ribbon cables from their sockets on the motherboard.

## Step 15 — Microphone

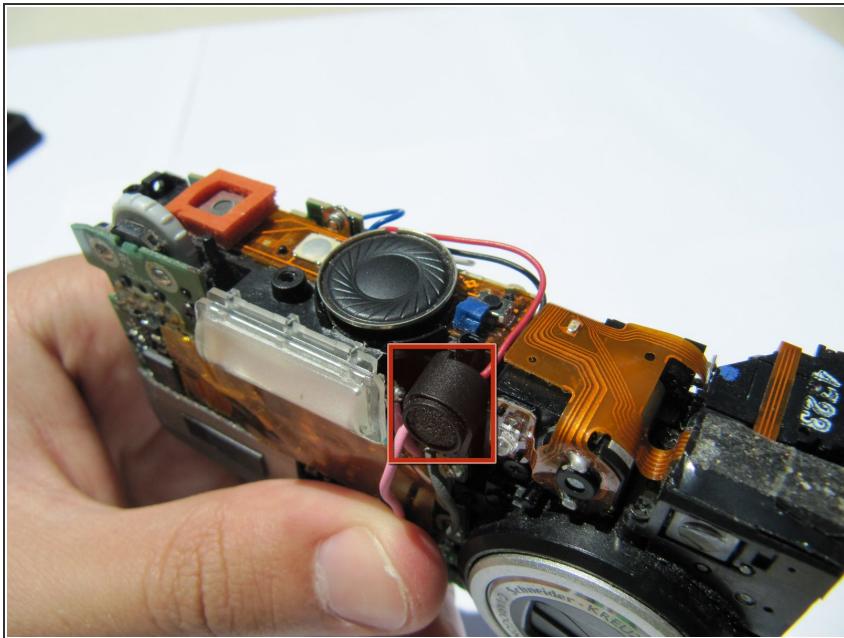


- Locate the microphone on top of the camera

## Step 16

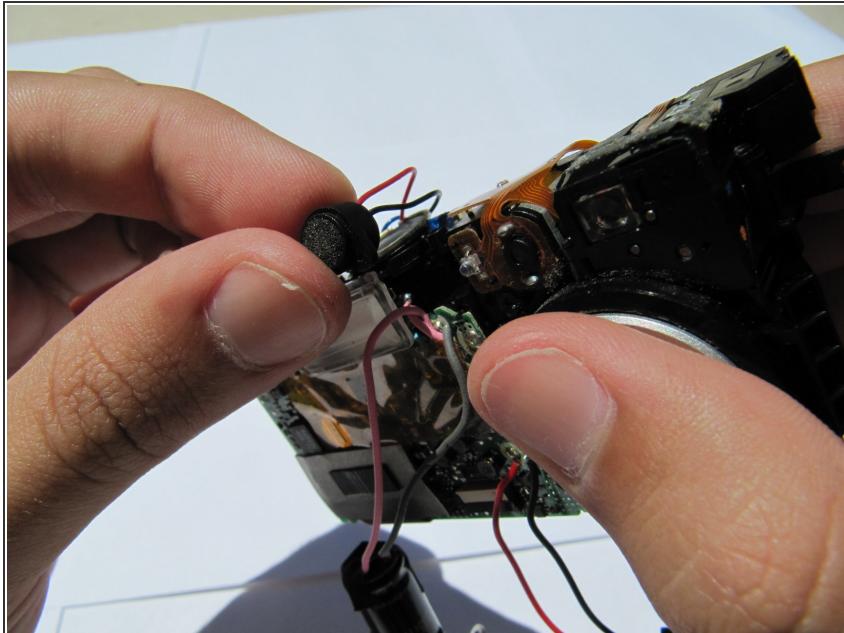

 With a pry bar, remove microphone away from camera carefully.

## Step 17

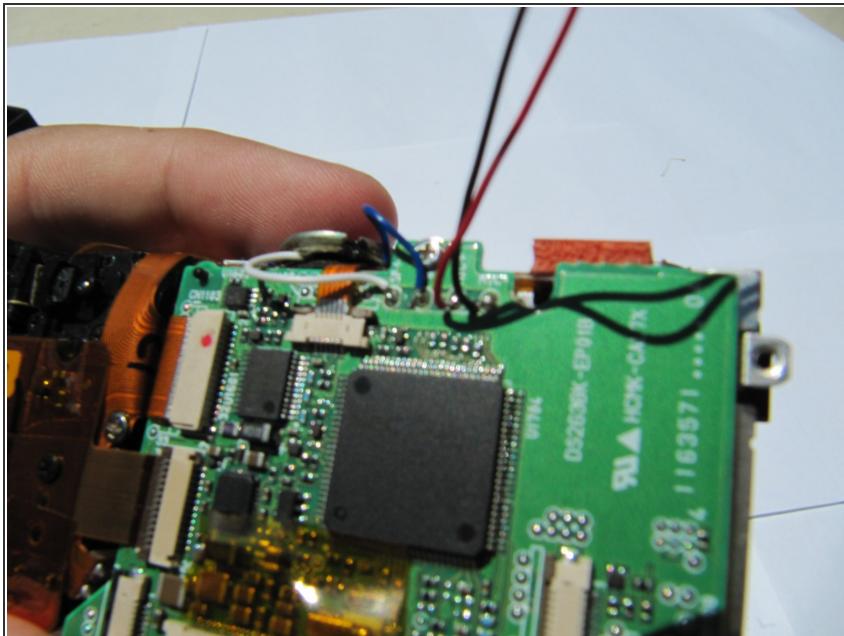

- Release it from it's pin and desolder

To reassemble your device, follow these instructions in reverse order.