




Kodak EasyShare LS743 Removing LCD Replacement

Removing the LCD screen.

Written By: Justin Mancherje

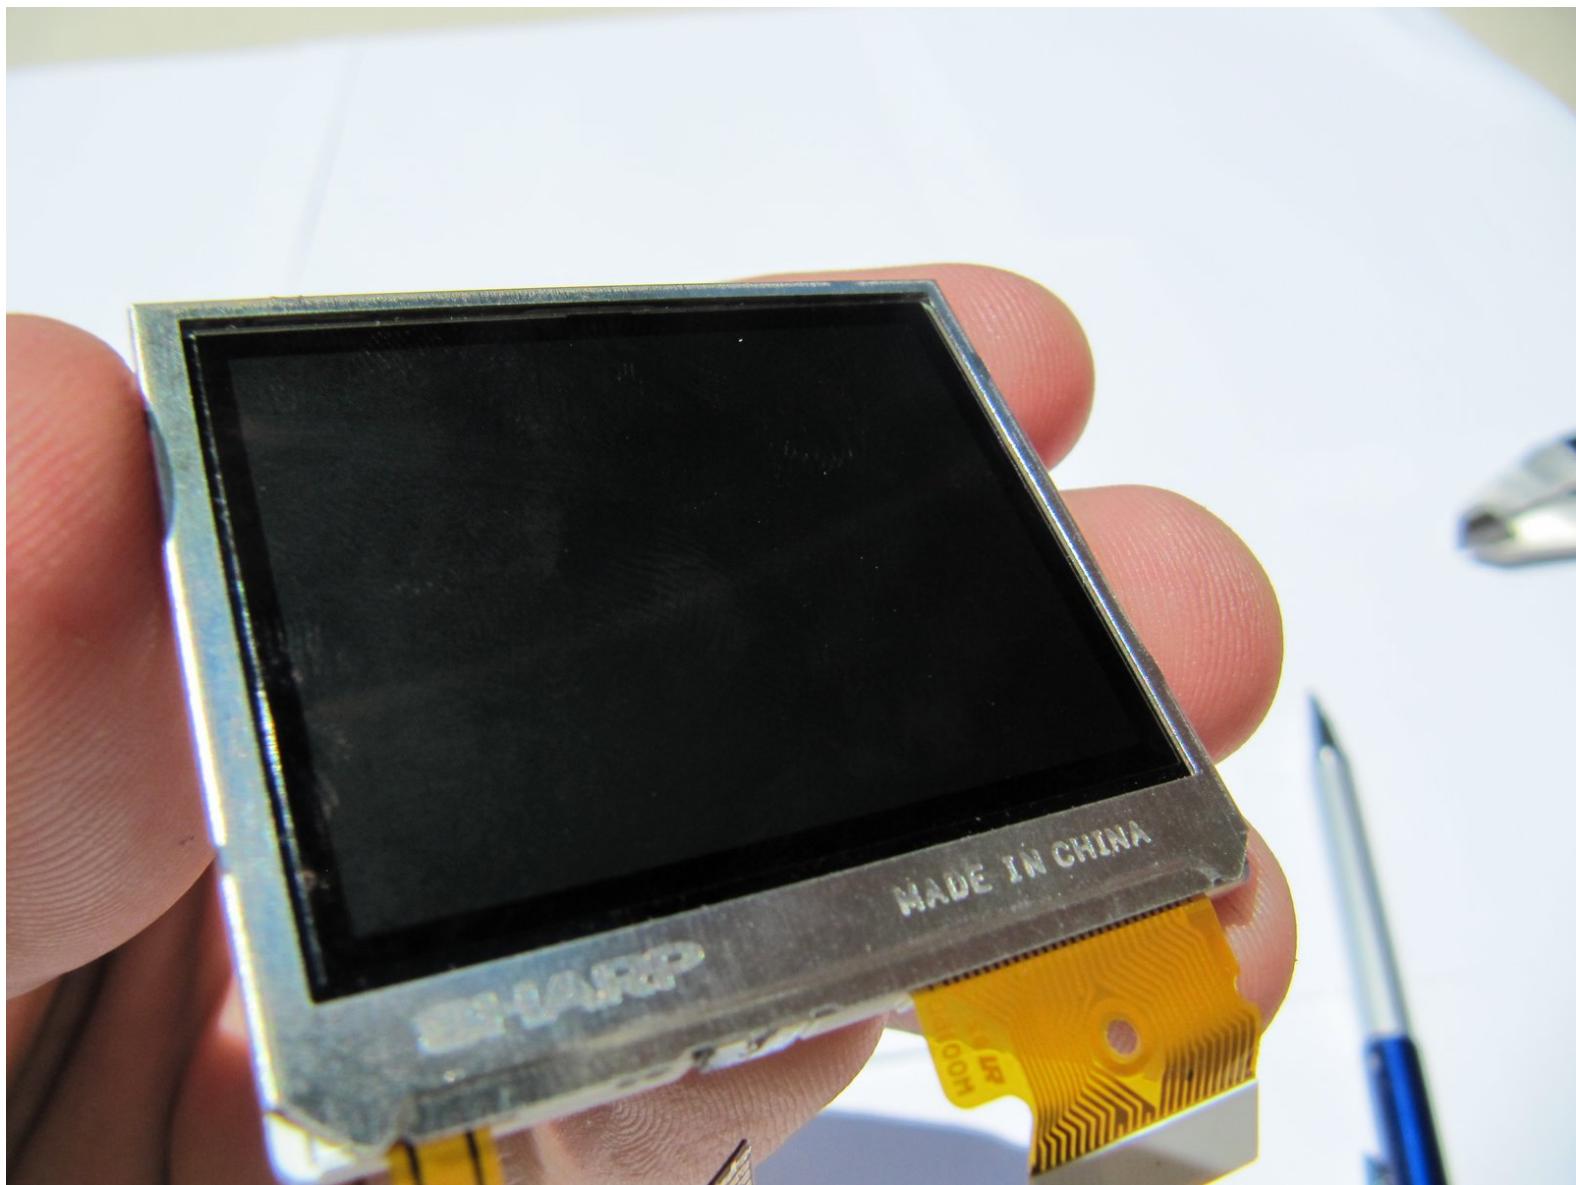

INTRODUCTION

If the LCD screen is damaged or broken, you may want to remove it and repair or replace it.

TOOLS:


- [Phillips #00 Screwdriver](#) (1)

Step 1 — Battery



- Open the battery cover.

Step 2

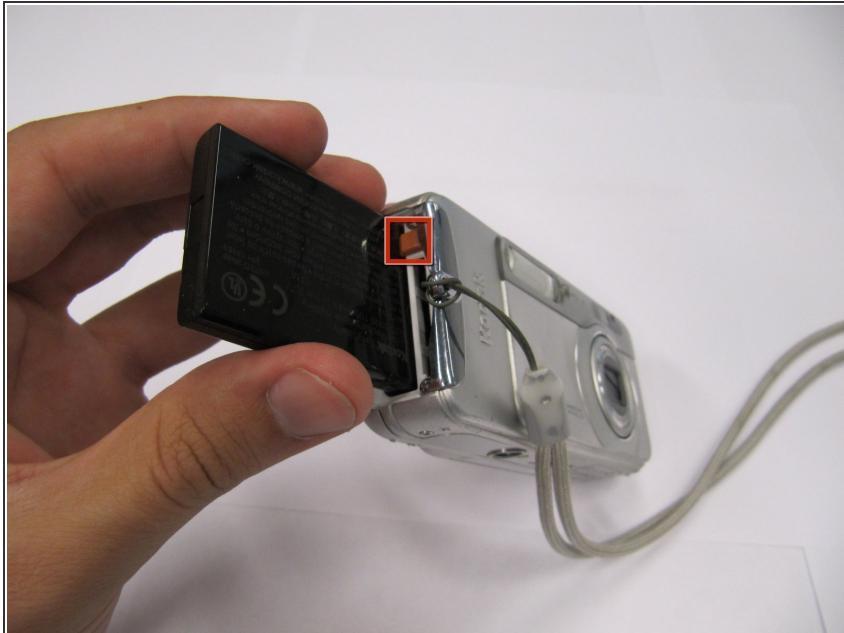


- Slide the orange latch sideways to eject the battery.
- Remove the battery.

Step 3 — Kodak EasyShare LS743 Camera Case Disassembly




- Remove 7 screws.
 - 1 (6.25 mm) screw located on the top right corner, next to the view screen.
 - 4 (4.45mm) screws on the bottom of the camera.
 - 2 (2.95mm) screws on the left side of the camera.

Step 4

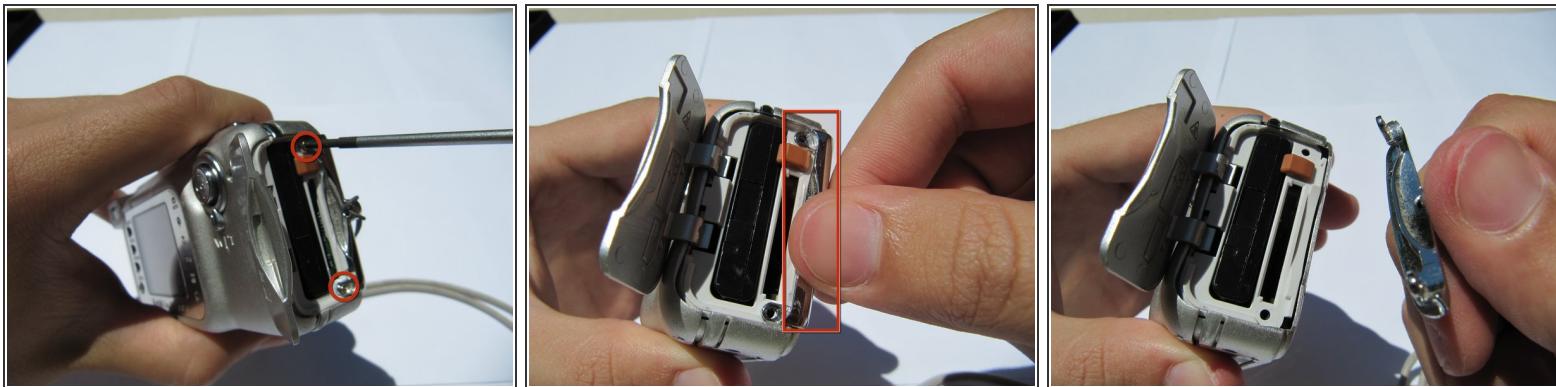


- There will be 2 (5.39mm) screws. Remove the screws in order to remove the lanyard.

Step 5

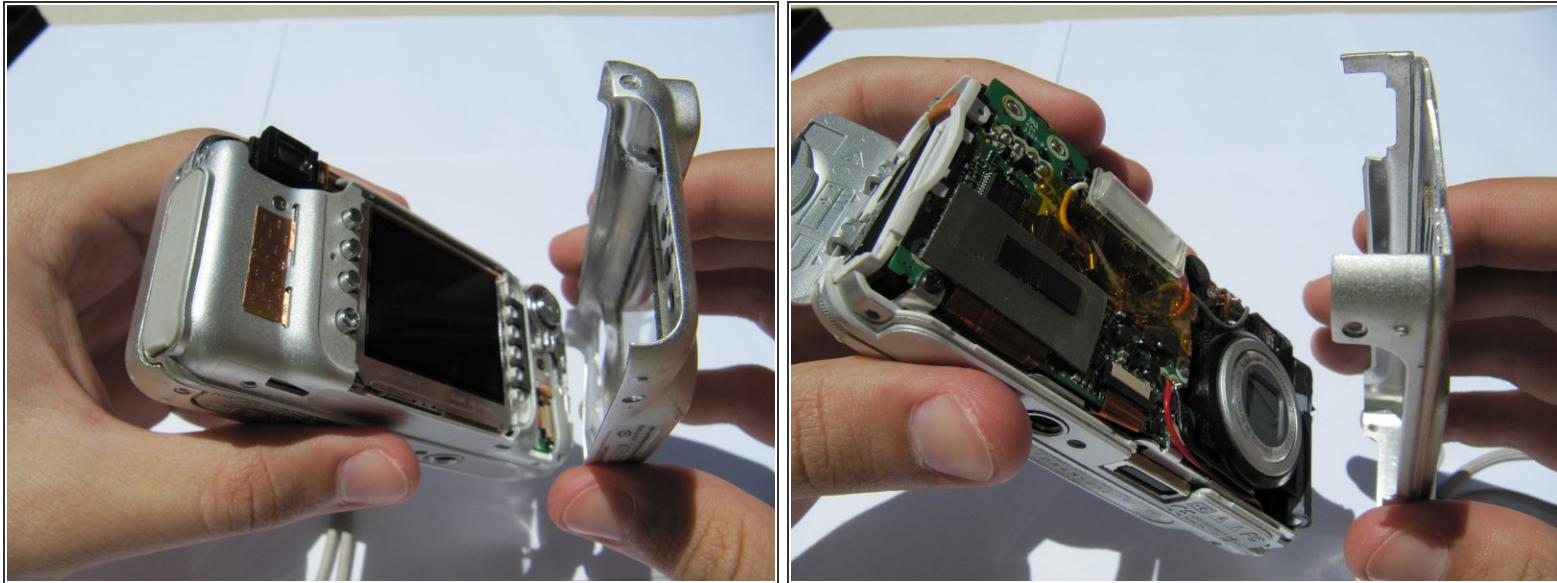

- Remove the rear camera casing.
- Remove the front casing.

Step 6 — Removing LCD

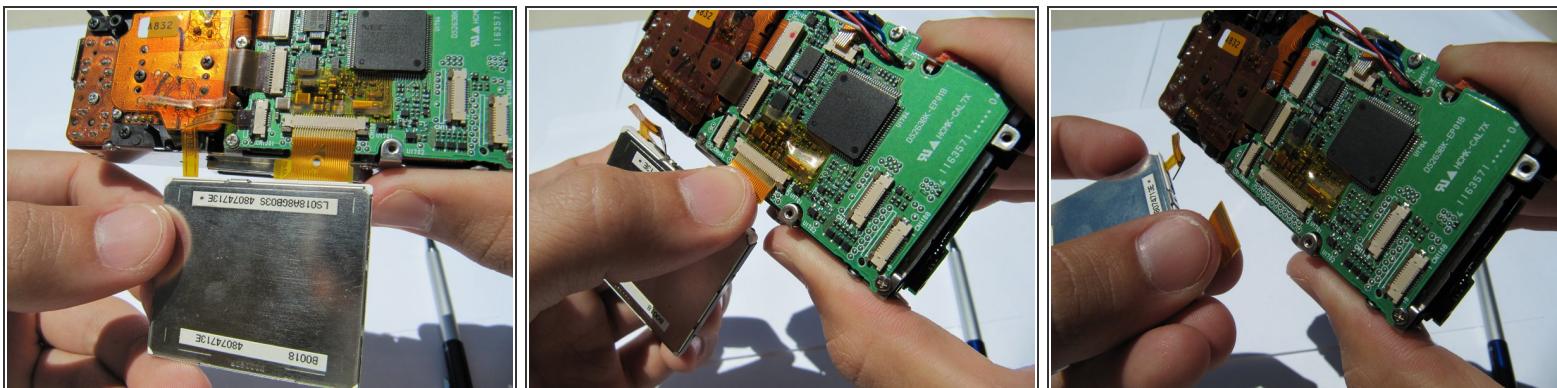

- Flip up the LCD screen to reveal the two orange ribbon cables.
- Disconnect the two ribbon cables from their sockets on the motherboard.

To reassemble your device, follow these instructions in reverse order.