




Kodak EasyShare LS743 Top and menu button replacement

Replace top button.

Written By: Michael

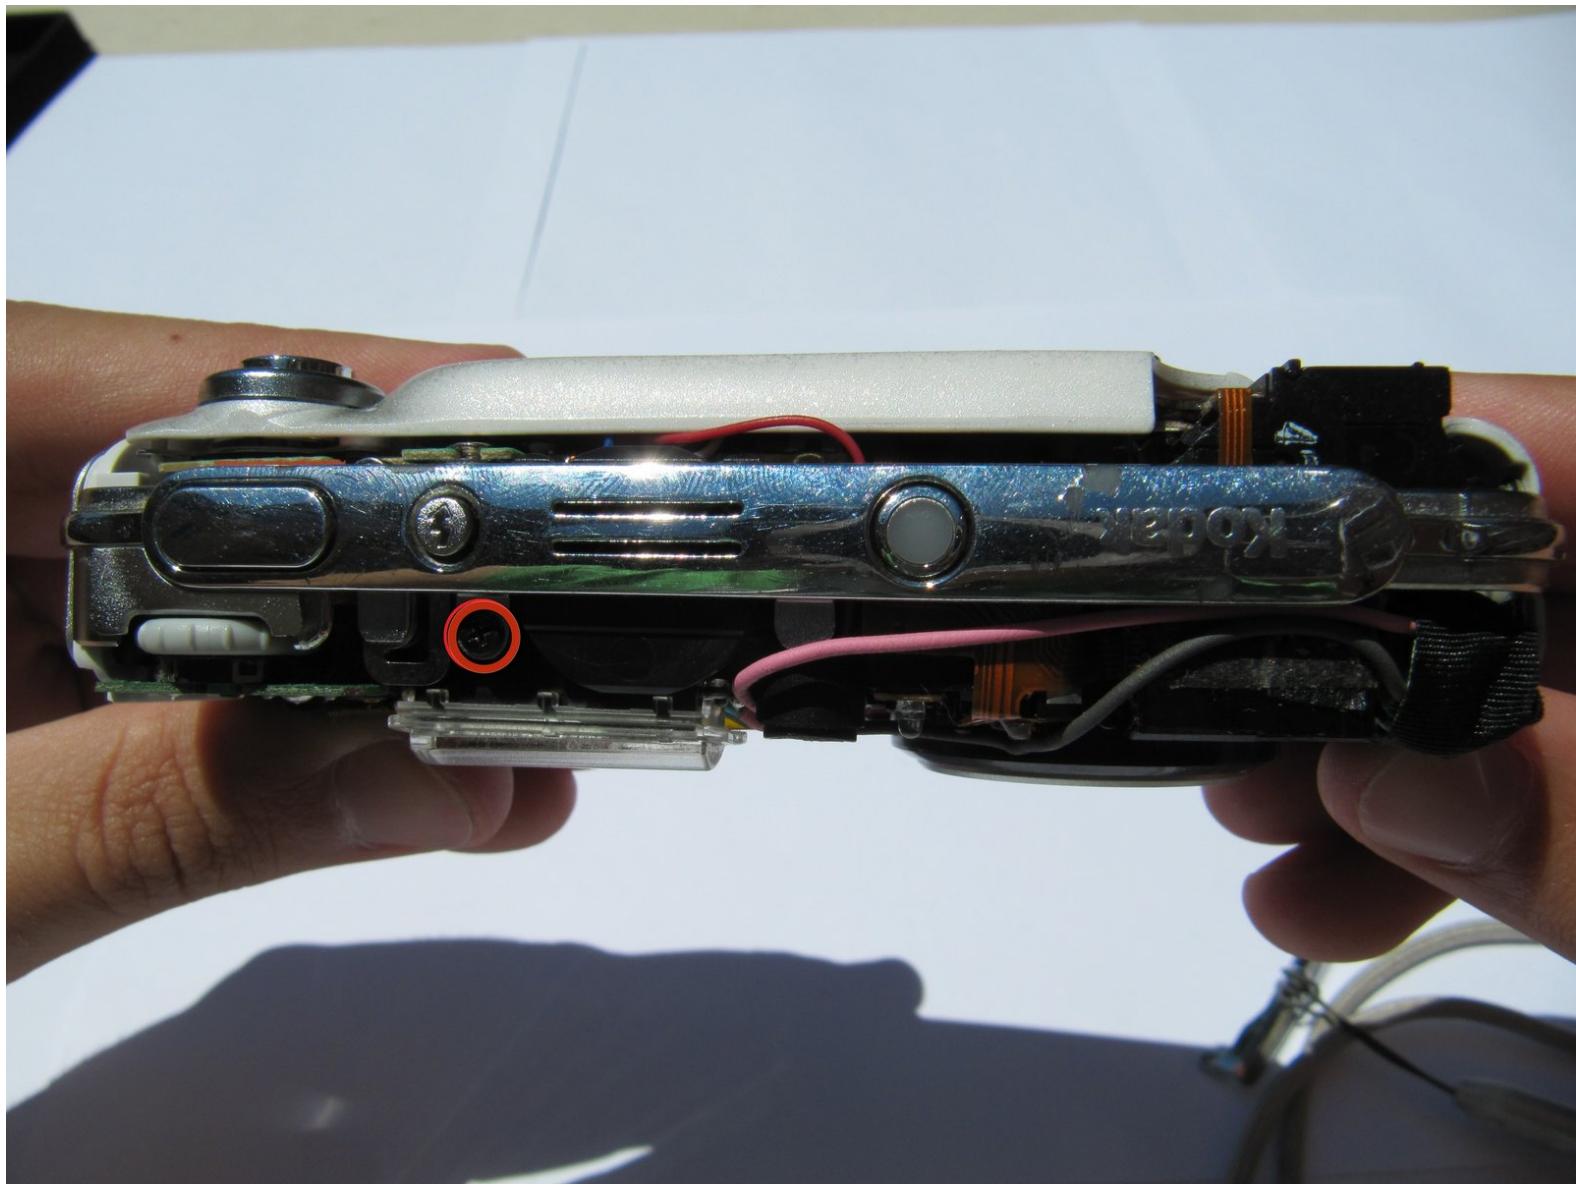

INTRODUCTION

Replace unusable or damaged button.

TOOLS:


- [Phillips #00 Screwdriver](#) (1)

Step 1 — Battery



- Open the battery cover.

Step 2

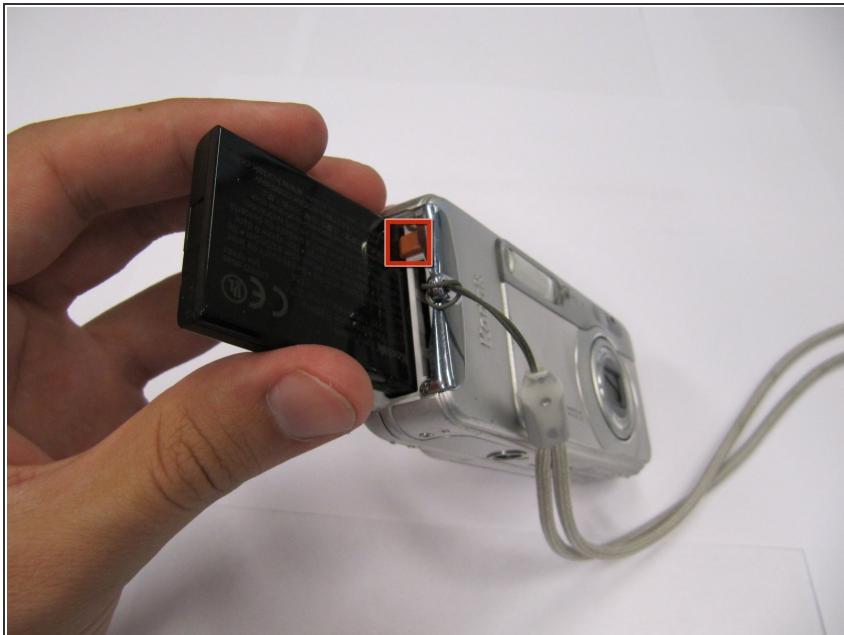


- Slide the orange latch sideways to eject the battery.
- Remove the battery.

Step 3 — Kodak EasyShare LS743 Camera Case Disassembly




- Remove 7 screws.
 - 1 (6.25 mm) screw located on the top right corner, next to the view screen.
 - 4 (4.45mm) screws on the bottom of the camera.
 - 2 (2.95mm) screws on the left side of the camera.

Step 4

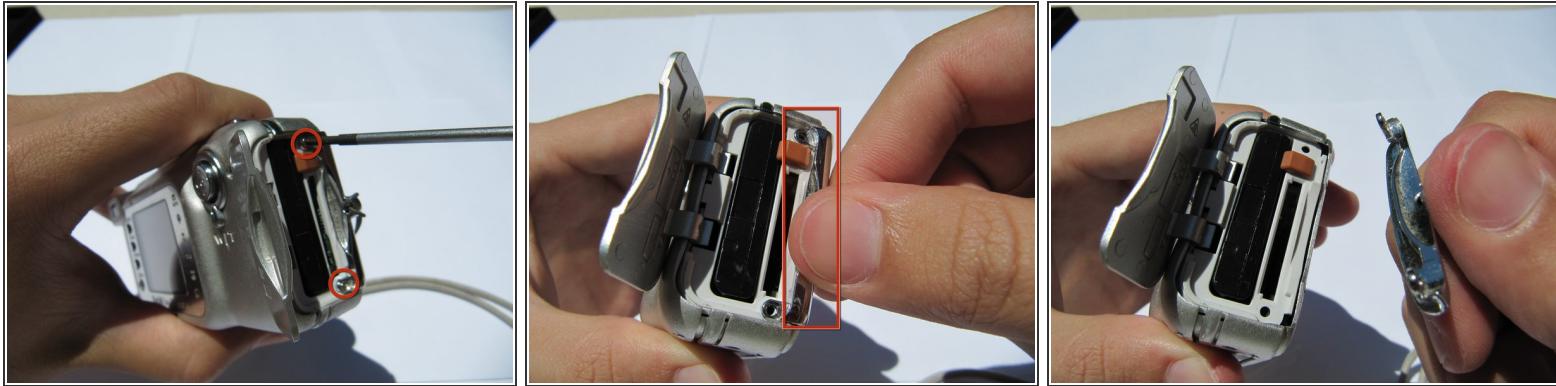


- There will be 2 (5.39mm) screws. Remove the screws in order to remove the lanyard.

Step 5

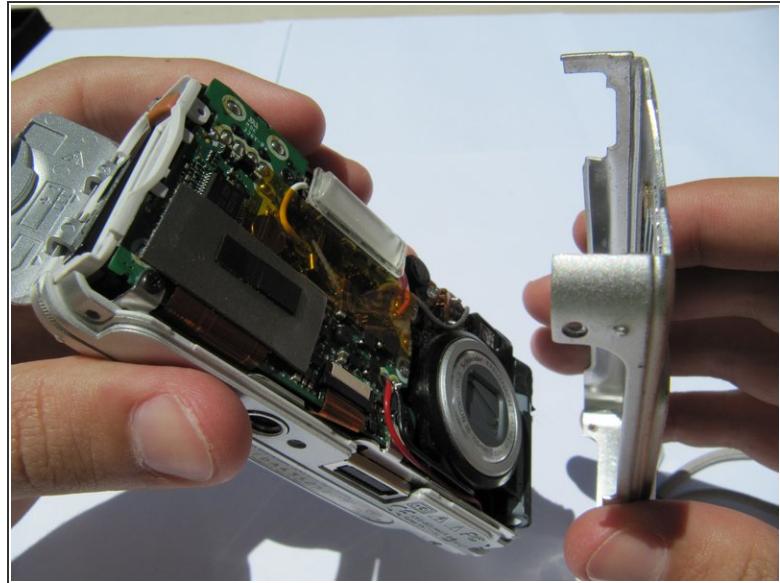

- Remove the rear camera casing.
- Remove the front casing.

Step 6 — Top and menu buttons

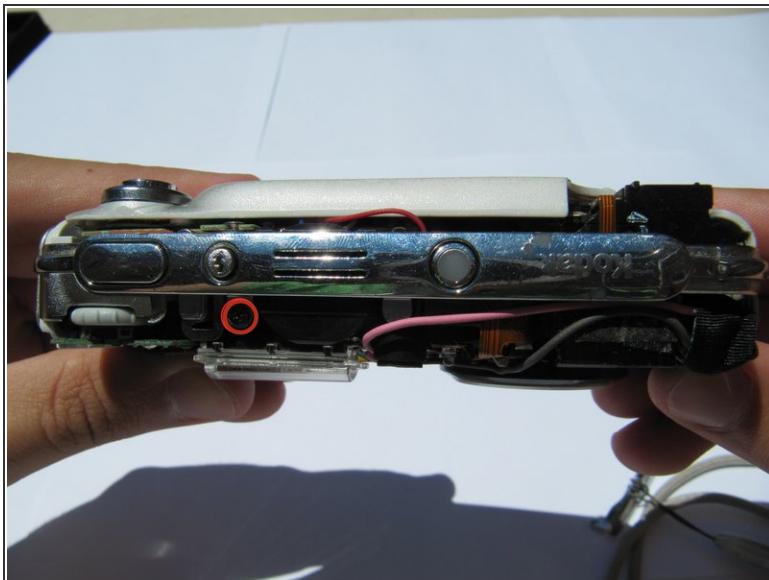

- Remove the top panel screw (1x 4.37mm).

Step 7



- Remove the top panel.

Step 8




- Remove the back panel screws (1x 3.33mm, and 1x 3.40mm).

Step 9




- Separate the inner casing from the tripod mount.

Step 10

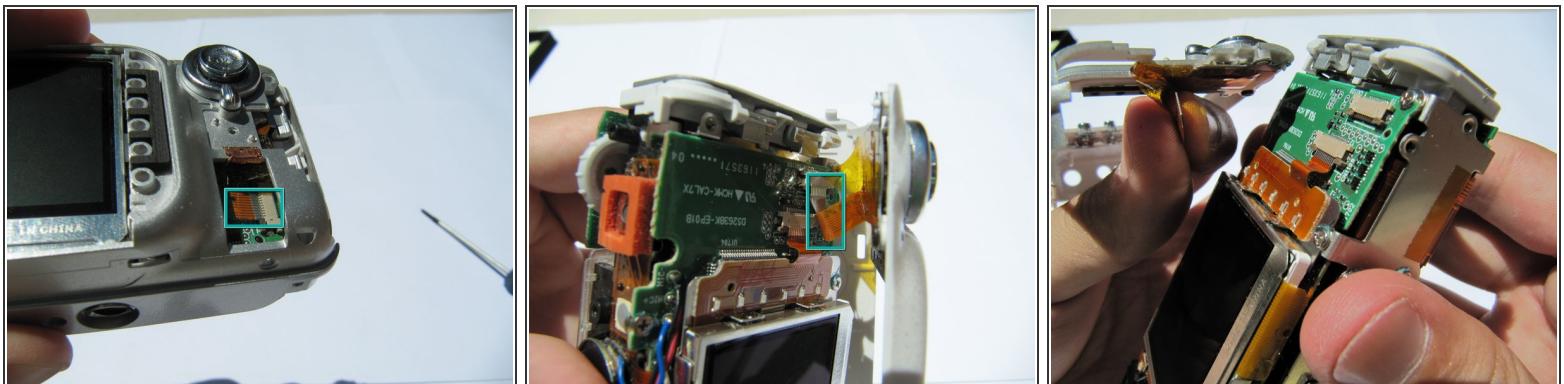


- Gently pull the orange tab out of the circuit board.

Step 11

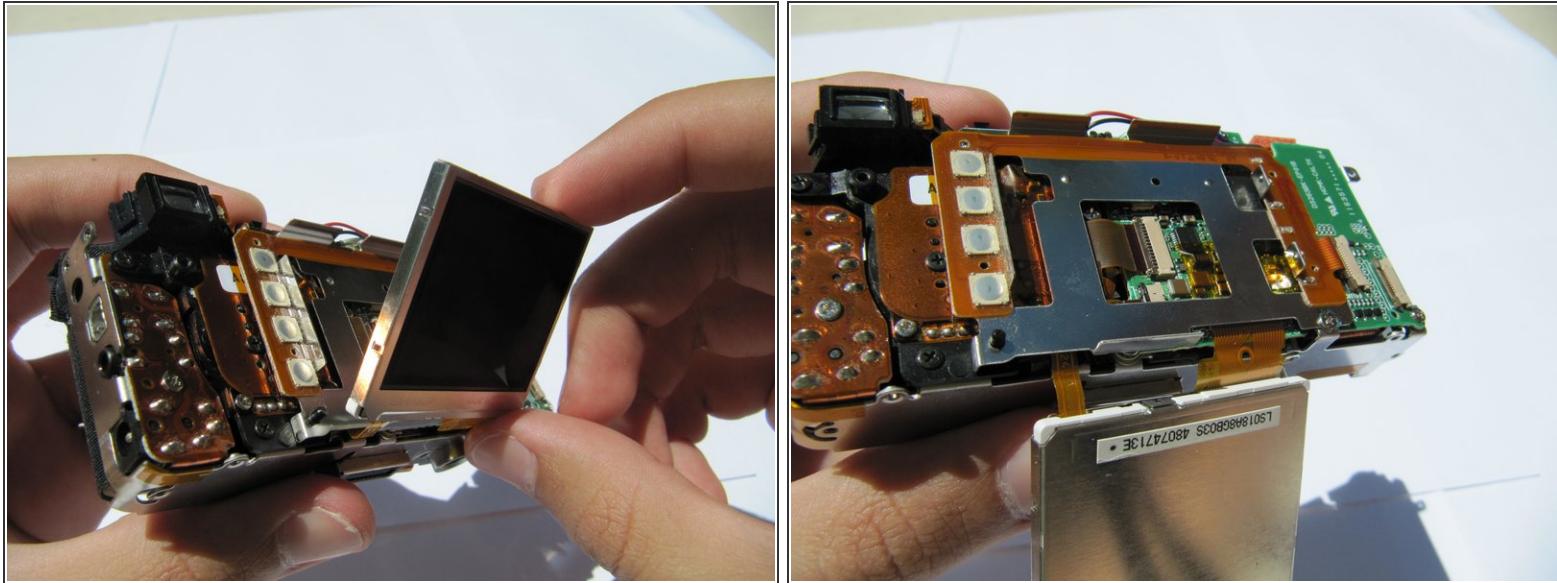


⚠ Carefully flip the LCD panel to expose the central circuit board.

Step 12

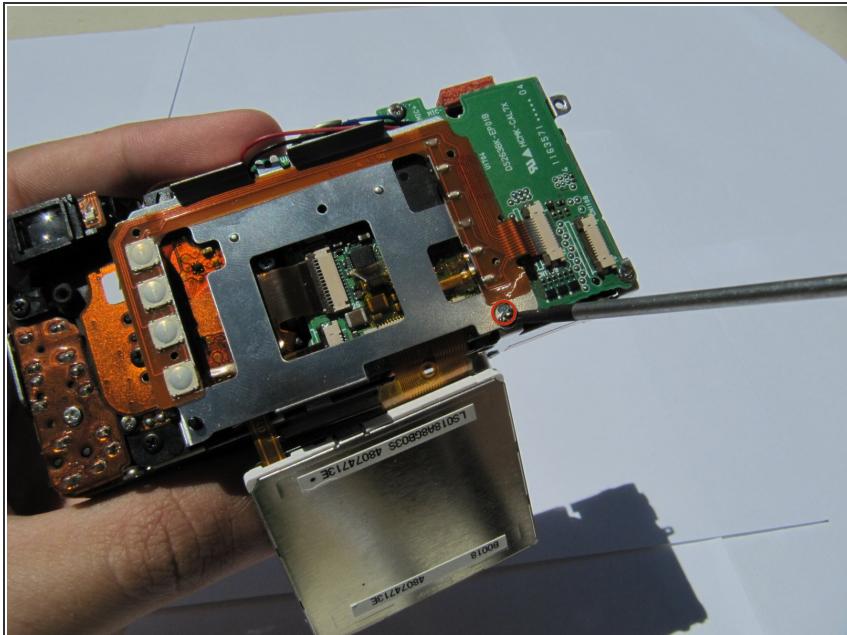

- Remove the (1x 3.33mm) screw from the menu button panel .

Step 13

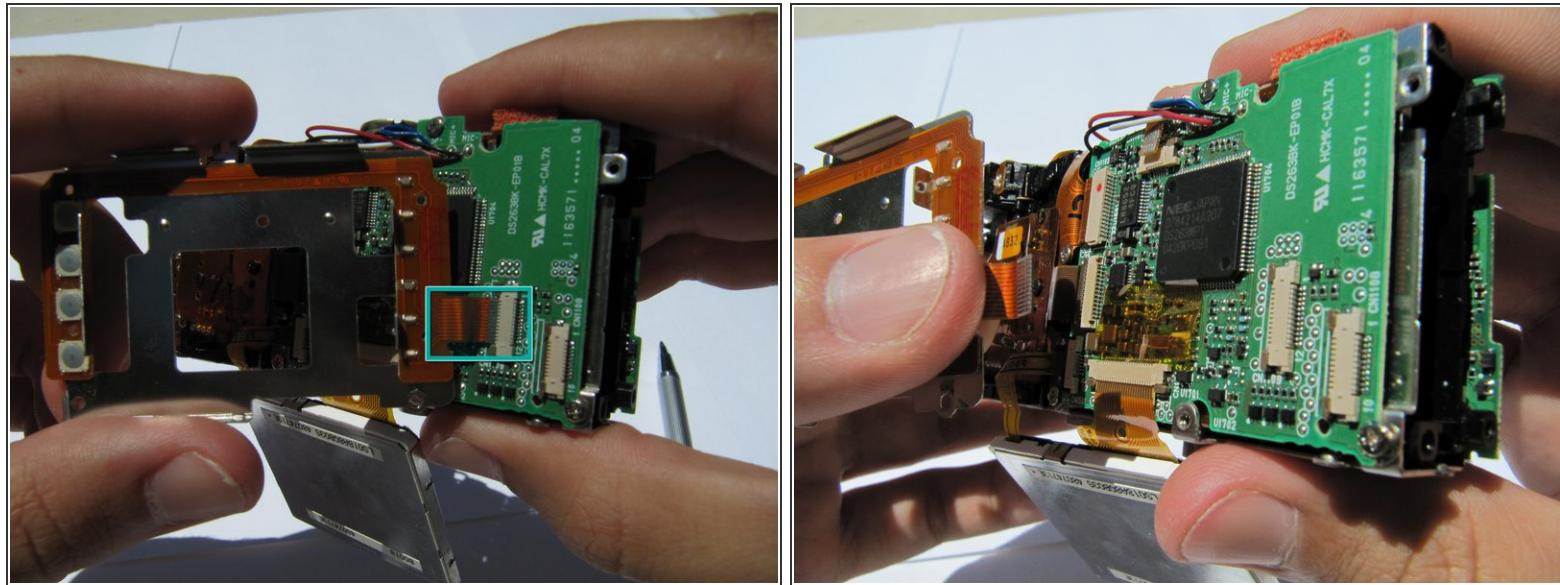

- Pull the second orange tab from the circuit board and remove the buttons.

To reassemble your device, follow these instructions in reverse order.