


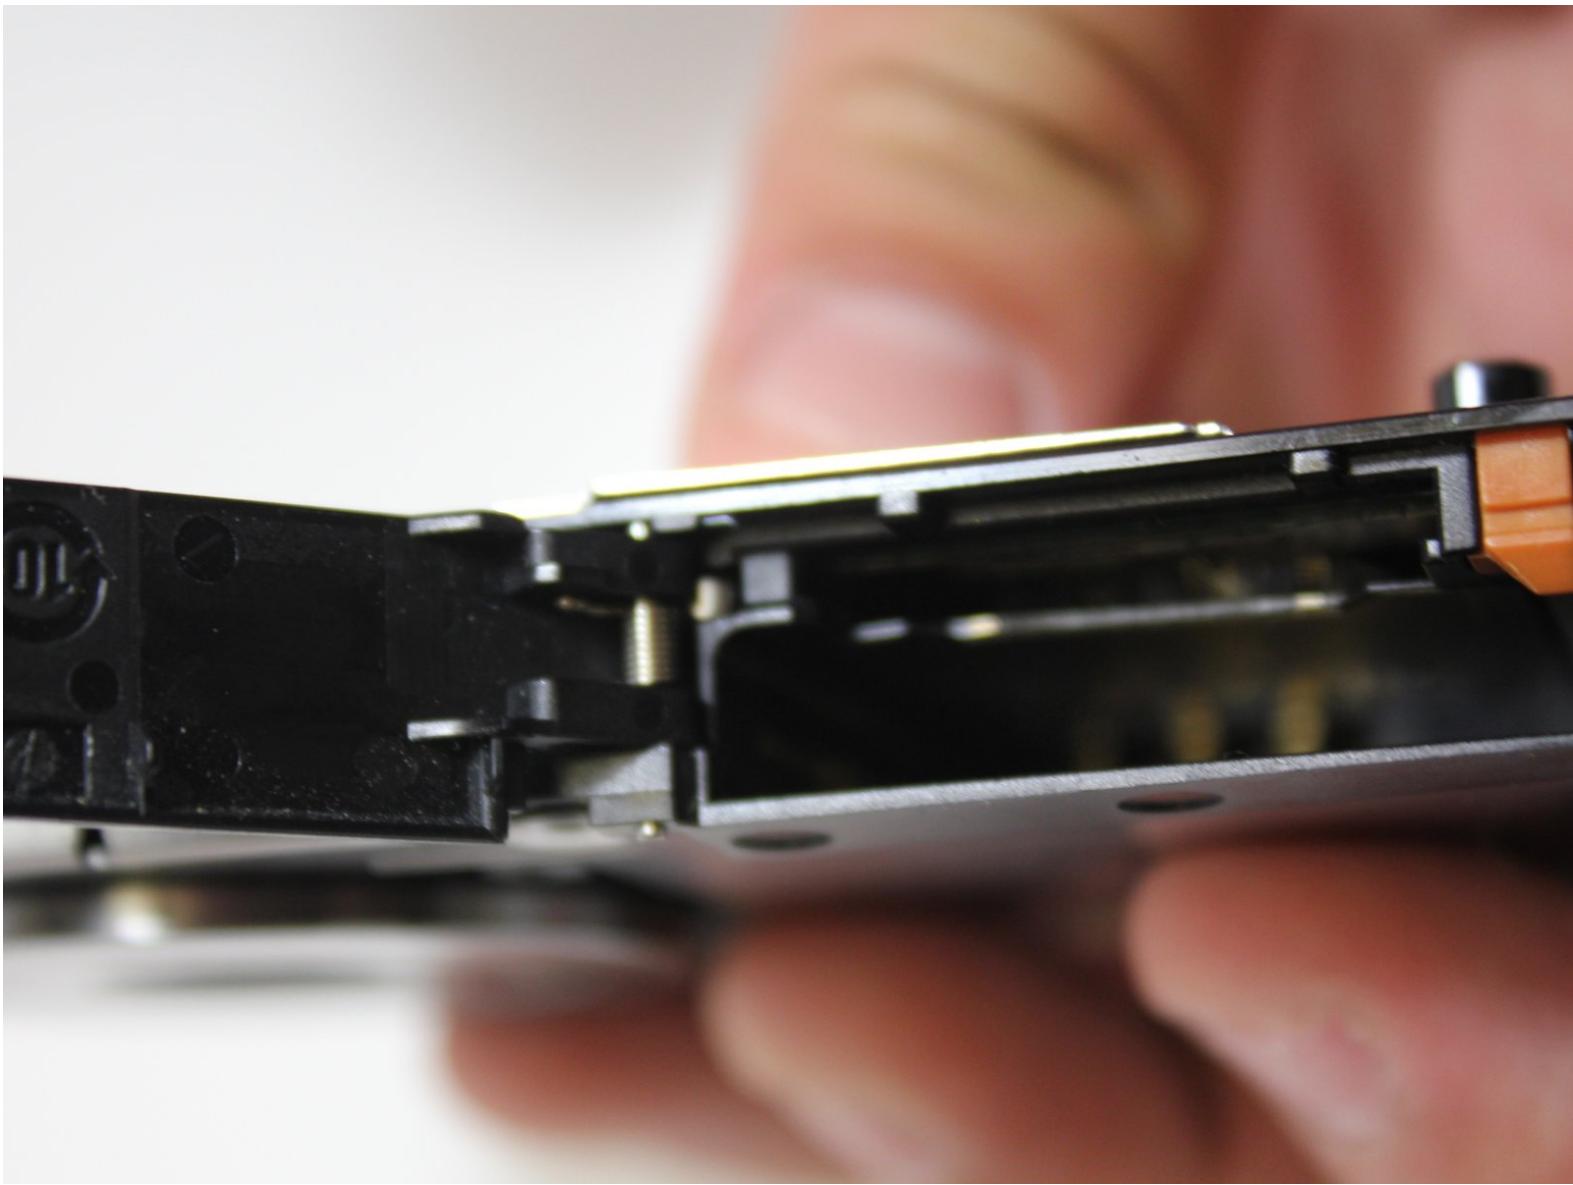

Kodak EasyShare M2008 Battery Door Replacement

This guide will show you how to properly remove the battery door from the device.

Written By: Kyanna



 **TOOLS:**


- [Tweezers \(1\)](#)

Step 1 — Battery



- Place thumb firmly on battery cover.
- Slide thumb right, the cover should follow and pop up.

Step 2

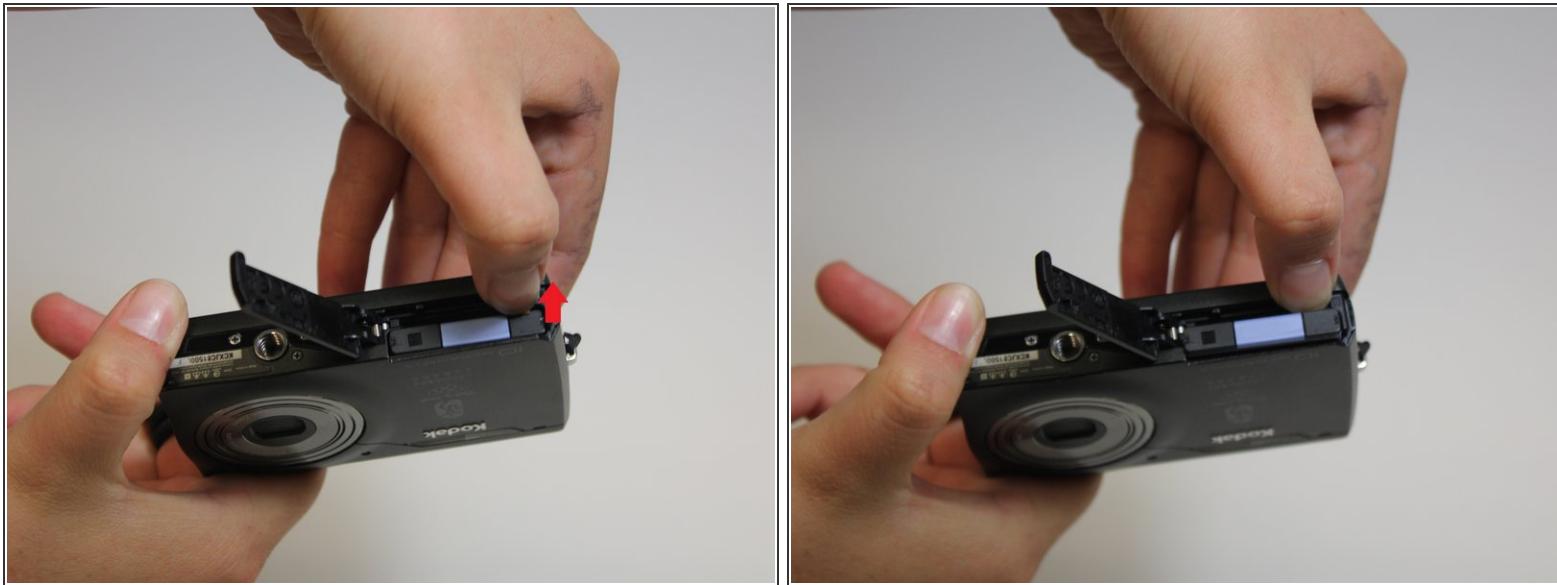

- Place thumb on orange tab and pull back towards screen.
- The battery should pop up.
- Gently lift battery out.


Step 3 — Device Casing



- Remove screws from along outer edge of casing.
- There are 6 screws in total.

ⓘ Righty tighty, lefty loosey!

Step 4

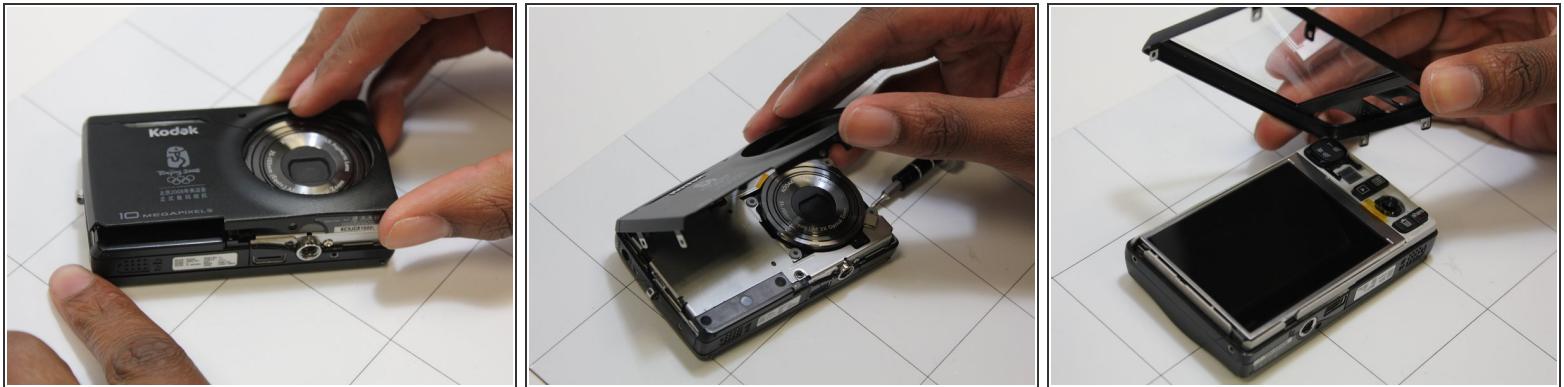




- Gently lift off front and back casing.

Step 5




- Remove screws along side.
- Gently peel off side casing.

Step 6 — Battery Door

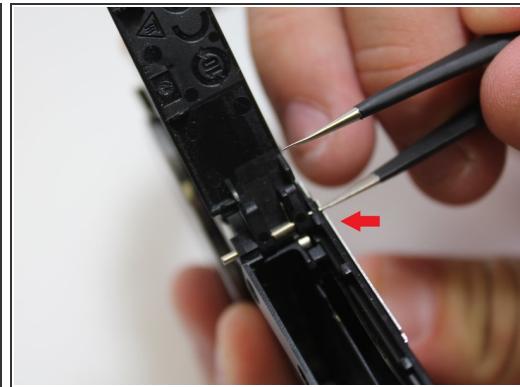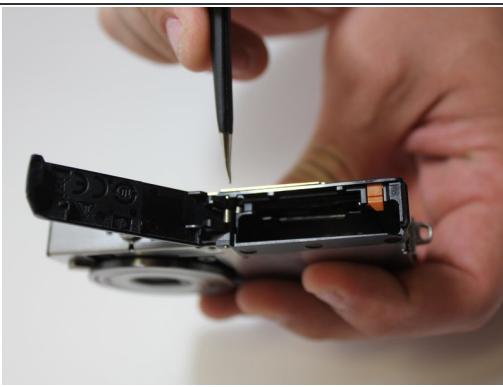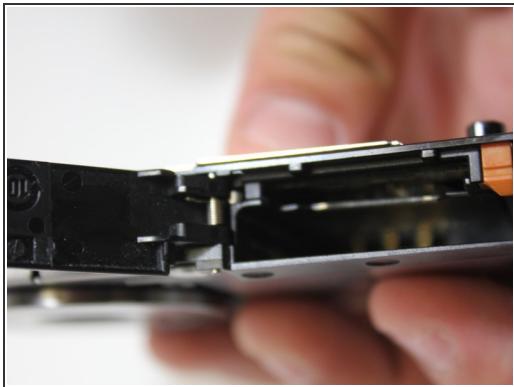

- Open the battery door and identify the retaining pin.
- Push retaining pin out with small tweezers.

Step 7

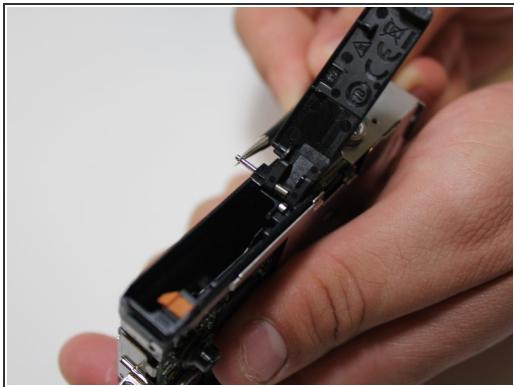

- Once pin is out halfway, close door to ensure no loose parts get lost.
- Continue to pull out the remaining length of the pin.

Step 8



- Gently lift off door cover.

To reassemble your device, follow these instructions in reverse order.