



Kodak EasyShare M2008 LCD Screen Replacement

How to safely and properly remove the LCD Screen from the device.

Written By: Brian



 **TOOLS:**


- [Phillips #0 Screwdriver \(1\)](#)
- [iFixit Opening Tools \(1\)](#)

Step 1 — Battery



- Place thumb firmly on battery cover.
- Slide thumb right, the cover should follow and pop up.

Step 2

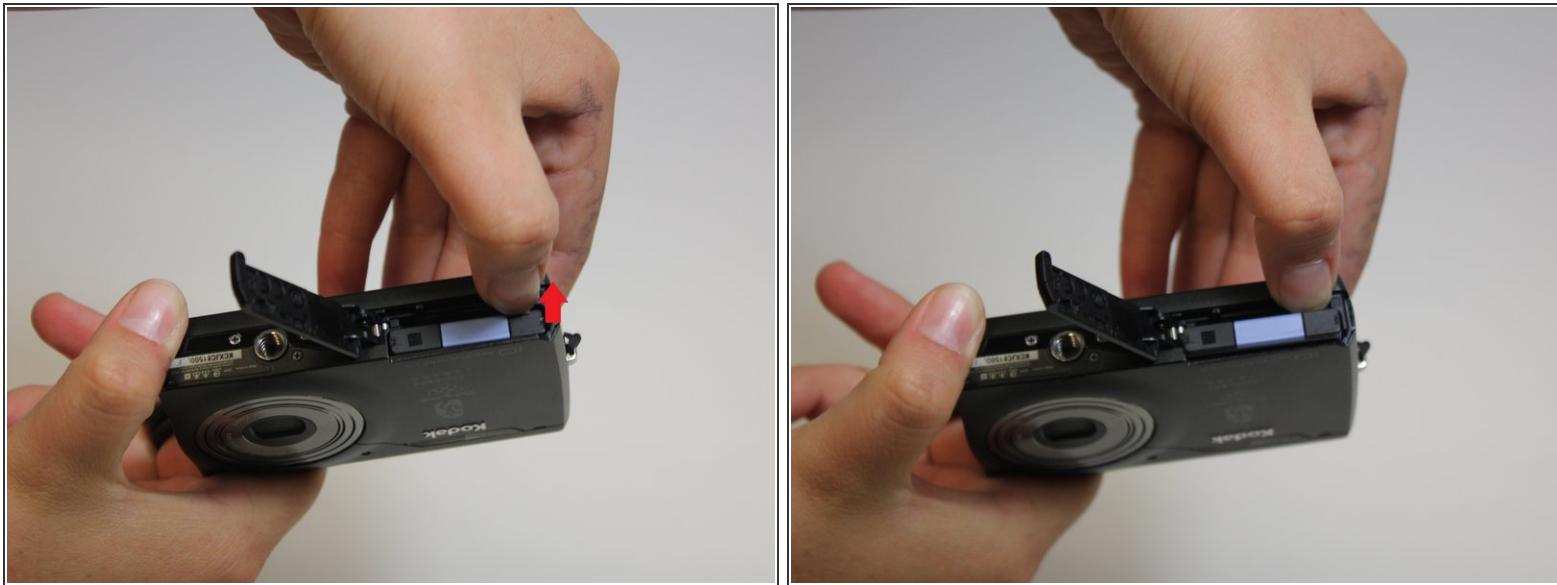

- Place thumb on orange tab and pull back towards screen.
- The battery should pop up.
- Gently lift battery out.


Step 3 — Device Casing



- Remove screws from along outer edge of casing.
- There are 6 screws in total.

ⓘ Righty tighty, lefty loosey!

Step 4

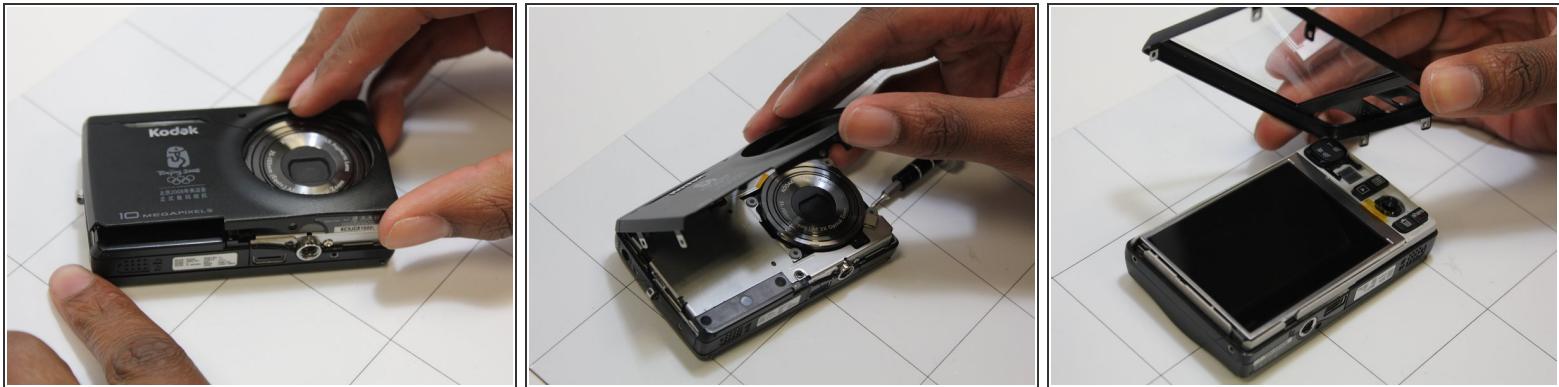

- Gently lift off front and back casing.

Step 5




- Remove screws along side.
- Gently peel off side casing.

Step 6 — LCD Screen



- Gently lift up the LCD screen after removing back casing.
- Find the point where the orange ribbon cable attaches to mother board.

Step 7

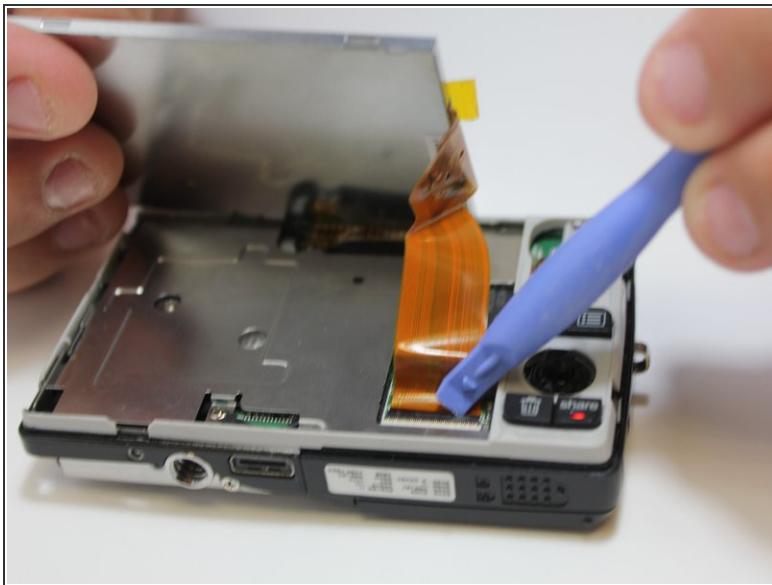

- Use plastic opening tool to gently lift up on the ribbon cable fastener.
- Note: It does not take much pressure to release fastener.

Step 8



- Lift LCD Screen off of device.

To reassemble your device, follow these instructions in reverse order.