



Kodak EasyShare M381 Back Panel Frame Replacement

If the colored back panel of your camera gets damaged, use this guide to replace it.

Written By: Johannes Chandler



INTRODUCTION

The colored panel of this camera can easily become cracked or damaged. This guide will show you how to remove it, so you can easily replace it.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [Tweezers](#) (1)
- [Magnetic Project Mat](#) (1)

Step 1 — Battery



- First, press in and slide forward the battery latch as indicated by the arrow.

Step 2




- Press down on battery until you hear a click and release it. Battery should easily slide out.

Step 3 — Back Panel Frame



- Obtain screwdriver, and remove the 3.85 mm frame screws as highlighted.
- Using a magnetized surface to keep from losing screws may be very helpful.

Step 4

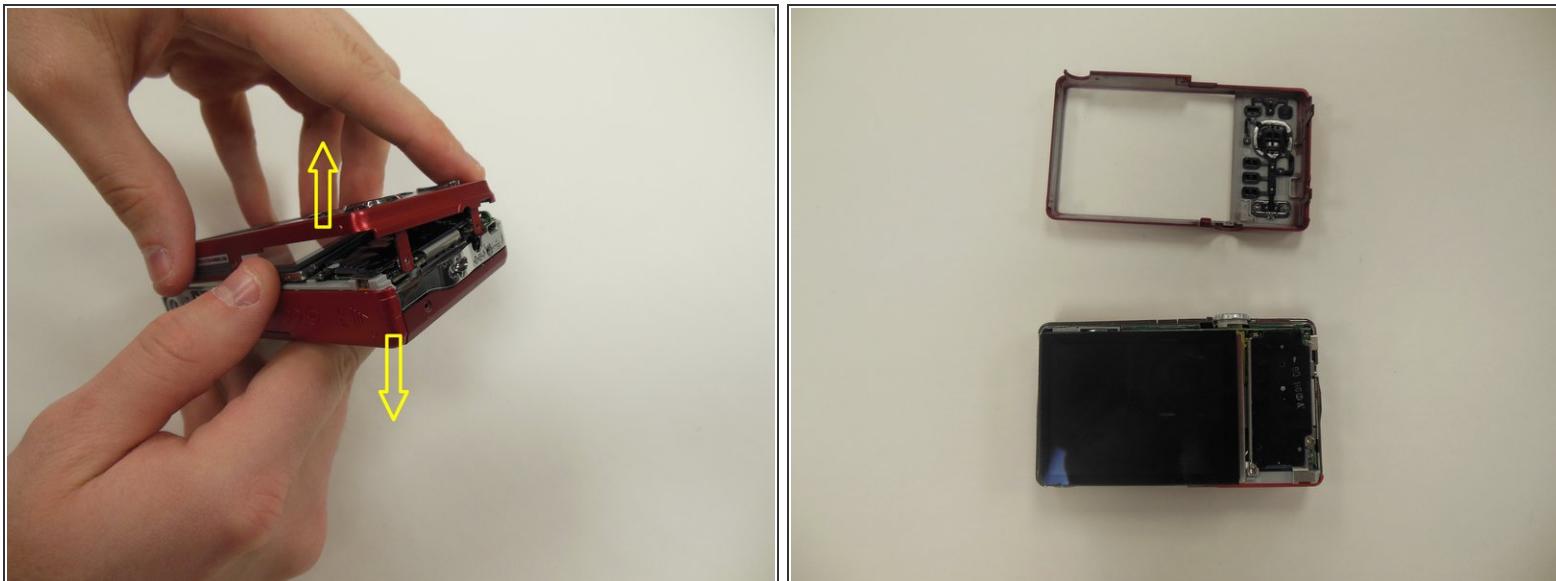

- After screws are removed, using both hands, carefully pull the frame apart from the camera as indicated.

To reassemble your device, follow these instructions in reverse order.