



Kodak EasyShare M381 Battery Replacement

This guide will assist you in properly removing the battery.

Written By: Johannes Chandler



INTRODUCTION

Simply press down on the battery to release it.

Step 1 — Battery



- First, press in and slide forward the battery latch as indicated by the arrow.

Step 2



- Press down on battery until you hear a click and release it. Battery should easily slide out.

To reassemble your device, follow these instructions in reverse order.