


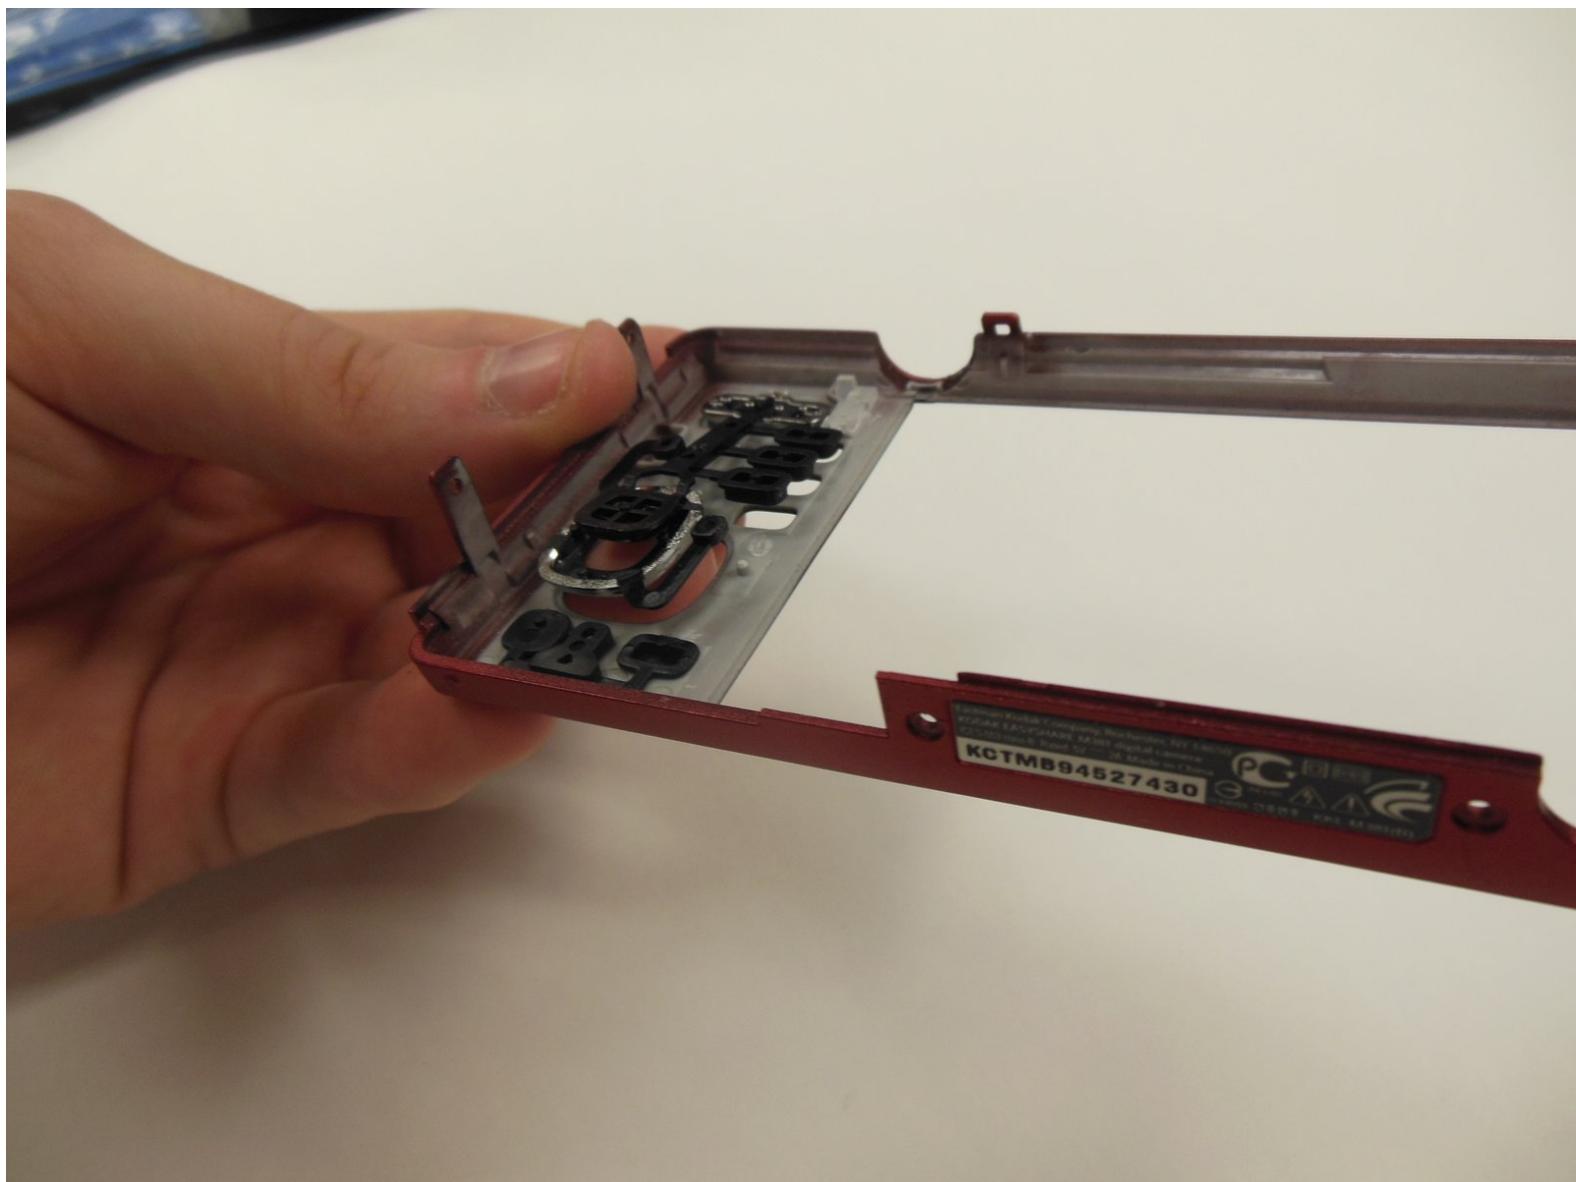

Kodak EasyShare M381 Button Replacement

Use this guide if the buttons to your camera start sticking or lose connection.

Written By: Christina Hamby



INTRODUCTION

Removal and replacement of the buttons can be simple and easy. You can also use this guide for simply cleaning your camera buttons if they have a weak connection.

TOOLS:

- [Magnetic Project Mat \(1\)](#)
- [Tweezers \(1\)](#)
- [Phillips #00 Screwdriver \(1\)](#)
- [Soft Cloth \(1\)](#)

Step 1 — Battery



- First, press in and slide forward the battery latch as indicated by the arrow.

Step 2




- Press down on battery until you hear a click and release it. Battery should easily slide out.

Step 3 — Back Panel Frame




- Obtain screwdriver, and remove the 3.85 mm frame screws as highlighted.
- (i)* Using a magnetized surface to keep from losing screws may be very helpful.

Step 4

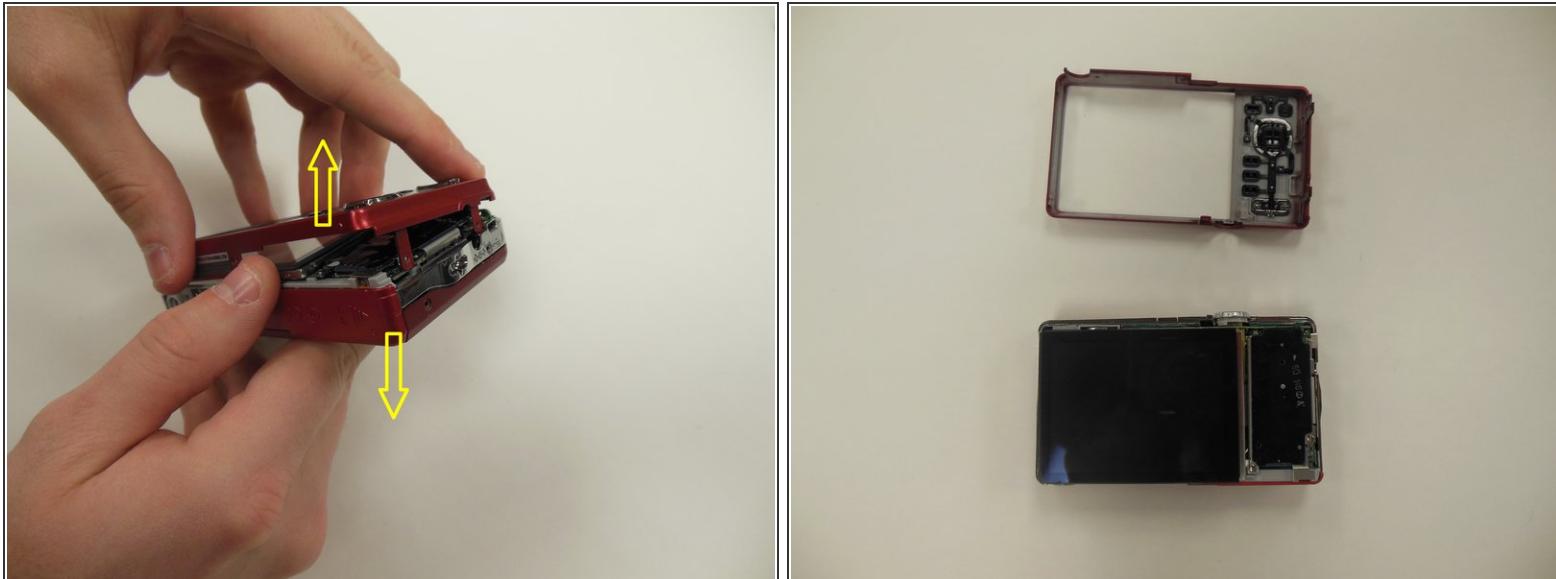


- After screws are removed, using both hands, carefully pull the frame apart from the camera as indicated.

Step 5 — Button

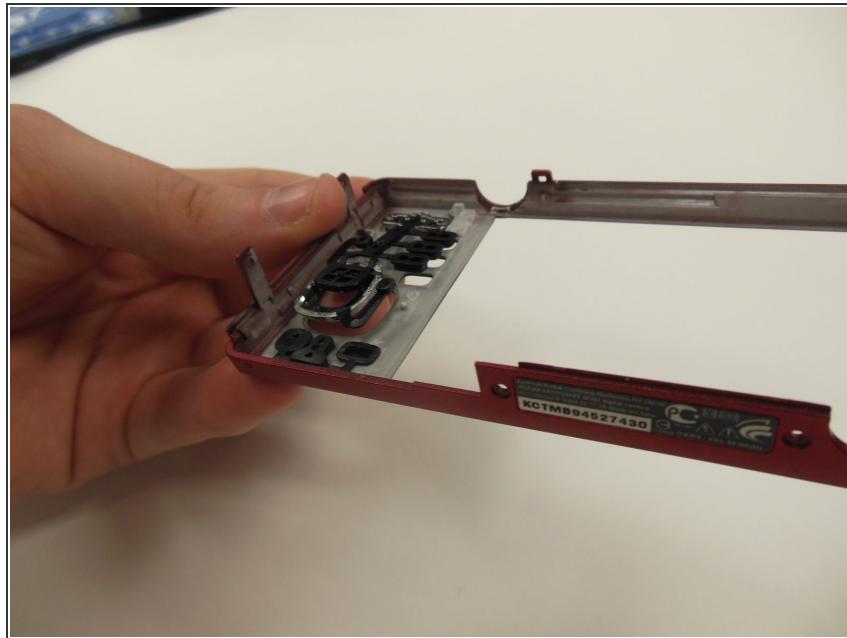

- Carefully pick up frame and push upward on buttons.

Step 6

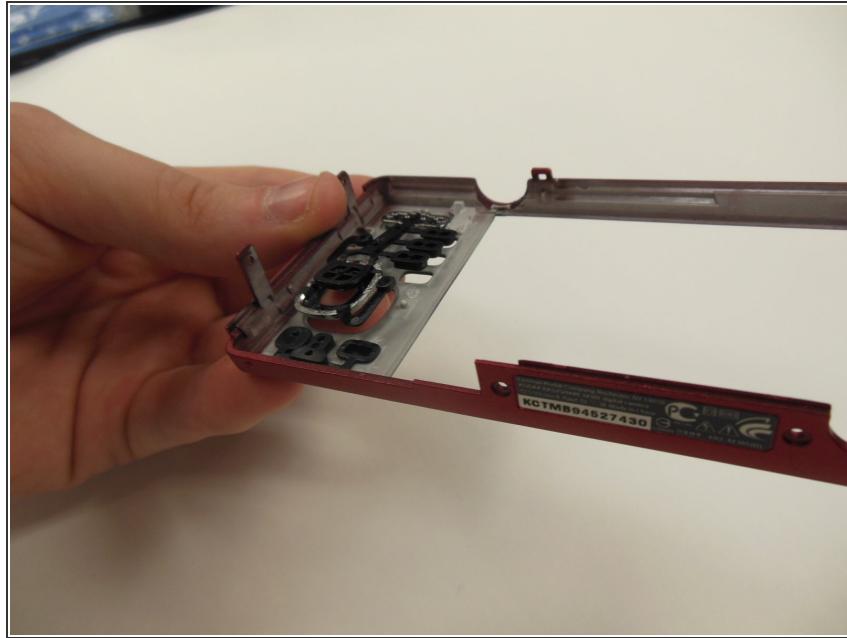

- Clean and replace as needed.

(i) A microfiber cloth, or any other type of electronic cloth may be used to clean them if desire.

To reassemble your device, follow these instructions in reverse order.