



# Kodak EasyShare M381 SD Card Replacement

This guide will assist in the removal of the SD Card.

Written By: Johannes Chandler



## INTRODUCTION


Using this guide, you can remove your SD card from your camera.

## Step 1 — SD Card



- Push down and slide as indicated on the battery latch.

## Step 2

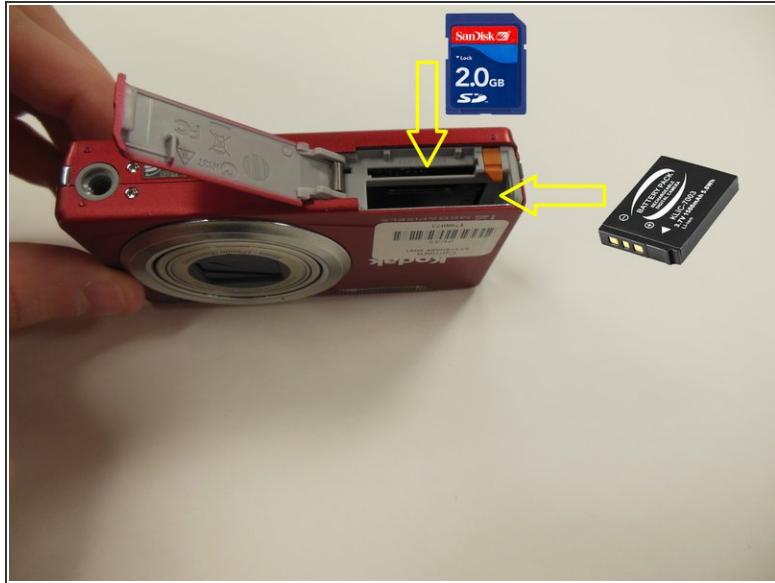

- Push in on the SD Card until it clicks and releases. Remove SD Card.

To reassemble your device, follow these instructions in reverse order.