



# Kodak EasyShare M530 Battery Replacement

This guide will instruct you on how to replace the battery for the camera.

Written By: Elizabeth



## INTRODUCTION

This camera has easy access to the battery. The place in which you would find the battery also houses the memory card. Don't be alarmed, because there is a diagram on the inside that just incase you didn't know which went into which slot it can show you.



## PARTS:

- [KLIC-7006 Replacement Battery](#) (1)

## Step 1 — Battery



- Flip the camera upside down so the battery compartment is towards you. Follow the arrows with your thumb to slide open the hatch to expose the battery and memory card.

## Step 2



- This is what it should look like once it is opened. Here you can take the old battery out or take the memory card out as well.

## Step 3



- The diagram shows the (-) side should be on your right, while the (+) side should be on your left. Insert the new battery and memory card here.

## Step 4



- Close up the hatch and you're back to taking beautiful pictures!

Close it back up and you're ready to go!