



# Kodak EasyShare Z1015 IS Battery Replacement

This guide provides a step by step guide on removing the battery from the Kodak EasyShare Z1015 IS.

Written By: Jack



This document was generated on 2019-09-22 10:59:23 AM (MST).

## Step 1 — Battery



- Begin by sliding the switch towards the open symbol. Release your finger from the switch and the battery case will pop open.

## Step 2



- Next, press down on the red lever which holds the battery in place.

## Step 3



- Once the battery has popped out of the compartment, simply pull it out of the camera.

To reassemble your device, follow these instructions in reverse order.