



Kodak EasyShare Z740 Battery Replacement

This guide will offer instructions on removing the battery from the Kodak EasyShare Z740.

Written By: Kirsten Price



INTRODUCTION

The batteries are the power source of this camera, and it does not have to be plugged in and charging to work. There can be multiple issues with the batteries and a battery replacement will solve most of the problems.

Step 1 — Battery



- Slide the door on the bottom of the camera in the direction of the open symbol with your finger.
- Release and the door will pop open.

Step 2



- Slide the battery out.

To reassemble your device, follow these instructions in reverse order.