



# Kodak EasyShare Z740 SD/MMC Replacement

This guide shows how to remove the SD/MMC.

Written By: Kirsten Price



## INTRODUCTION

The SD/MMC is the storage device of the camera. If your camera memory is full or the pictures won't save, replacing the card or taking it out may be necessary to save your pictures. To learn how to replace the SD/MMC, follow this guide.

## Step 1 — SD/MMC



- Flip open the door on the right side of the camera, when looking at the LCD screen.
- *(i)* This door has a memory card and A/V OUT symbol on it.

## Step 2



- Gently push SD/MMC to eject.

## Step 3



- Pull SD/MMC out of the camera.

To reassemble your device, follow these instructions in reverse order.