



Kodak Easyshare C183 LCD Replacement

How to replace the LCD on a Kodak Easyshare C183

Written By: oldturkey03



INTRODUCTION

This guide shows how to replace a broken LCD on a C183. It is not a difficult job, however, most cameras open from the back case first, this one opens from the front first.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)
- [Soldering Iron](#) (1)

PARTS:

- [Replacement LCD](#) (1)

Step 1 — LCD



- Remove the two screws from the right hand side
- Remove the two screws from the left hand side
- Remove the three screws from the bottom.

(i) All the screws on this camera are the same size. No need to mark them by position.

Step 2



- Open the battery compartment and start carefully to separate the front and back half of the camera. On this camera the front half will come off first.
- In the top left corner is one screw that will have to be removed. It holds the back cover to the body of the camera.
- Once that screw is removed, the camera separates easy.

Step 3



- Fold the LCD from the top downward. DO NOT try to remove the LCD, it is still attached. Obviously this camera has had water damage.
- Remove the Kapton tape from the top of the camera.
- you will have to de-solder the battery frame on one point.

Step 4



- Remove the tape
- Remove the single screw.
- You can disconnect the ribbon cable, by carefully pulling on the end. I opted to leave it connected to minimize the risk of tearing the fragile cable. It is possible to just move the frame out of the way.

Step 5



- Lift the LCD frame slightly up and fold the black clip gently to the back.
- This will loosen the ribbon cable and lets your remove the LCD.
- Insert the ribbon cable of the new LCD. there will be a solid white stripe on the cable. Insert the cable as shown, close the connector.

To reassemble your device, follow these instructions in reverse order.