




# Kodak Easyshare C813 Battery Door Replacement

Written By: Susan Marano

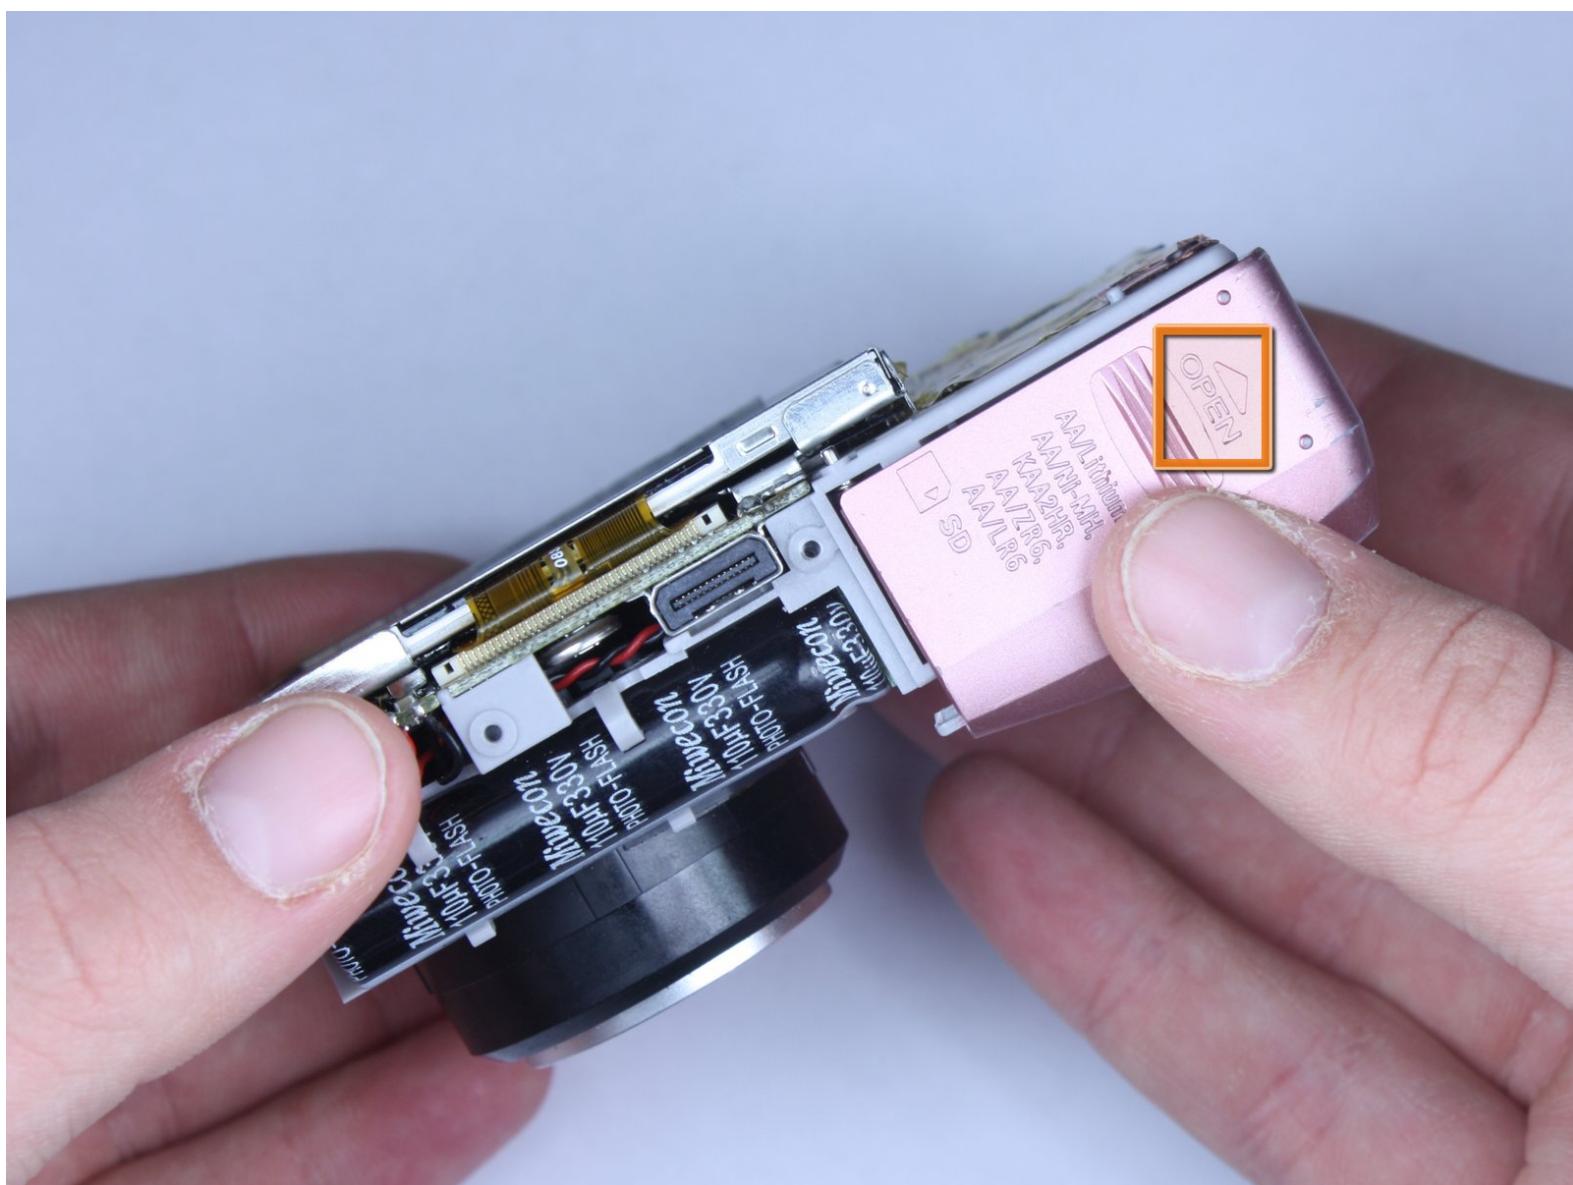

## INTRODUCTION

This guide demonstrates how to replace the door to the battery compartment.

### TOOLS:

- [Anti-Static Wrist Strap](#) (1)
- [Phillips #00 Screwdriver](#) (1)
- [Spudger](#) (1)
- [Tweezers](#) (1)
- [iFixit Opening Tools](#) (1)

## Step 1 — Battery



- Turn off camera by firmly pressing the power button that is located on the top of the camera near the selector dial.

## Step 2



- Press thumb firmly on battery door and slide it in the direction of the arrow.
- Lift thumb allowing the door to swing open.

## Step 3 — Back Cover



- Before removing back cover, it is advisable to use an [anti-static wrist strap](#) to prevent damage to electronics.

## Step 4




- Turn the camera off by firmly pressing the power button located on top of the camera.

## Step 5



- Locate the 7 screws holding the back cover on.
  - Three screws are located on the bottom of the camera.
  - Two screws are located on the side shown in the photograph.
  - Two final screws are located on the opposite side shown in the photograph.

## Step 6

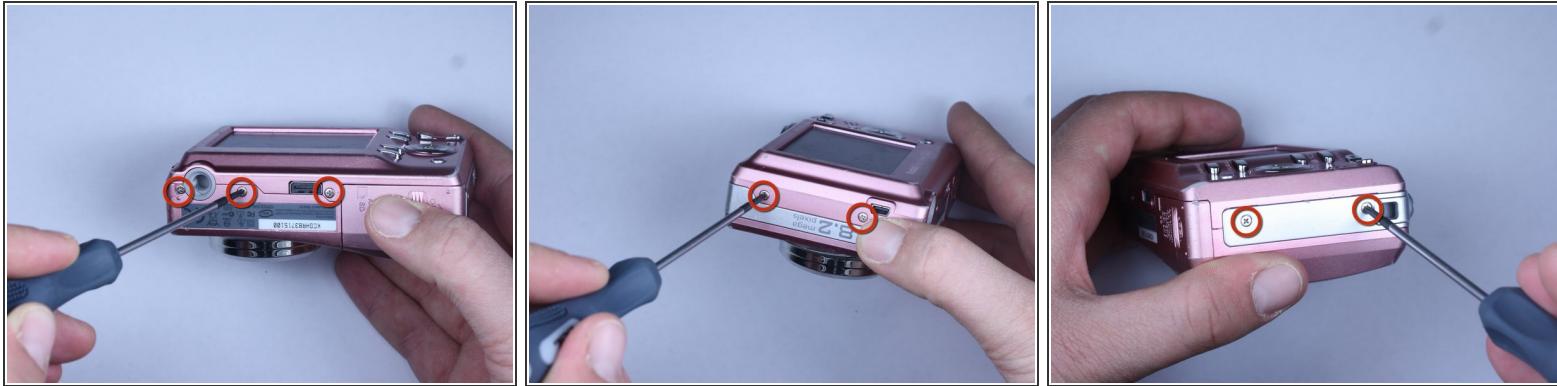

- Remove all 7 screws:
  - Hold the camera firmly with one hand so that you can still see a screw.
  - Place the Philips 00 ([Found here](#)) screwdriver into the screw.
  - Turn the screwdriver to the left until it is free.
  - Repeat for the remaining screws.

## Step 7




- Use [plastic opening tools](#) to slightly open the side of the case.
- Insert a plastic opening tool and apply pressure to the internal three tabs at the top.
  - The first two are near the words "3X Optical Zoom".
  - The third is near the shutter button.

## Step 8




- Gently pull apart the back cover from the rest of the camera.
- Make sure there are no more screws or tabs keeping the cover on.
- Use the plastic opening tool to separate any sides still closely connected.

## Step 9 — Front Cover

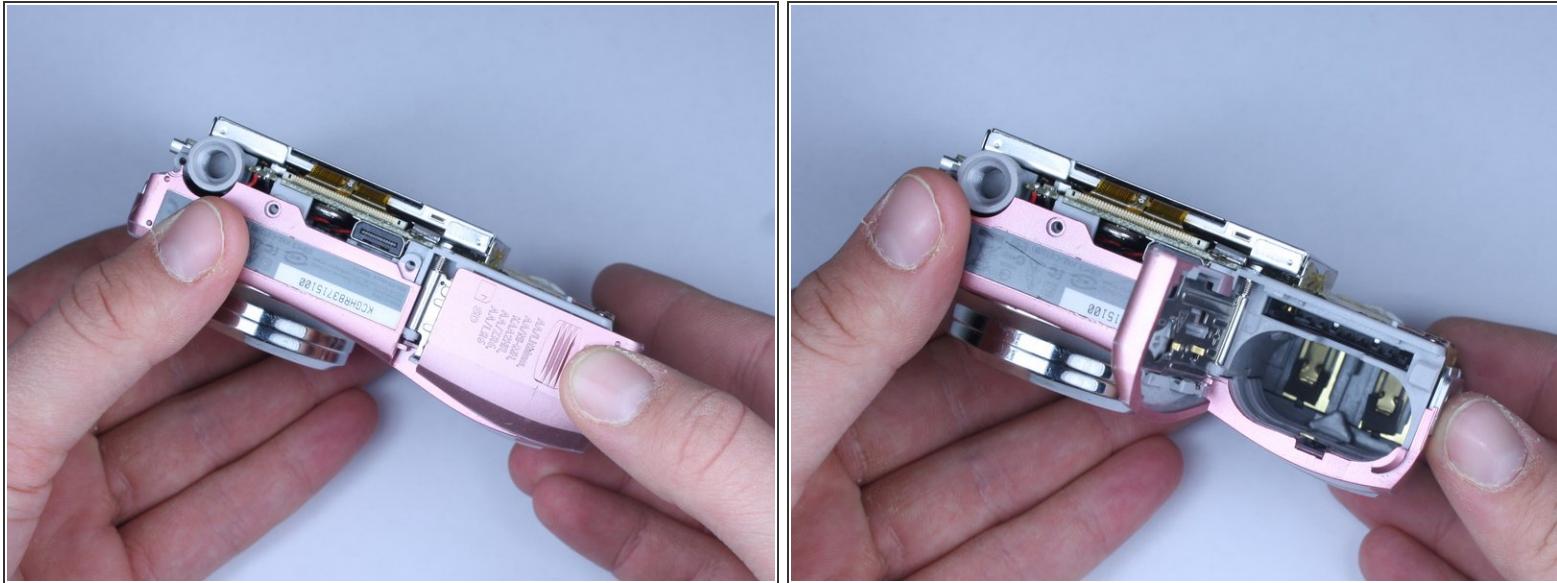

- Open the battery door.
- Press thumb firmly on battery door and slide it in the direction of the arrow.
- Lift thumb allowing the door to swing open.

## Step 10

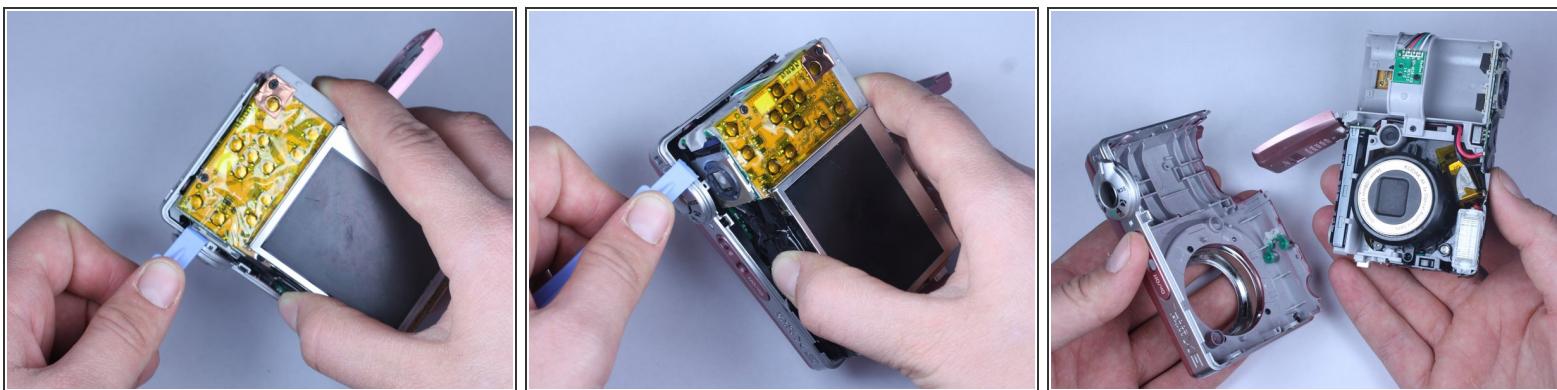

- Use the plastic opening tool to lift the casing around the shutter button.
- Gently remove the front cover from the device.


## Step 11



**⚠** Do not touch the terminals shown in the photo. These link to the capacitor which could shock you if not discharged.


- To discharge the capacitor follow this [guide](#).

## Step 12 — Battery Door

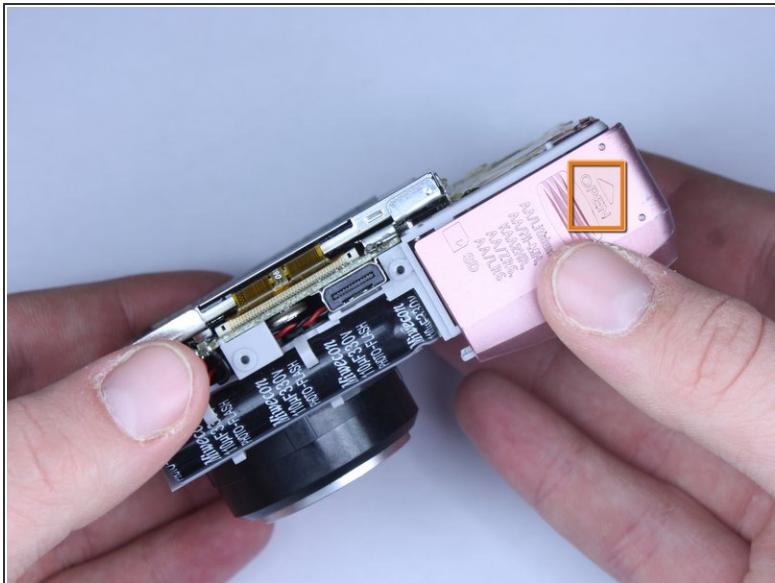


- Open the battery door by pulling in direction of arrow

## Step 13

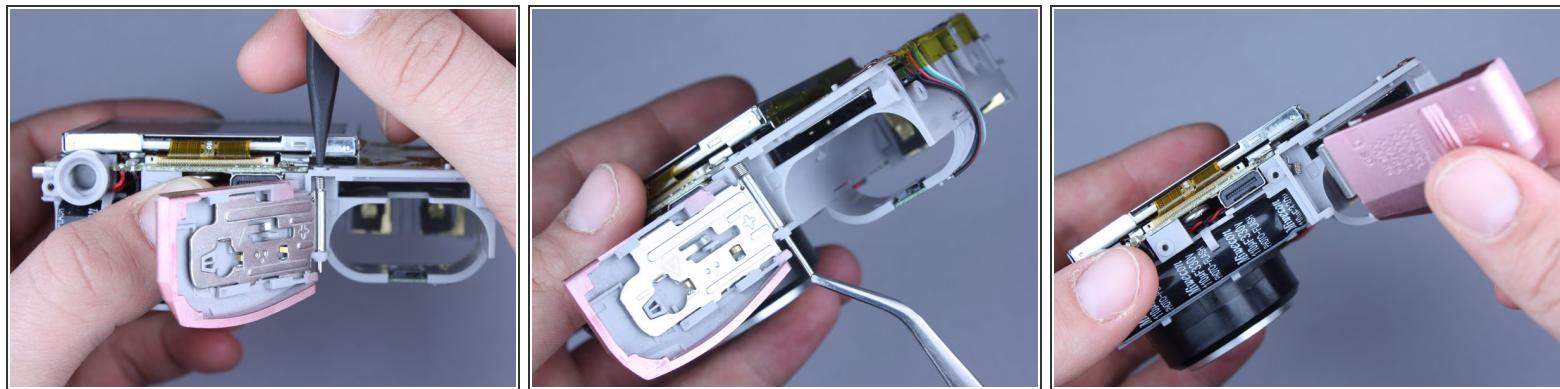

- Use grey wedge([Found here](#)) to push metal pin
- Use tweezers([Found here](#))to pull out metal pin

## Step 14

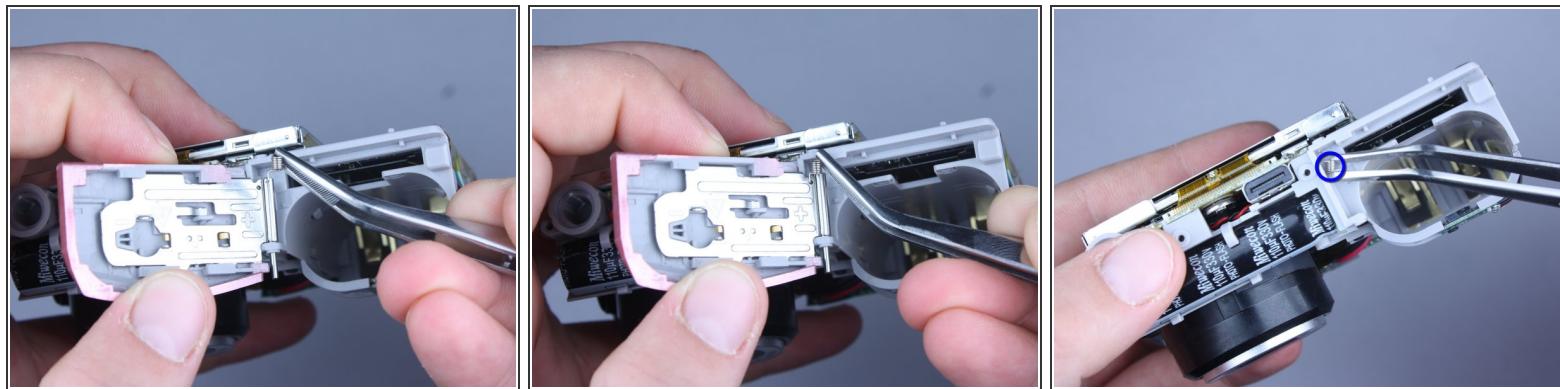

 The spring is small and easy to lose

- Carefully remove battery door and spring

## Step 15



- Make sure the spring is in correct orientation when putting back
- The spring should hook onto a small hole in the door

To reassemble your device, follow these instructions in reverse order.