



Kodak Easyshare C813 Battery Replacement

Written By: Susan Marano



INTRODUCTION

This guide demonstrates how to install the camera batteries.



PARTS:

- AA Batteries (2)

Step 1 — Battery



- Turn off camera by firmly pressing the power button that is located on the top of the camera near the selector dial.

Step 2



- Press thumb firmly on battery door and slide it in the direction of the arrow.
- Lift thumb allowing the door to swing open.