



Kodak Easyshare C813 Shutter Button Replacement

Written By: Susan Marano



INTRODUCTION

This guide demonstrates how to clean or replace the shutter button.

TOOLS:

- [Anti-Static Wrist Strap \(1\)](#)
- [Phillips #00 Screwdriver \(1\)](#)
- [iFixit Opening Tools \(1\)](#)

Step 1 — Battery



- Turn off camera by firmly pressing the power button that is located on the top of the camera near the selector dial.

Step 2



- Press thumb firmly on battery door and slide it in the direction of the arrow.
- Lift thumb allowing the door to swing open.

Step 3 — Back Cover



- Before removing back cover, it is advisable to use an [anti-static wrist strap](#) to prevent damage to electronics.

Step 4




- Turn the camera off by firmly pressing the power button located on top of the camera.

Step 5



- Locate the 7 screws holding the back cover on.
 - Three screws are located on the bottom of the camera.
 - Two screws are located on the side shown in the photograph.
 - Two final screws are located on the opposite side shown in the photograph.

Step 6

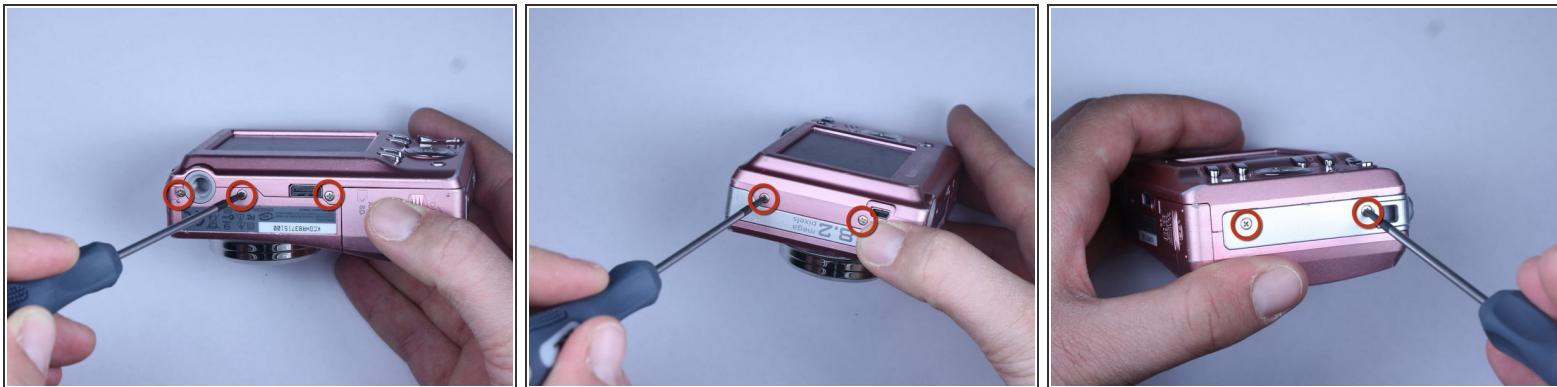

- Remove all 7 screws:
 - Hold the camera firmly with one hand so that you can still see a screw.
 - Place the Philips 00 ([Found here](#)) screwdriver into the screw.
 - Turn the screwdriver to the left until it is free.
 - Repeat for the remaining screws.

Step 7




- Use [plastic opening tools](#) to slightly open the side of the case.
- Insert a plastic opening tool and apply pressure to the internal three tabs at the top.
 - The first two are near the words "3X Optical Zoom".
 - The third is near the shutter button.

Step 8




- Gently pull apart the back cover from the rest of the camera.
- Make sure there are no more screws or tabs keeping the cover on.
- Use the plastic opening tool to separate any sides still closely connected.

Step 9 — Front Cover

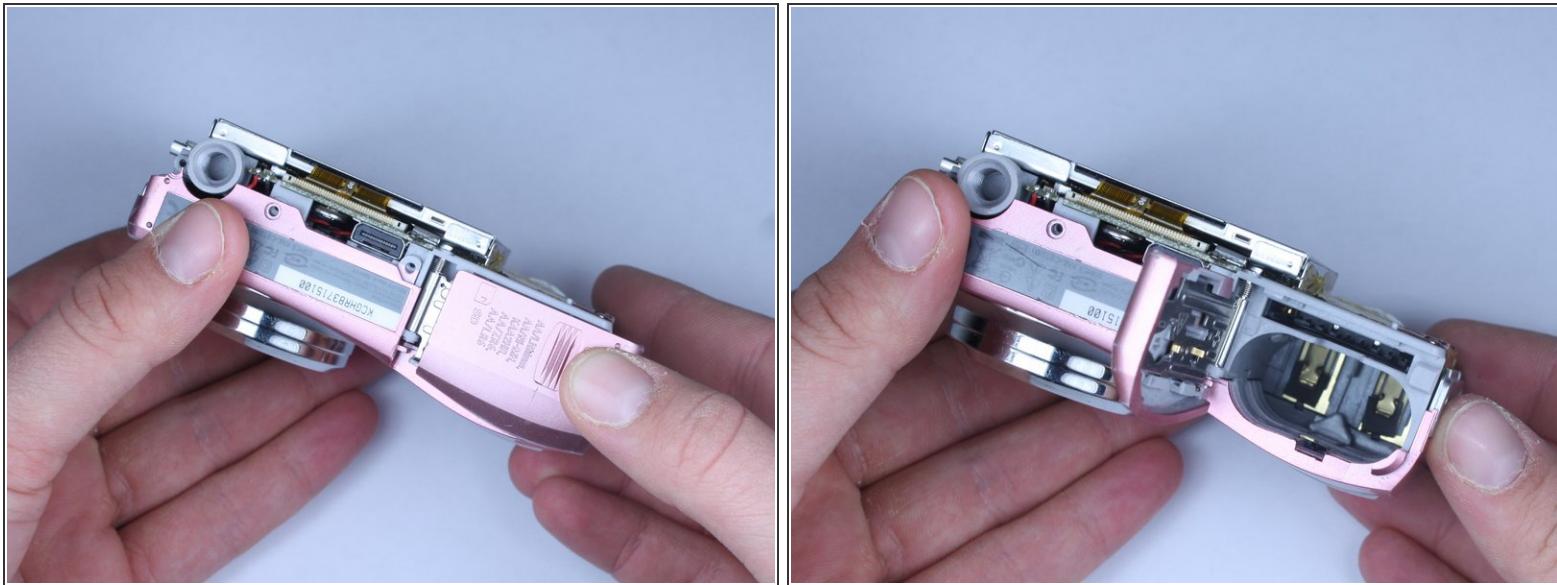

- Open the battery door.
- Press thumb firmly on battery door and slide it in the direction of the arrow.
- Lift thumb allowing the door to swing open.

Step 10

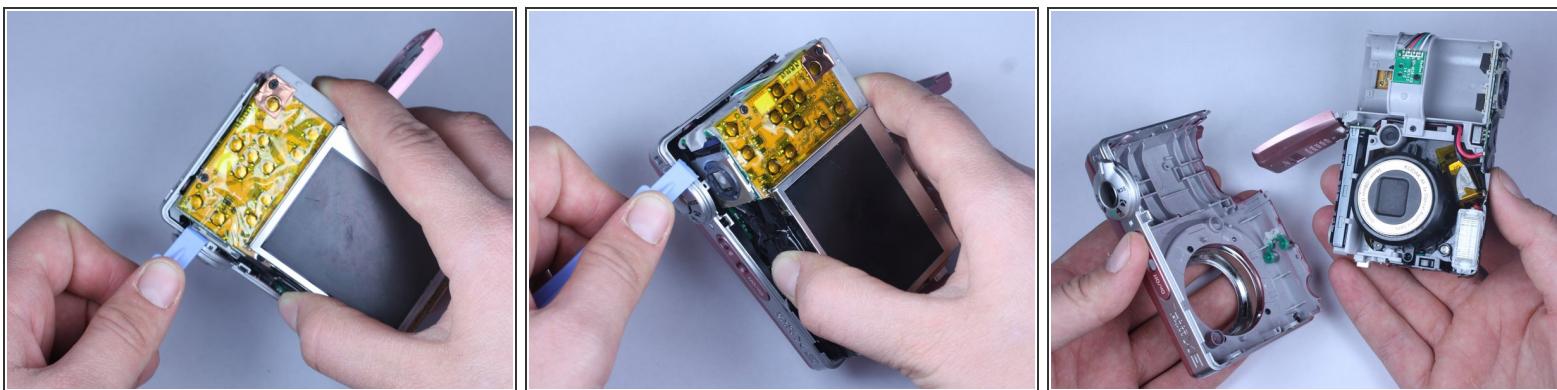

- Use the plastic opening tool to lift the casing around the shutter button.
- Gently remove the front cover from the device.


Step 11



⚠ Do not touch the terminals shown in the photo. These link to the capacitor which could shock you if not discharged.

- To discharge the capacitor follow this [guide](#).


Step 12 — Shutter Button

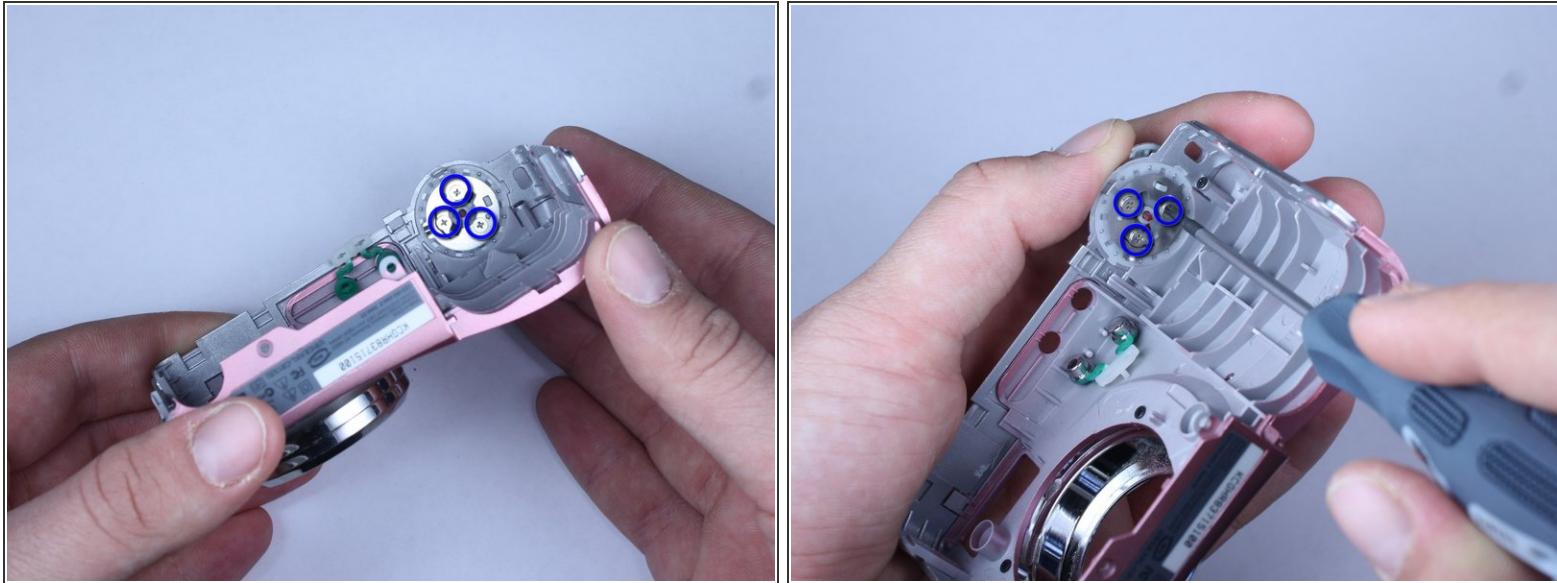

- The shutter button is held on to the front cover by three screws
- Hold the shutter button in place
- Use a Philips 00 screwdriver to remove the screws.

 Careful that the power and flash button do not fall off

Step 13

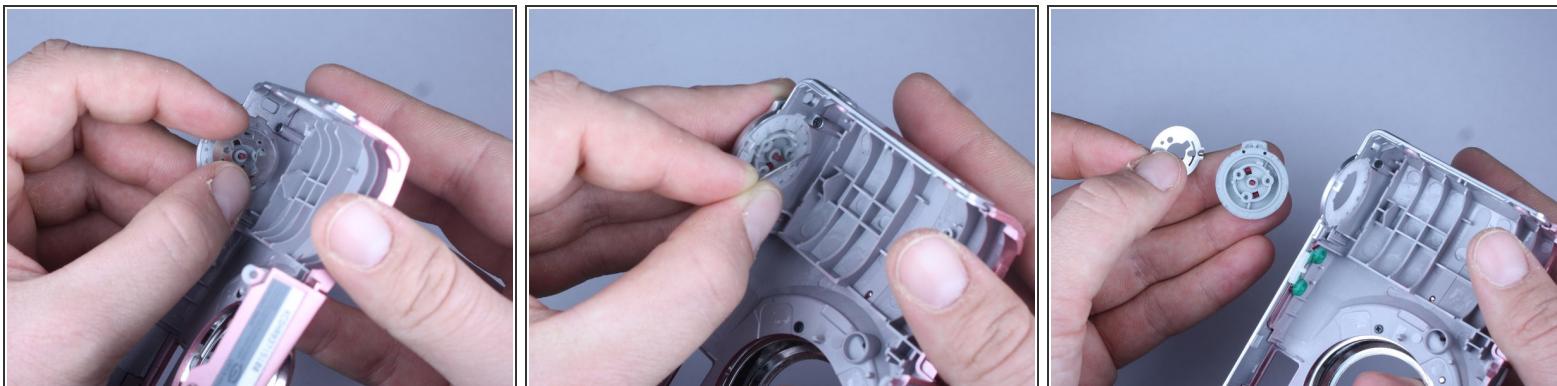

- Keep the shutter button in place while removing the circular metal plate
- Remove the shutter button by allowing it to fall into your hand

Step 14



- Hold down the shutter button portion of the selector dial
- Press down the red tabs and slowly relieve pressure on the shutter button
- Press down on the center red stick

⚠ Careful not to lose the spring

- Tool shown is [Found here](#)

Step 15



- If cleaning, remove dirt from button
- When putting back together, the button should be be oriented so that the green automatic mode points towards the power button.

To reassemble your device, follow these instructions in reverse order.