




# Kodak Easyshare V1003 LCD Display Replacement

Use this guides to remove and replace a malfunctioning LCD display on the Kodak EasyShare V1003 digital camera.

Written By: Vanessa Soares

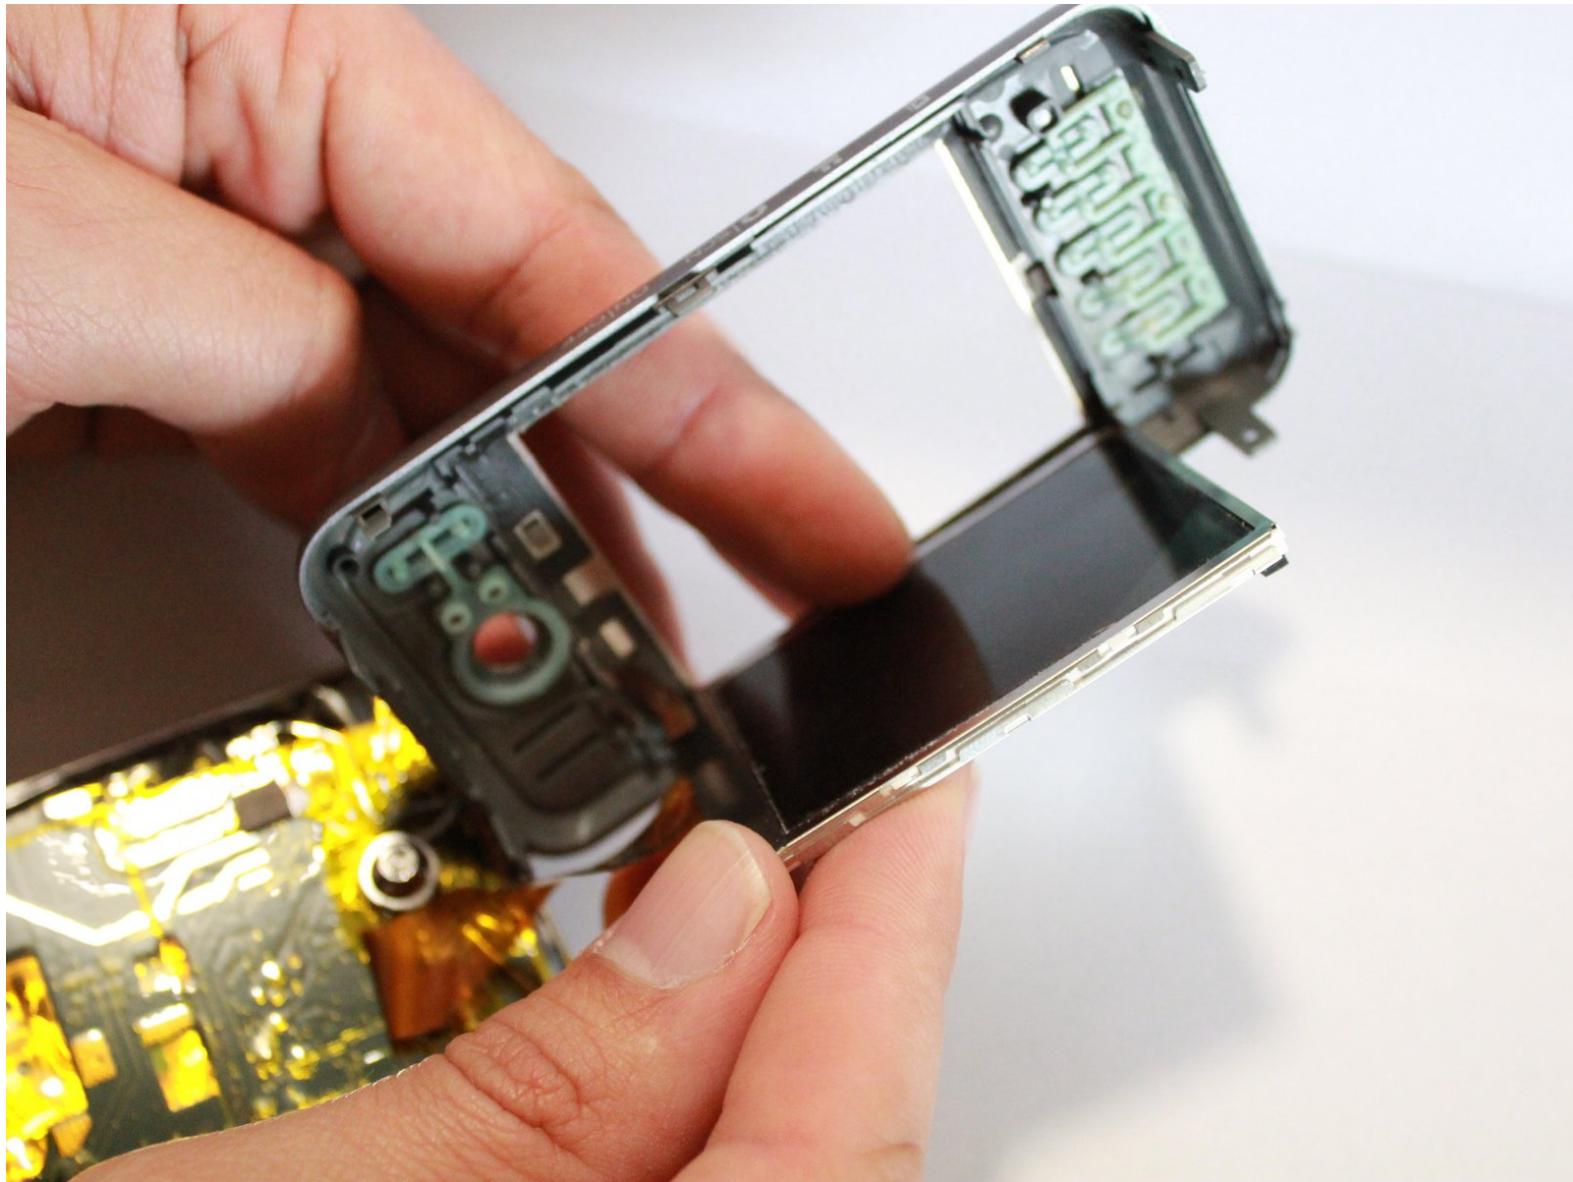

This document was generated on 2019-10-03 12:08:03 PM (MST).

## INTRODUCTION

This guide provides step-by-step instructions for removing and replacing the LCD display. There are two tools required and no safety precautions needed.

### TOOLS:

- 1.5 mm Flathead Screwdriver (1)
- iFixit Opening Tools (1)

## Step 1 — Battery



- Turn off camera by firmly pressing the power button that is located on the top of the camera.

## Step 2



- Position camera with the bottom facing up.

## Step 3



- With your finger, slide the battery cover in the direction of the open arrow.

## Step 4



- Lift the battery cover up gently.

## Step 5



- Gently push the battery down until a click is heard. Battery should release and be lifted out of slot.

## Step 6 — Buttons




- Use a J00 screwdriver to remove the five exterior screws.

## Step 7



- Use a plastic opening tool to pry off the back casing.

## Step 8

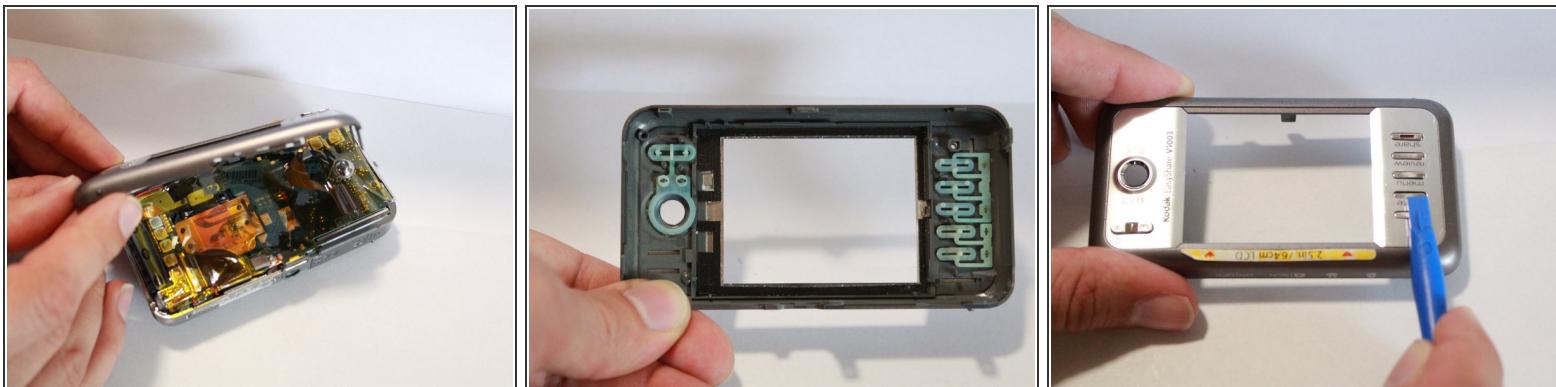


- Completely remove the back casing from the device.
- Using a plastic tool to remove the bottom.

## Step 9 — LCD Display



- Remove the LCD display by unplugging the connector.

## Step 10

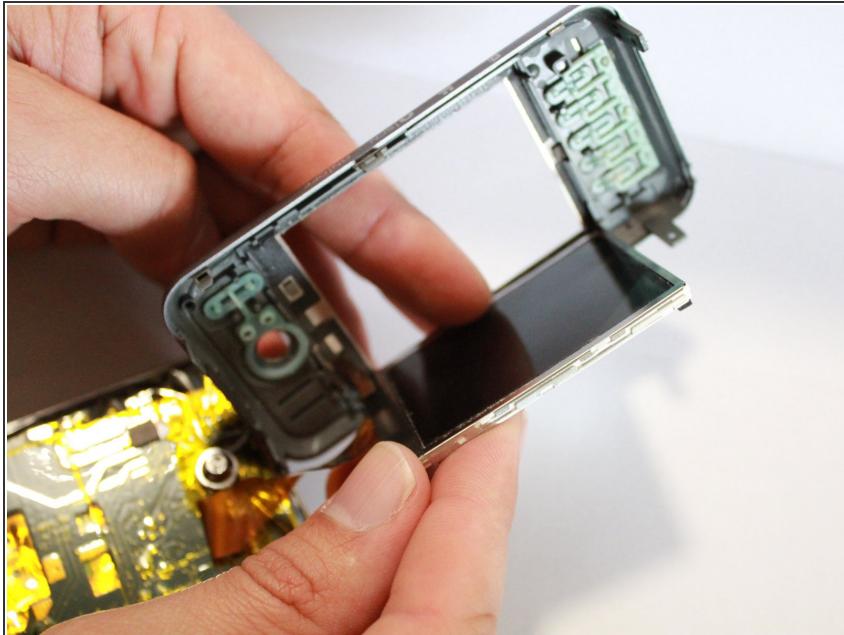

- Take apart the LCD display from the back case.

To reassemble your device, follow these instructions in reverse order.