


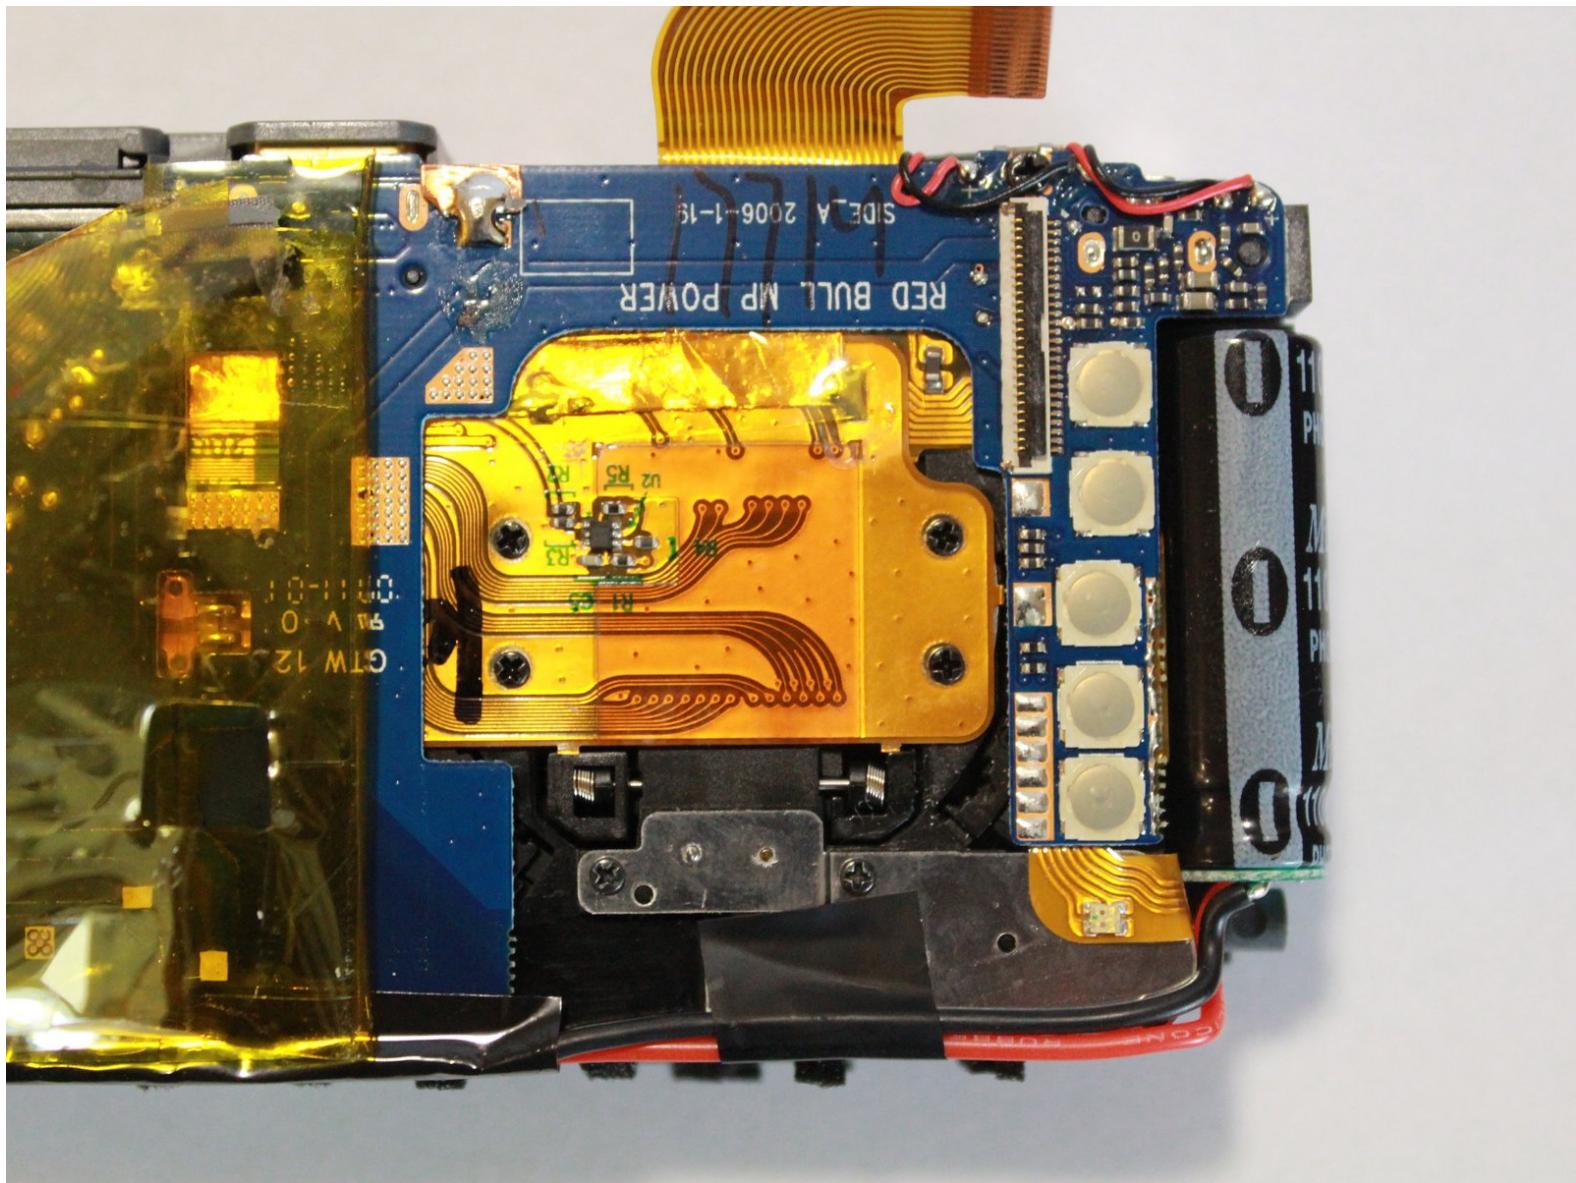

Kodak Easyshare V1003 Lens Replacement

Use this guide to access and replace the camera lens on the Kodak EasyShare V1003.

Written By: Sarah Berry



INTRODUCTION

This guide provides step-by-step instructions for removing and replacing the camera lens. There are two tools required and no safety precautions needed.

TOOLS:

- [iFixit Opening Tools](#) (1)
- [JIS Driver Set](#) (1)

Step 1 — Battery



- Turn off camera by firmly pressing the power button that is located on the top of the camera.

Step 2



- Position camera with the bottom facing up.

Step 3



- With your finger, slide the battery cover in the direction of the open arrow.

Step 4



- Lift the battery cover up gently.

Step 5




- Gently push the battery down until a click is heard. Battery should release and be lifted out of slot.

Step 6 — Lens




- Use a J00 screwdriver to remove the five exterior screws.

Step 7

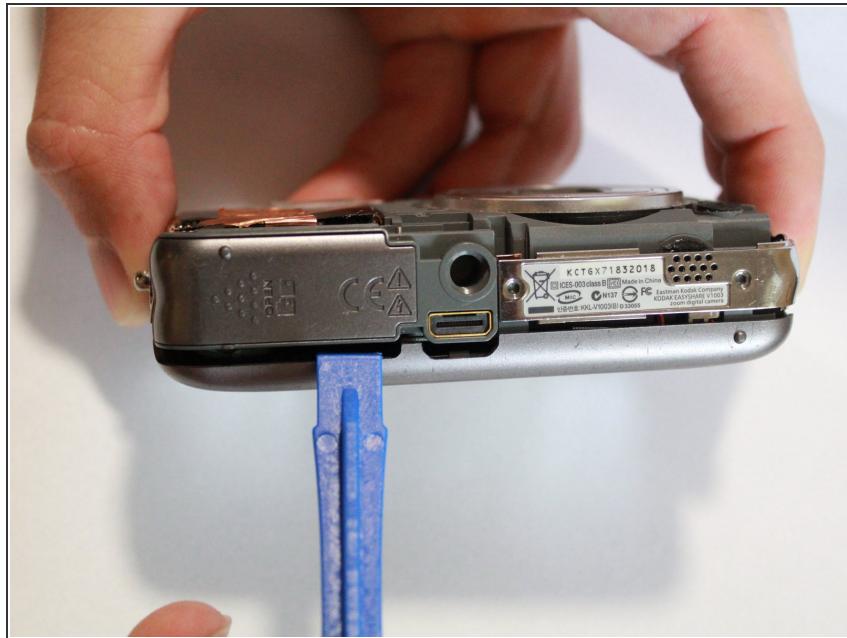


- Pull the outer case off using the plastic opening tool.

Step 8

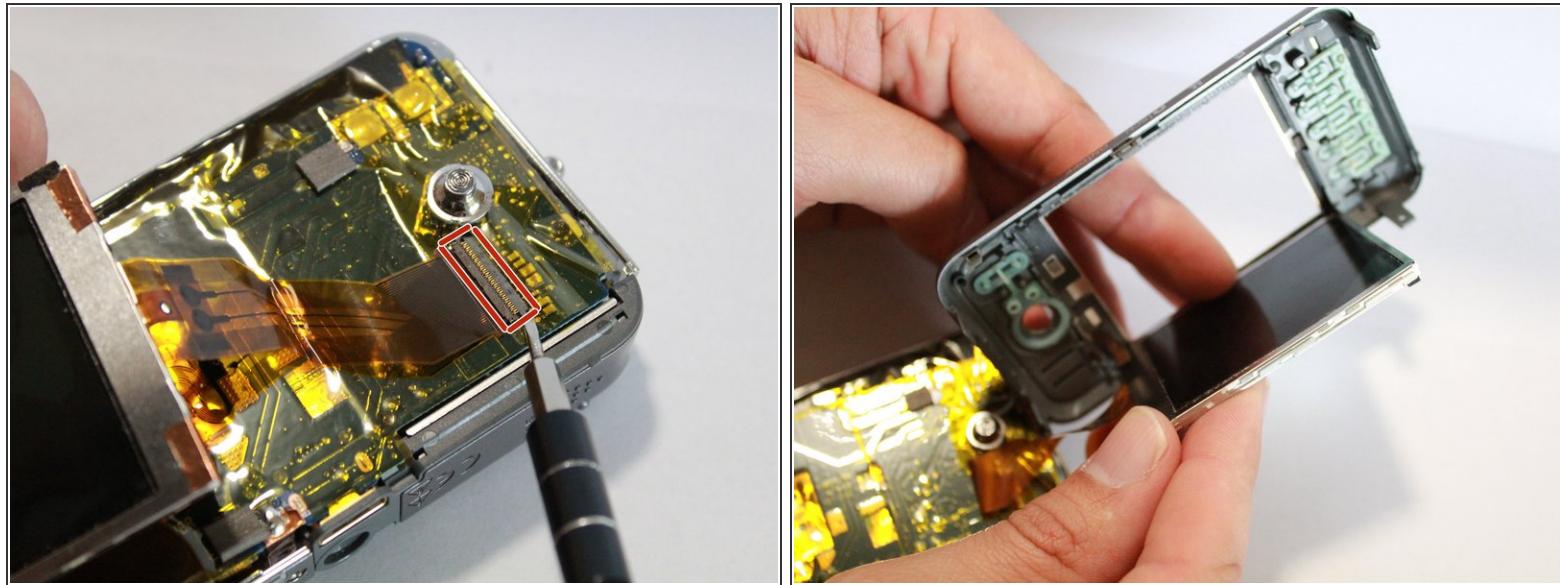


- Remove the LCD display by unplugging the connector
- Take apart the LCD display from the back case

Step 9

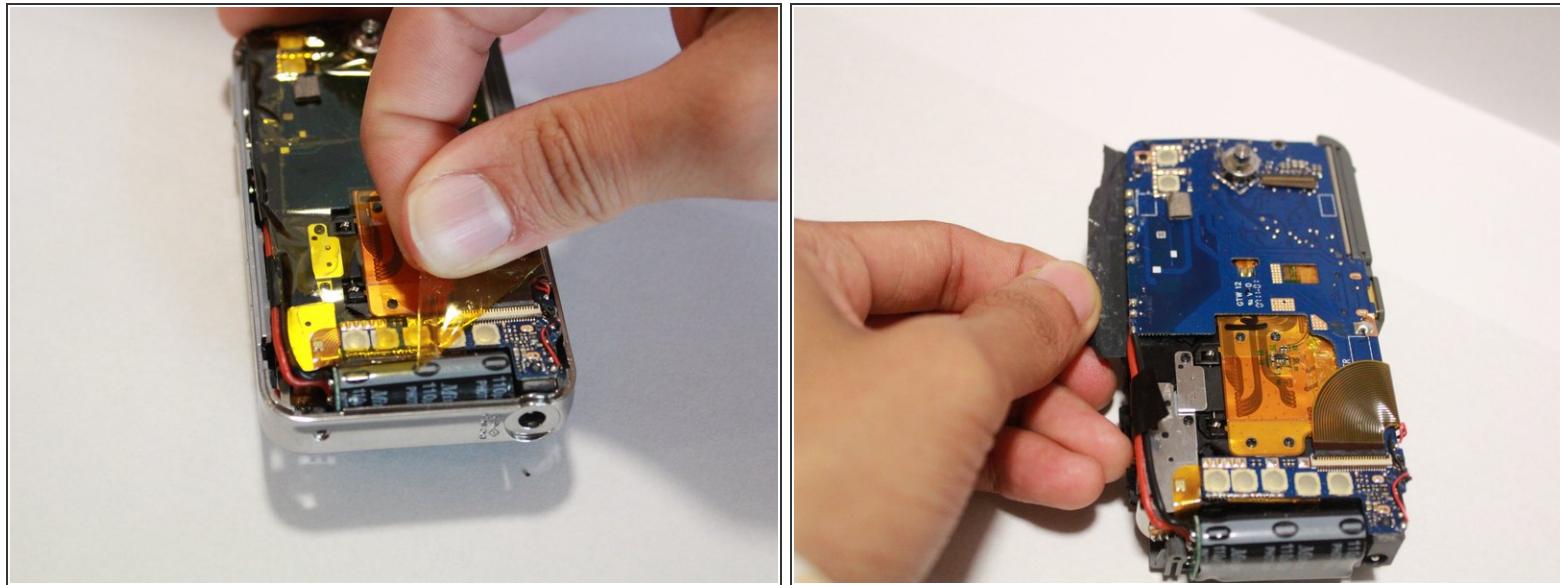


- Peel off the yellow film.
- Peel off the black tape holding the wires.

Step 10

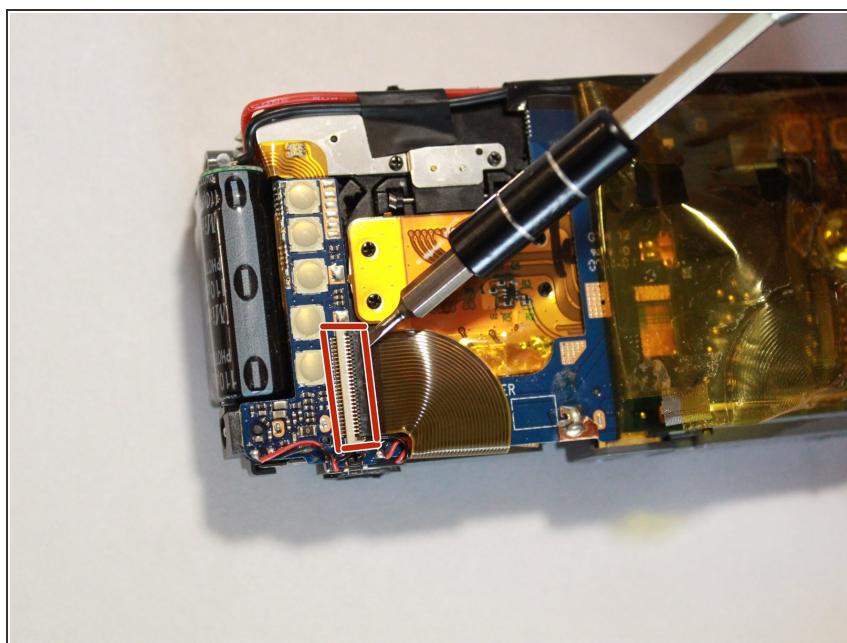


- Unplug the connector by lifting the little lock holding it in place.

Step 11

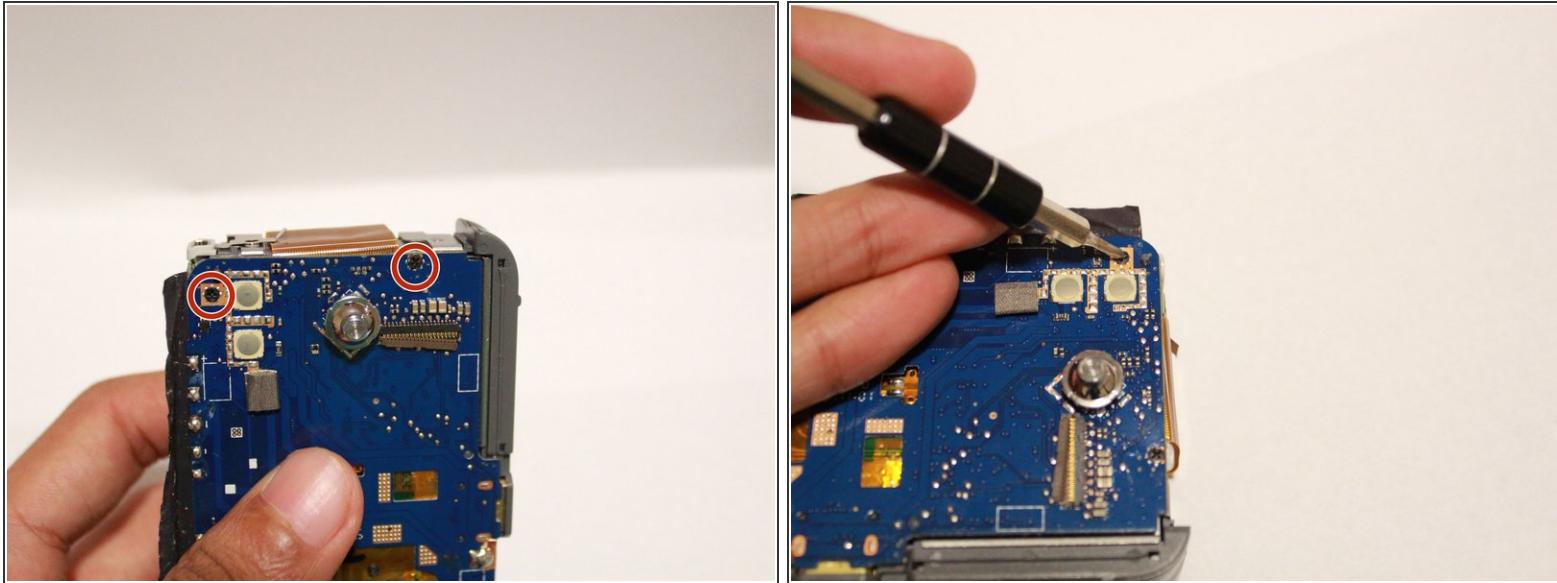

- Use a J00 screwdriver to remove two screws located on the far right, near to the main button.

Step 12

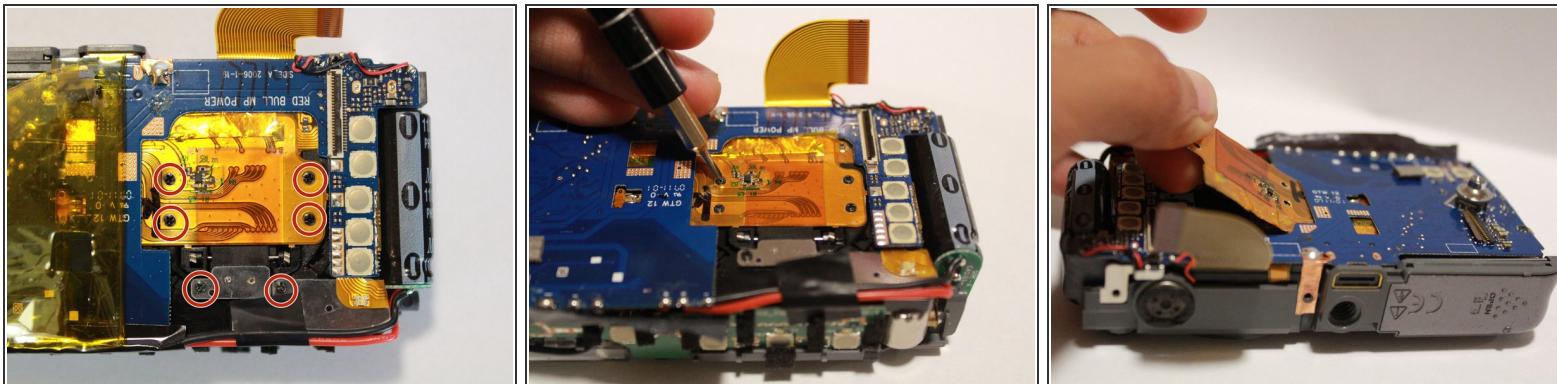

- Use a J00 screwdriver to remove 6 screws located at the center of the back panel.
- Gently pull out the lens using you finger tips or pincers.

To reassemble your device, follow these instructions in reverse order.