



Kodak Easyshare Z981 Flash Button Replacement

This guide will give detailed instructions on replacing the flash button on the Kodak Easyshare Z981.

Written By: Olivia Boyna



 **TOOLS:**

- [Phillips #00 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)
- [Tweezers](#) (1)

 **PARTS:**

- [Kodak Easyshare Z981 Replacement Flash Button](#) (1)

Step 1 — Flash Button



- Open the battery cover and remove the AA batteries from the camera if any are inserted.

Step 2




- Remove screws using a [00 Phillips-Head](#) screwdriver:
 - Eight (8) **3mm** screws on the lower portion of the camera
 - Four (4) on the bottom of the camera
 - Four (4) on the inside of the battery cover
 - Four (4) **6mm** screws on the sides of the camera (two on each side)

Step 3




- Start from a corner and gently remove the bottom of the camera.
- *(i)* The cover will easily lift off, so not much pressure is required.

Step 4

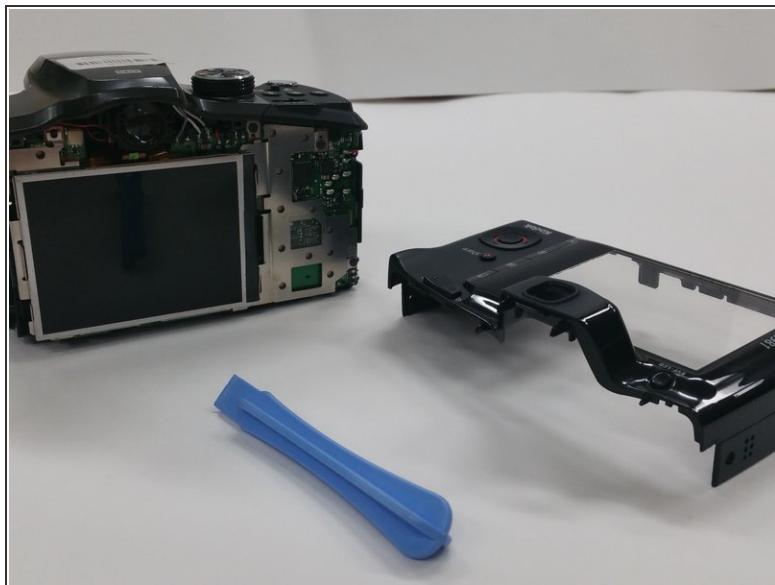

- Use a [Plastic Opening Tool](#) to remove the back of the camera

Step 5

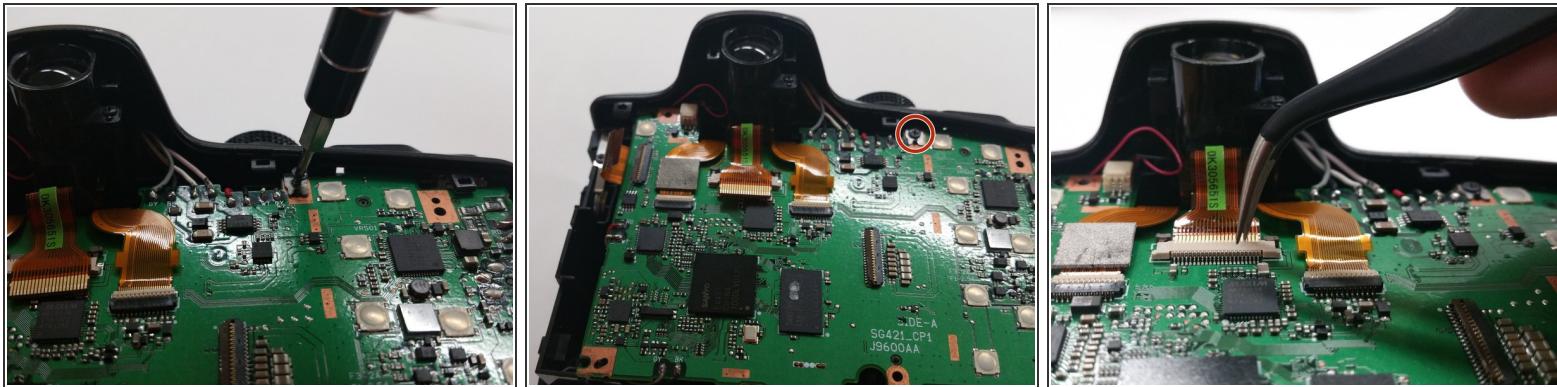

- Remove the four (4) **3mm** screws attaching the LCD screen to the circuit board.
- Use [Tweezers](#) to carefully detach the ribbon cable


 Use extreme caution on this step, as the ribbon cable is very fragile and can rip very easily.

Step 6



- Open the flash compartment and remove two (2) **3mm** screws.

Step 7

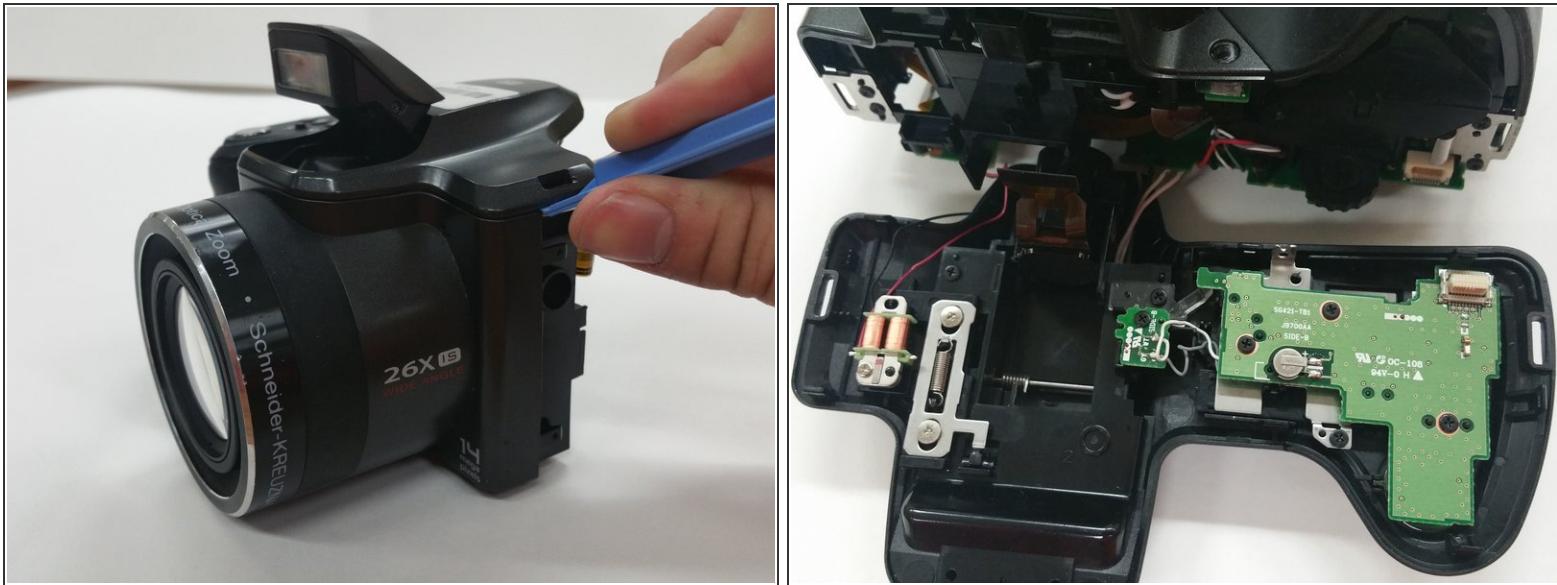

- Use a [Plastic Opening Tool](#) to carefully remove the top of the camera.


 Use caution when removing the top of the camera

Step 8



- Remove four (4) **3mm** screws from the circuit board underneath the button set.
- Gently move the circuit board aside.
- Gently move aside the metal sheet.

Step 9

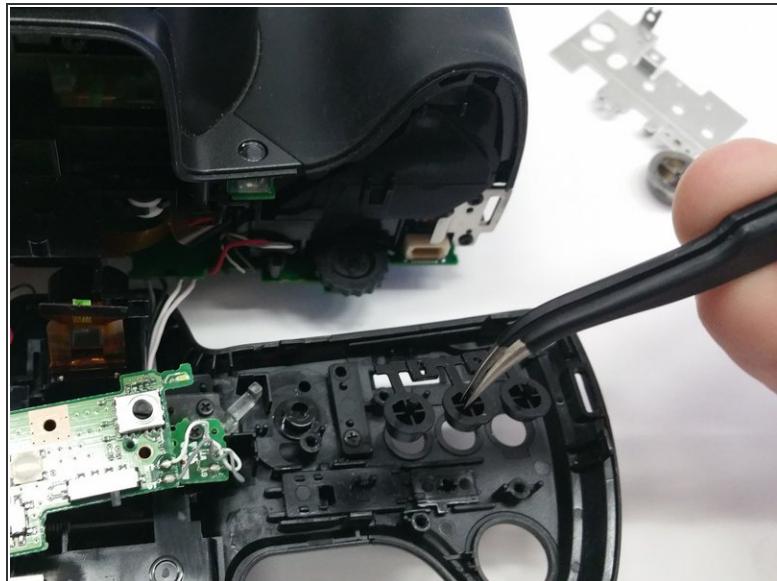

- Use [Tweezers](#) to carefully remove the flash button.
- ⓘ The button should simply pop out when light pressure is applied.

To reassemble your device, follow these instructions in reverse order.