



Kodak Easyshare Z981 LCD Screen Replacement

This guide will demonstrate on how to remove and replace the screen

Written By: Daniel Ramirez



 **TOOLS:**

- Phillips #00 Screwdriver (1)
- iFixit Opening Tools (1)

 **PARTS:**

- Kodak Easyshare Z981 Replacement LCD Screen (1)

Step 1 — LCD Screen



- Open the battery cover and remove batteries from the camera if any are inserted.

Step 2



- Use a [00 Phillips-Head](#) screwdriver to remove screws:
- Remove the **3 mm** screws from the camera
 - Four (4) screws are in the bottom of the device
 - Four (4) screws are inside the battery cover

Step 3




- Start from a corner and gently remove the cover.
- *(i)* The cover will easily lift off, so not much pressure is required.
- ⚠ Make sure to gently remove the bottom cover in order to avoid breaking the plastic.

Step 4



- Use a [Phillips #00 Screwdriver](#) to remove the **4 mm** screws from each side of the back cover of the camera.
 - Two (2) screws are located in the left side of the device
 - Two (2) screws are located in the right side of the device


Step 5

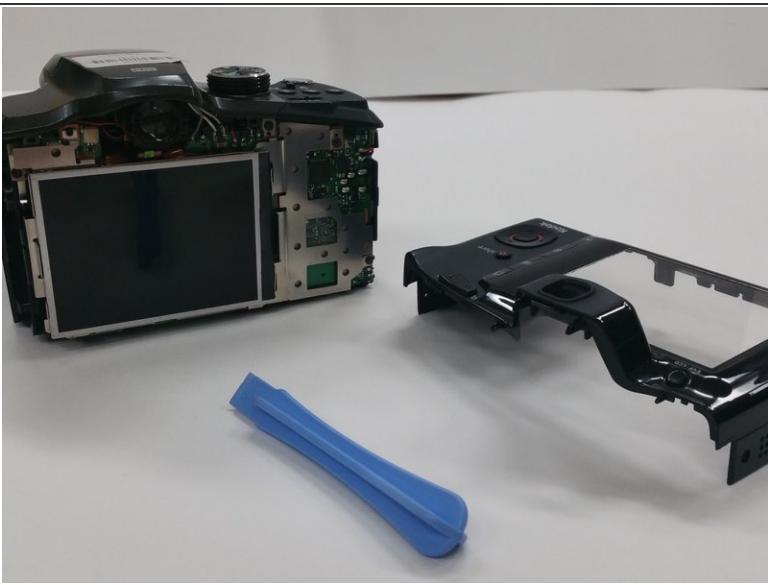

- Insert the [Plastic Opening Tool](#) in to the crevices of back cover and gently apply pressure



⚠ Be gentle while removing the cover, to avoid cracking the case

Step 6

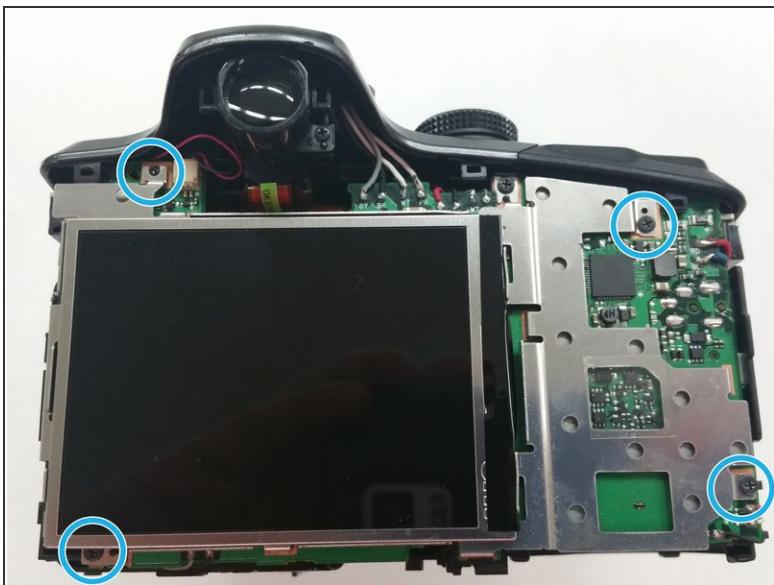

- Once the back cover is removed locate the four 3mm screws holding the screen and the metal brace to the circuit board

Step 7

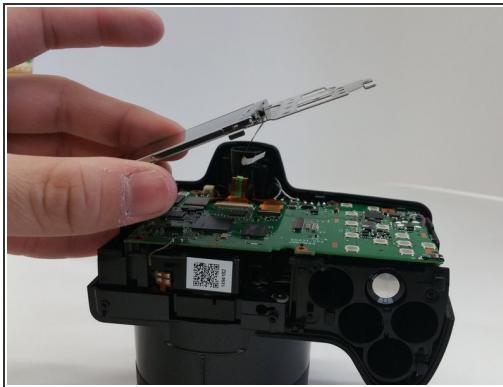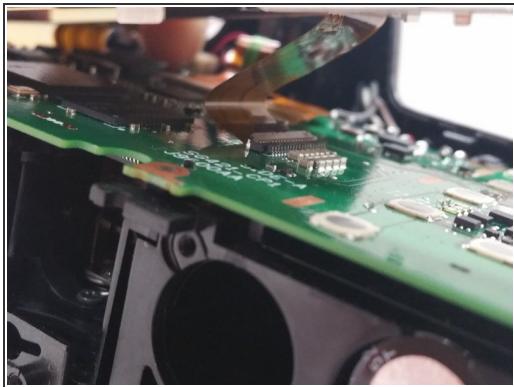

- Gently lift up the metal brace and use a pair to disconnect the ribbon cable connecter
- Use [Tweezers](#) to disconnect the ribbon cable connector.
- Once disconnected remove the screen brace from the circuit board

 Use extreme caution when removing the LCD brace pulling the brace may tear the cable

To reassemble your device, follow these instructions in reverse order.