



Kodak PixPro AZ251 LCD Screen Replacement

This guide will provide instructions for replacing the LCD screen of your Kodak PixPro AZ251.

Written By: Rachel Llewellyn



INTRODUCTION

This guide will provide instructions on how to replace the LCD screen for Kodak PixPro AZ251. Replacing the LCD screen may be necessary if the screen is cracked or becomes dislodged.

TOOLS:

- [JIS #000 Screwdriver \(1\)](#)
- [JIS #00 Screwdriver \(1\)](#)
- [Phillips #00 Screwdriver \(1\)](#)
- [iFixit Opening Tools \(1\)](#)
- [Tweezers \(1\)](#)

Step 1 — Batteries



- Slide switch to open lock position.

Step 2



- Press down on the battery cover and slide outwards to open.

Step 3



- Remove the batteries.

Step 4 — Back Cover



- Remove a total of four 5mm JIS #000 screws from around the camera:
 - Two screws from the right side.
 - Two screws from the left side.

Step 5



- Remove the single 5mm Phillips #00 screw from the bottom.

Step 6




- Open the flash module.
- Remove the two 6mm JIS #00 screws found inside of the flash housing.

Step 7



- Use a plastic opening tool to pry apart both halves of the camera.
- Remove the back panel.

Step 8 — LCD Screen

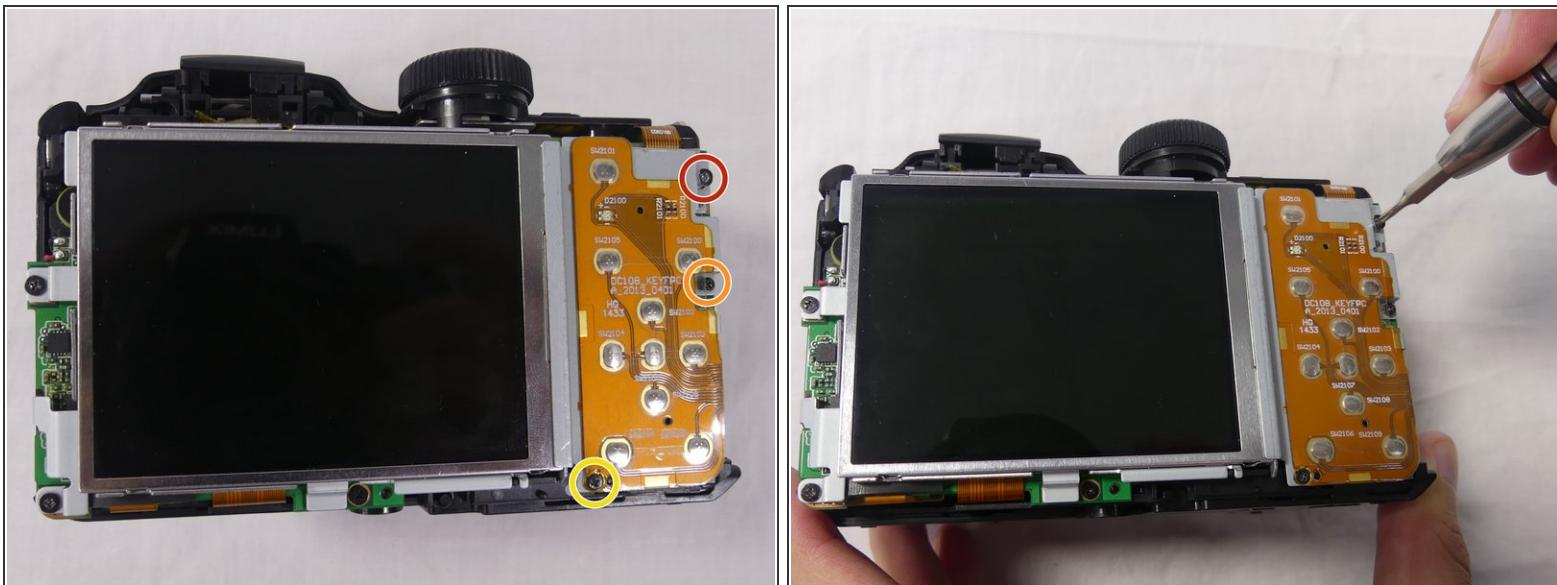

- Remove these three JIS #000 screws from the control board:
 - 5mm screw.
 - 4mm screw.
 - 2mm screw.

Step 9




- Pull the small metal switch plate to the side.

Step 10



- Pry the LCD screen out of the metal housing plate with a plastic opening tool.

Step 11

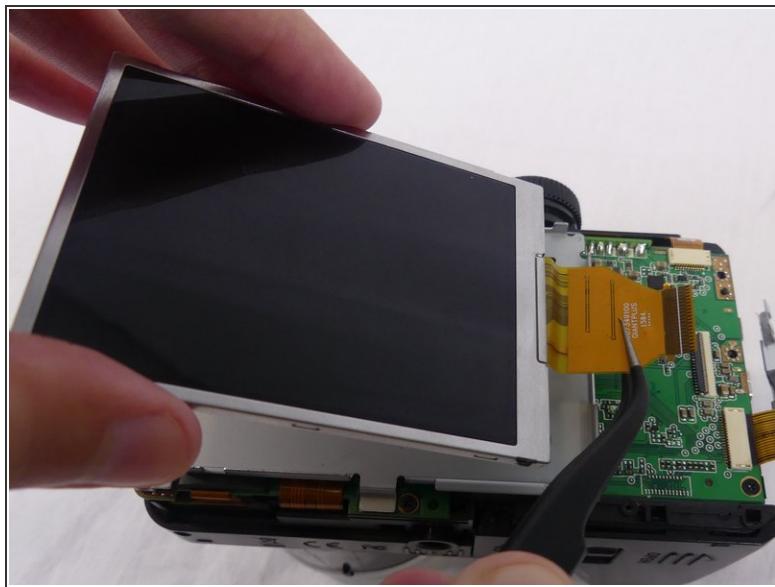

- Use a spudger to flip up the retaining flap on the display ribbon cable [ZIF](#) socket.
- Pull the orange cable out of the socket.

To reassemble your device, follow these instructions in reverse order.