



Kodak PixPro AZ251 Rubber Grip Replacement

This guide will provide instructions on how to remove the rubber grip of your Kodak PixPro AZ251.

Written By: Luiza Oliveira



INTRODUCTION

The rubber grip, located on the front of your Kodak PixPro AZ251, gives you a better grip of the camera. This guide will instruct you on how to remove the rubber pad.

TOOLS:

- [iFixit Opening Tools \(1\)](#)

Step 1 — Batteries



- Slide switch to open lock position.

Step 2



- Press down on the battery cover and slide outwards to open.

Step 3



- Remove the batteries.

Step 4 — Rubber Grip



- Insert the plastic opening tool underneath the rubber on the bottom corner.

Step 5



- Slide the plastic opening tool along the perimeter of the rubber grip to unbind the glue.

Step 6



- Pry upwards until you can grip the rubber enough to pull off.

To reassemble your device, follow these instructions in reverse order.