



Kodak S100 EF Film Replacement

This repair guide will describe removing and replacing film in the Kodak S100 EF.

Written By: Michelle



INTRODUCTION

This will guide through the process of rolling up to remove the film as well as replacing it with a new roll. The Kodak S100 EF uses 35mm film.



PARTS:

- 35mm film (1)

Step 1 — Film



- Lift up the lever from the center of the film roller.
- Turn it clockwise to roll up the film until you feel the roller release, indicating all the film has been rolled up.

Step 2



- On the far left side on the back of the camera there is a switch that says "open."
- Slide the button up to the top where it says "open."
- This should pop open the door, revealing the rolled up film inside.

Step 3



- ⓘ To take out the old film and insert the new, you must lift up on the film roller.
 - Pull up on the lever to pop the roller up which will release the film.
 - After old roll is removed, slide in the new roll and push the roller back down to secure the film.

Step 4



- To prepare the film for use, grab the tail of the film and pull it out slightly.
- Drag it out to the rotating column on the right side.
- At the base of the column there are hooks to attach to the holes at the bottom of the film.
- Slip one of the hooks into the first hole of your film to attach.

Step 5



- After film is secured, close the camera door.
- Make sure the lever is put back in place on the film roller.
- Use the scroll wheel to advance the film until it is ready to take pictures.

Once the film is in place-to reassemble the camera-close the camera door and make sure the scroll wheel is pushed back down.