


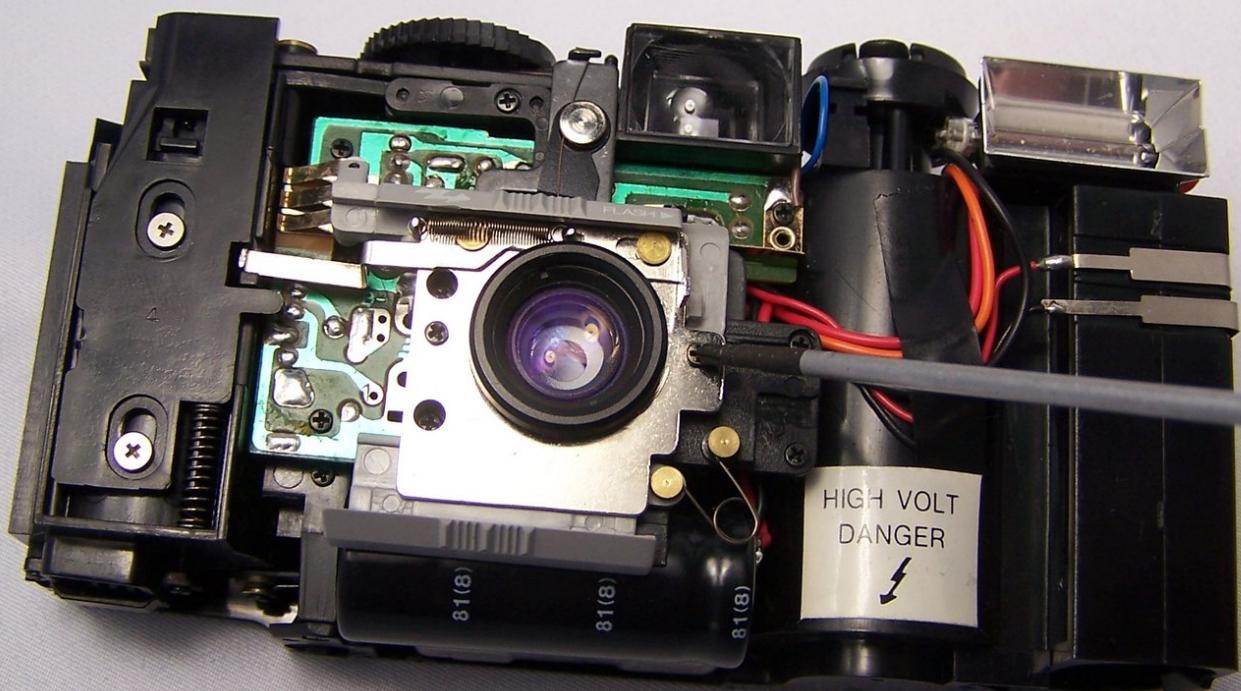

Kodak S100 EF Flash Replacement

This will instruct the repair of the flash for the Kodak S100 EF.

Written By: Nick




INTRODUCTION

To start, the Front Cover Teardown guide must be used. Later, soldering guides will be used.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [Soldering Workstation](#) (1)

Step 1 — Front Cover

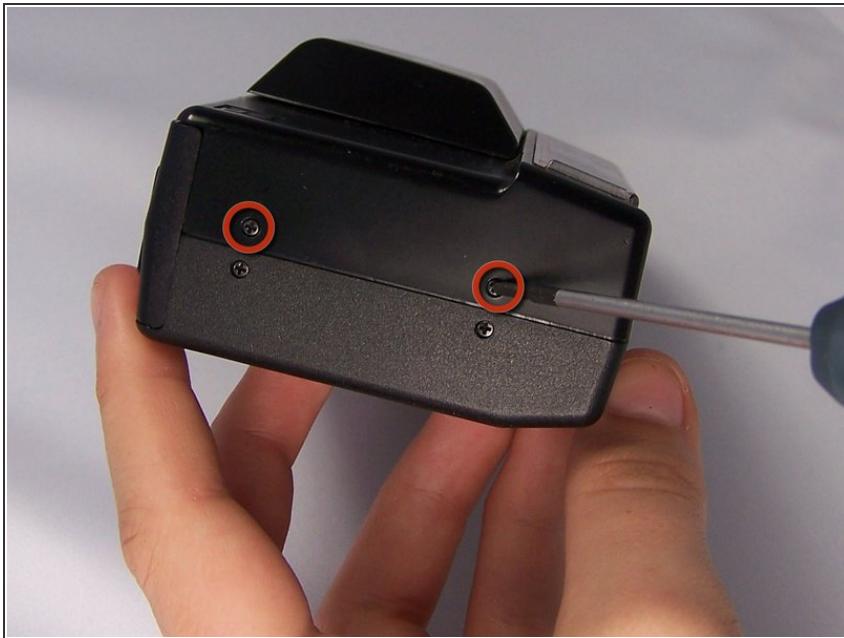

i Have the camera facing up and the flash closest to you.

- Unscrew the two 6.2 mm Phillips screws on the top half of the camera.

Step 2



i Flip camera to other side-with flash farthest from you.


- Unscrew top two 6.2mm Phillips screws on this side.

Step 3



- Turn the camera so the bottom is facing up with the front facing away.
- Unscrew the 6.2mm Phillips screw on the top right.
- The front cover is now unscrewed and should be lifted up evenly and removed.

Step 4 — Flash

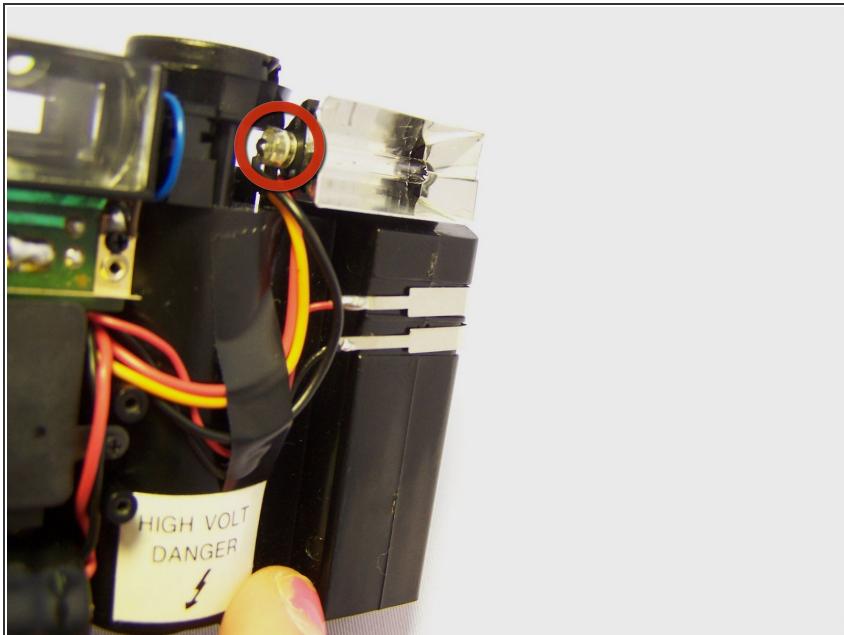

- Once the front cover is off, desolder the connections at both ends of the flash.
- If unfamiliar with soldering, refer to the guide [How To Solder and Desolder Connections](#)

To reassemble your device, follow these instructions in reverse order.