



Kodak Signet 35 Back Cover Replacement

Successfully detach and replace back cover

Written By: Jayesh Patel



INTRODUCTION


This guide will walk you through the process of replacing the back cover for your Kodak Signet 35 camera.

Step 1 — Back Cover



- With the lens facing away from you, hold the camera firmly with one hand and locate a metal button on the right side of the latch.
- Press the button while pushing the latch downward. This will disengage the latch freeing the back cover.

Step 2

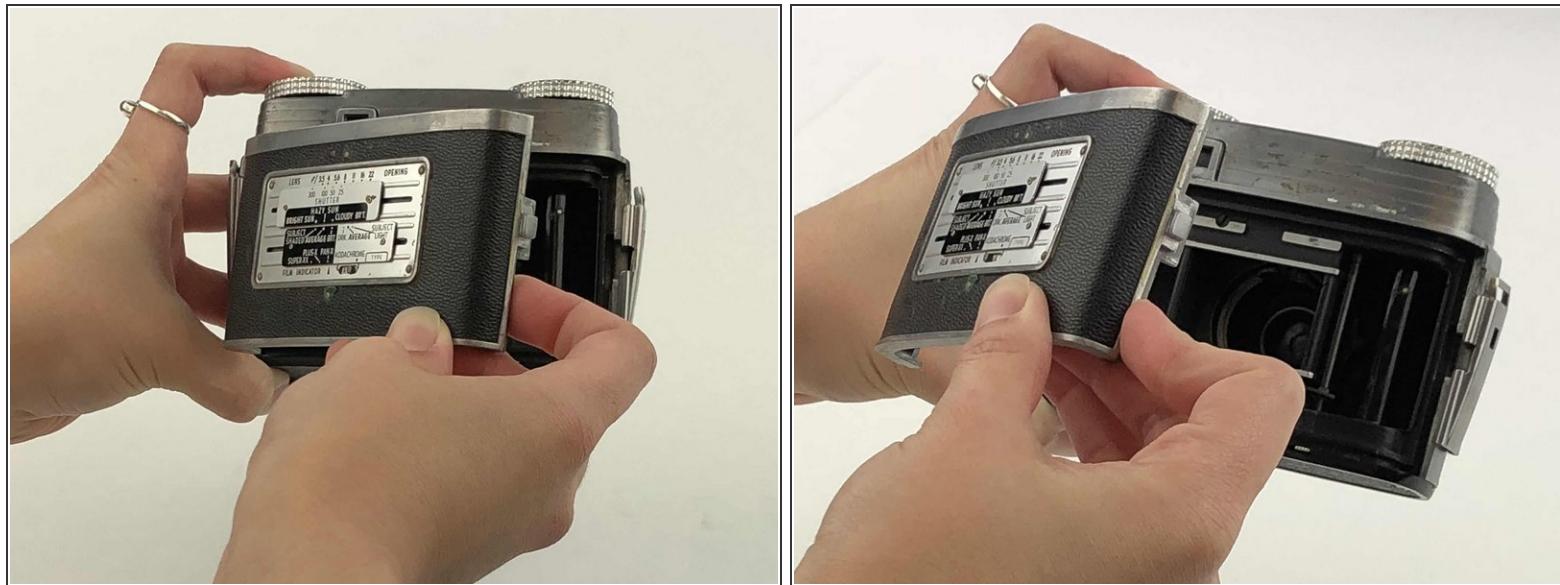

- Lift the back cover away from the camera in order to free the latch on the left.

To reassemble your device, follow these instructions in reverse order.