



Kodak Signet 35 Beamsplitter Replacement

Use this guide to help you with the process of replacing the beamsplitter on your Kodak Signet 35.

Written By: Juan Alvarado



INTRODUCTION

If the image through the view finder on your Kodak Signet 35 camera is unclear, then the beamsplitter may be damaged or dirty. This guide will walk you through the process of removing the beamsplitter for proper cleaning or replacing. Please take into consideration the necessary tools and enough time to disassemble and reassemble the device with proper care.

TOOLS:

- [Phillips #1 Screwdriver \(1\)](#)
- [Tweezers \(1\)](#)
- [Flathead Screwdriver \(1\)](#)

Step 1 — Beamsplitter



- While holding the dial with one hand, use a 4mm flathead screw driver to remove the flathead screw that holds the dial in place.
- Remove the washer located underneath each dial.

⚠ Be cautious not to lose the washer located underneath each dial.

- Repeat the same process for the other dial/knob.

Step 2



- Using a Phillips head screwdriver, unscrew both Phillips screws located on top of the camera.
- Once both Phillips screws are removed, carefully lift off the top cover.

Step 3



- Using a Phillips head screwdriver, remove the vertical-facing Phillips screw that holds the metal bracket in place located near the viewfinder.
- Using a 2.5mm flathead screw driver, gently loosen the horizontal screw that holds the metal bracket just enough to make it easier to release the beamsplitter.

⚠ Be cautious when reassembling the device, **DO NOT** tighten the horizontal flathead screw all the way. Tighten the screw enough to where the beamsplitter is held in place and then stop.

Step 4



- Remove the beamsplitter using the tweezers. It can now be cleaned or replaced.

To reassemble your device, follow these instructions in reverse order.