



Kodak Signet 35 Dials/Knobs Replacement

Use this guide to replace dials/knobs on your Kodak Signet 35.

Written By: Juan Alvarado



This document was generated on 2019-11-05 10:25:52 PM (MST).

INTRODUCTION

If the 'wind' and 'rewind' dials on your camera are not operating properly or have visual damage that may need to be adjusted or replaced. This guide will help you through the process of adjusting or replacing the dials. Make sure you have all of the necessary tools before you start.

TOOLS:

- Flathead Screwdriver (1)

Step 1 — Dials/Knobs



- While holding the dial in place with one hand, remove the flathead screw that holds the dial in place with the 4mm flathead screw driver.
- Be cautious not to lose both washers located underneath each dial/knob.
- Repeat the same process to remove the other dial/knob.

To reassemble your device, follow these instructions in reverse order.