



# Kodak Signet 35 Lens Replacement

The camera lens is dirty or cracked.

Written By: Mary Mouro



## INTRODUCTION

This guide will show you how to remove and replace the lens of the camera.

## Step 1 — Lens



- Place the camera on its back on a flat surface.

## Step 2



- Firmly hold the camera with one hand and grip the lens assembly with the other. Turn the lens assembly counterclockwise until it is removed.
- The lens can now be replaced once its removed.

To reassemble your device, follow these instructions in reverse order.