



Kodak Signet 35 Shutter Replacement

The shutter behind the lens of the camera is not opening or responding.

Written By: Mary Mouro



INTRODUCTION

This guide will show you how to remove and replace the shutter spring in the camera.

TOOLS:

- Tweezers (1)

Step 1 — Shutter Spring



- Unscrew the front lens assembly. Then, lift off the faceplate underneath and the speed setting plate.

Step 2



- using a tweezers take out the black nob

Step 3



- Replace old spring with new one

To reassemble your device, follow these instructions in reverse order.