



Kolcraft Cloud Plus Wheel Replacement

This guide briefly describes the process of removing and replacing a wheel on the Kolcraft Cloud Plus stroller.

Written By: Christopher Peterson



INTRODUCTION

The wheels are vital to the stroller's function. Damaged or loose wheels can be frustrating, but wheel replacement is quick and painless.




TOOLS:

- [Metal Spudger](#) (1)
-

Step 1 — Wheel



 Applying too much force to the spudger can cause the spudger to bend or the hubcap to break. To avoid this, try prying the hubcap from a different angle or positioning your spudger at a different points around the hubcap.

- Use the spaded side of the metal spudger to pry off the small black hubcap on the outside of the rear wheel.

Step 2



- Pull on the looped end of the cotter pin to remove it.

Step 3



- Remove the metal washer by sliding it off the axle.

Step 4



- Slide the wheel off of the axle.

To reassemble your device, follow these instructions in reverse order.