



Konica Minolta DiMAGE Z3 Battery Replacement

Konica Minolta DiMAGE Z3 Battery Replacement

Written By: Hieu Ngo



INTRODUCTION

The camera is powered by four AA-size alkaline or nickel-metal hydride (Ni-MH) batteries. Do not use other size or types of AA batteries. The camera should be off before the batteries are replaced.

If the camera is used in a cold environment, using Ni-MH batteries is recommended over alkaline batteries; they have better performance because they have more current (electron flow) than alkaline batteries.

Step 1 — Open the battery chamber



- Open the battery chamber door by sliding the door to the side of the camera to release the safety catch.
- Lift the door up to open.

Step 2 — Insert the batteries



- Insert the four batteries inside of the battery chamber door.
- Make sure the positive and negative battery terminals are in the correct position.

To reassemble your device, follow these instructions in reverse order.