



# Koosh Vortex Tornado Barrel Shield Spring Replacement

Replace the barrel shield spring on your Koosh Vortex Tornado.

Written By: Jordon Roseman



## INTRODUCTION

This guide will show you how to replace the barrel shield spring on the Koosh Vortex Tornado.

### TOOLS:

- [Phillips #1 Screwdriver](#) (1)
- [Spudger](#) (1)

**Plastic**

*Metal Spudger is preferred*

## Step 1 — Barrel Shield Spring



- Remove the fourteen 150 mm Phillips #1 screws on the side of the body.

## Step 2



- Pull the shells apart to show the inside of the gun. Set the left shell aside.

## Step 3



- Using a spudger, unhook the barrel shield's spring from the base of the gun.

To reassemble your device, follow these instructions in reverse order.