



Krups 963 Bottom Panel Removal

Removing the bottom panel/cover of the machine.

Written By: Wyatt Hall



INTRODUCTION

Prerequisite Only

TOOLS:

- Phillips #2 Screwdriver (1)
- Phillips #0 Screwdriver (1)

Step 1 — Removing Bottom Screws



⚠ Make sure the device is unplugged before continuing.


- Use a Phillips size 2 screwdriver to remove the four 12mm screws found on the bottom of the machine.

Step 2



- Remove the single black Phillips size 0 10mm length screw on the back of the machine.

Step 3

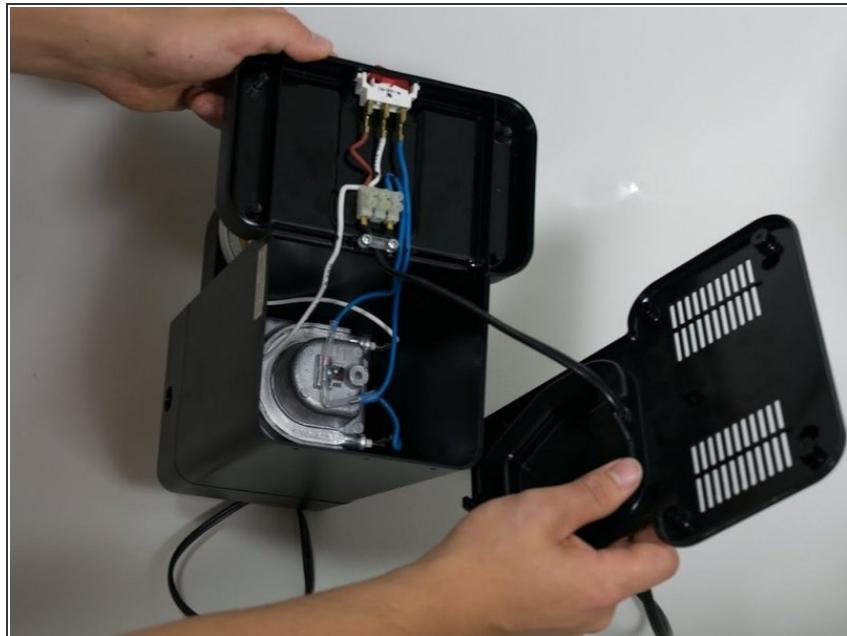

- Remove the bottom cover from the machine and slide it down the power cord.

To reassemble your device, follow these instructions in reverse order.