




# Krups F203 Coffee Grinder Trigger Assembly Replacement

This guide will show you how to remove and replace all parts of the trigger mechanism.

Written By: Ian Hancock

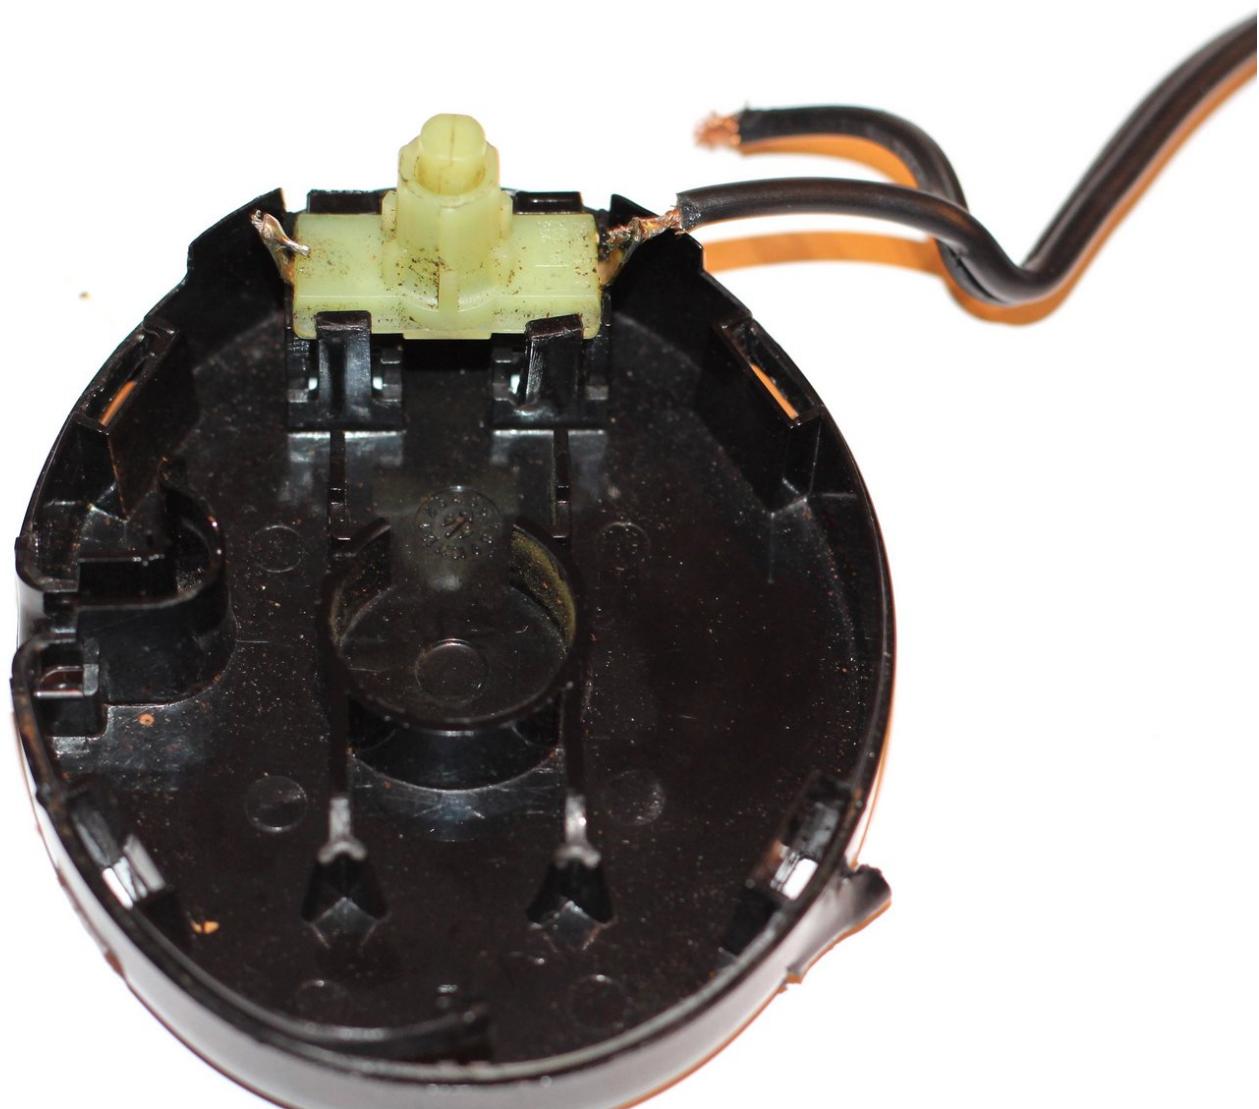

## INTRODUCTION

The trigger assembly that connects the button to the motor can sometimes break. This guide will explain how to replace the trigger assembly.

### TOOLS:

- [Spudger \(1\)](#)
- [Soldering Iron \(1\)](#)

## Step 1 — Base Plate



- In each of the four rectangular slots on the bottom of the device, there is an E-shaped clip.


## Step 2



- Wedge the spudger between the flat side of the E-clip and the outside wall of the slot. Then, loosen up the clip by prying it inward with the spudger.

 Try not to break these clips as this will cause structural integrity issues upon reassembly

## Step 3

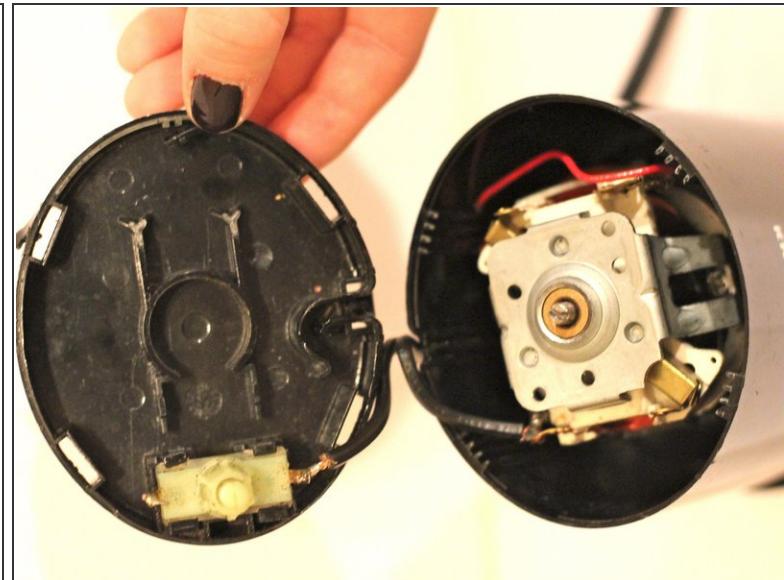


- Work your way around the four clips, loosening each a little at a time. Eventually, all four clips will be loose enough to remove the base plate.

## Step 4 — Detach Trigger Button from Base Plate




- The trigger button is held in with light tension clips. Gently pry them back to release.

## Step 5

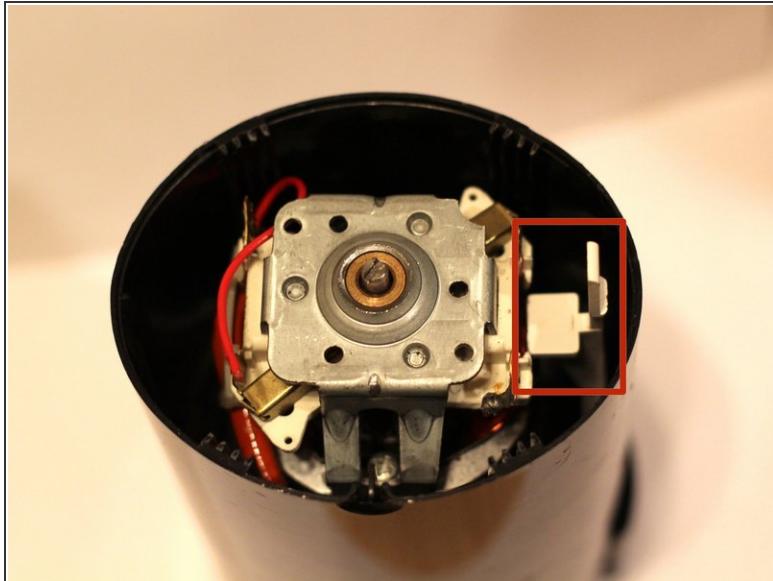

- Remove the white trigger.

## Step 6

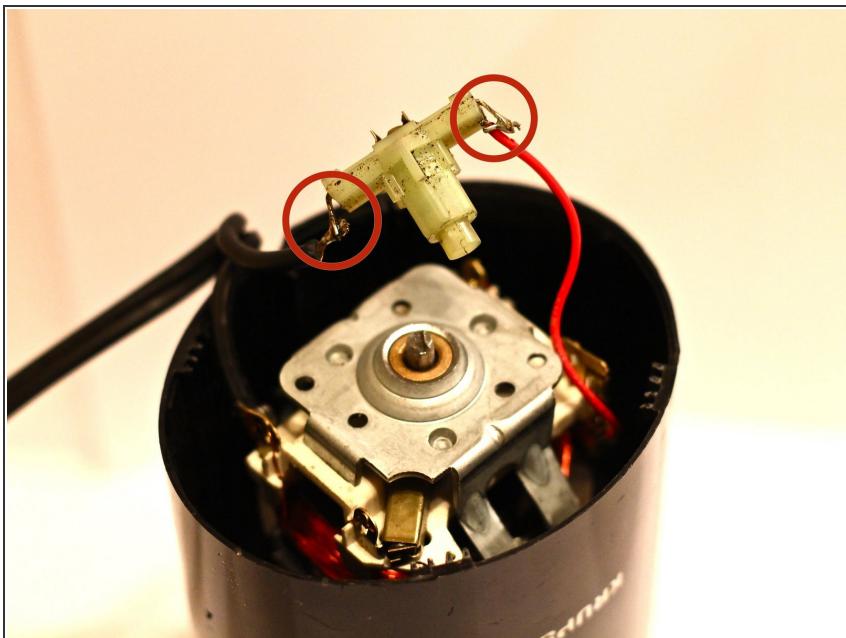

- Desolder the contact points between the trigger button and the red wire and also where the plug attaches to the trigger button

*i* Be sure to reference the how to solder video posted to the device page

To reassemble your device, follow these instructions in reverse order.