




Kurio Touch 4S Power Button Replacement

Written By: Moin Khan



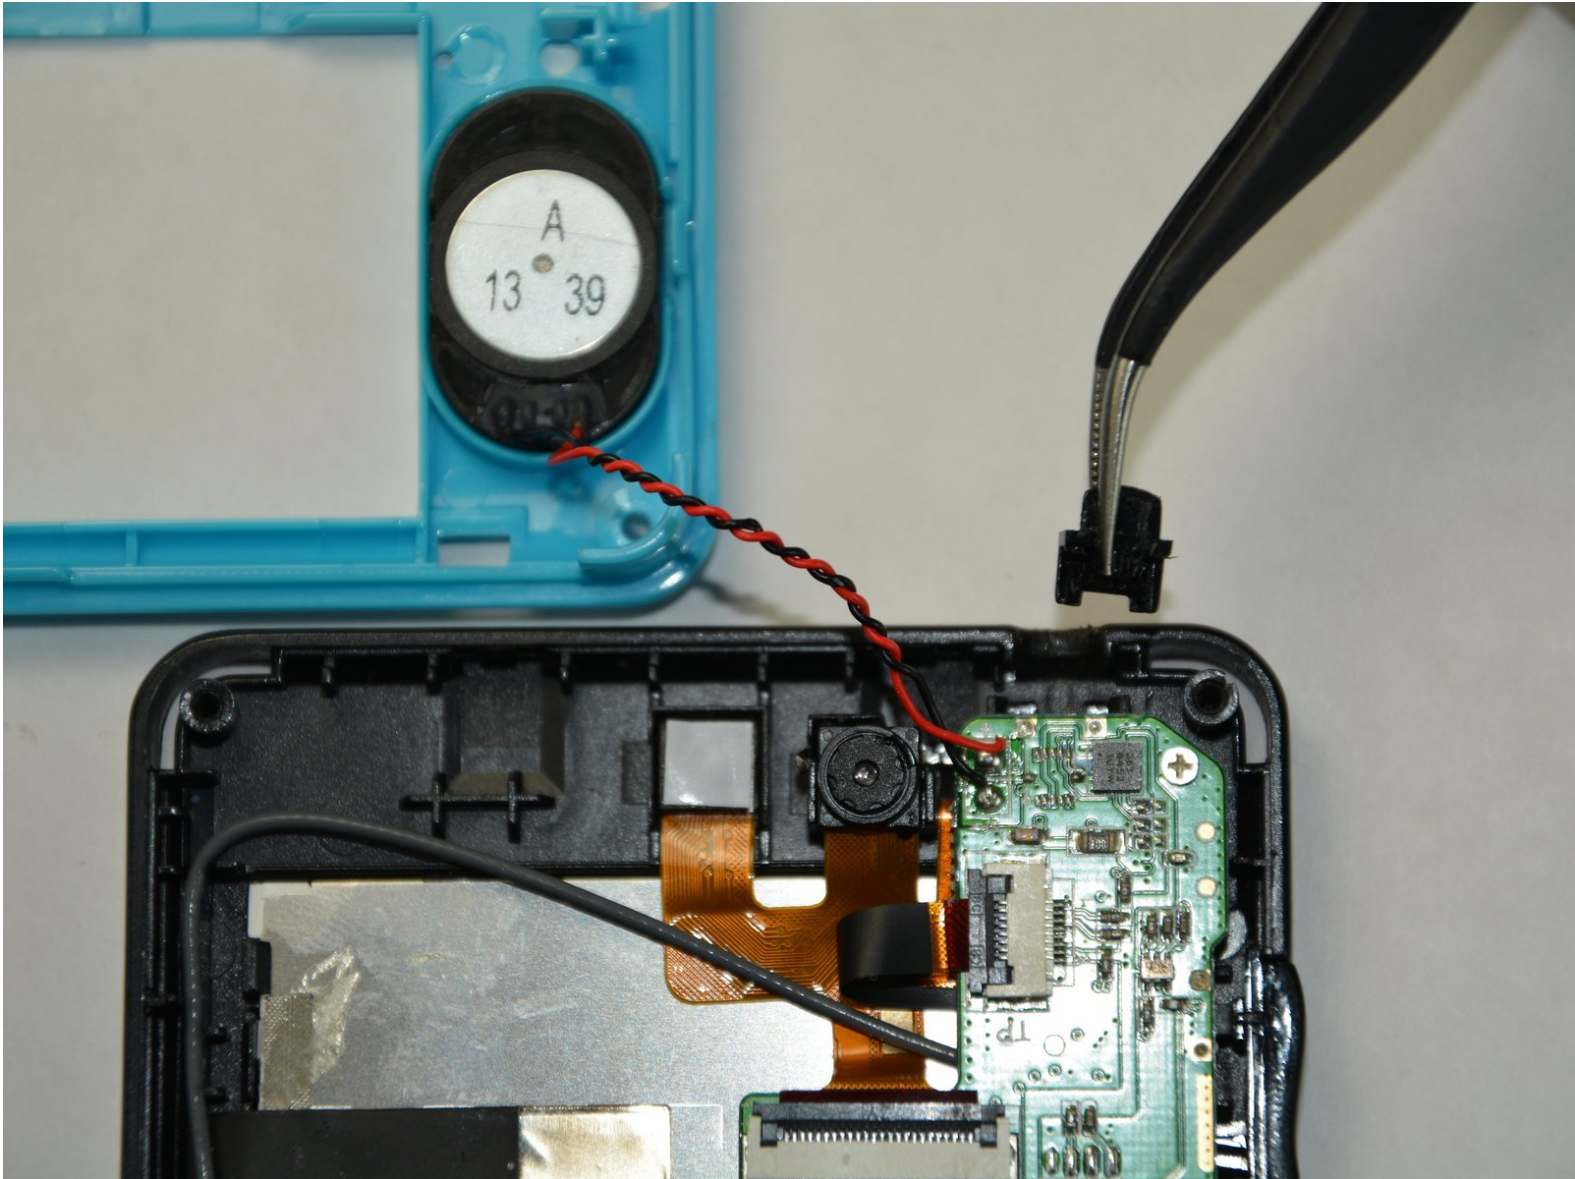

TOOLS:

- [iFixit Opening Tools](#) (1)
- [Phillips #1 Screwdriver](#) (1)
- [Tweezers](#) (1)

Step 1 — Power Button



- Make sure to open the back cover easily using the plastic opening tool.

Step 2



- Remove back cover by prying away from the device.
- ⓘ The easiest place to remove the cover is from the bottom and top; try to open it from the right and left sides.
- ⚠ Open it gently. Do not open it with too much pressure, so that the plastic back cover do not break.

Step 3



- To remove the battery, make sure the four 5mm Phillips screws on each side of your device is open using the Phillips #1 Screwdriver
- After you remove your four 5mm Phillips screws, use your plastic opening tool to help you open the plastic cover of your device.

Step 4



- After you remove your four 5mm Philips screws use your plastic opening tool to help you open the plastic cover of your device.

Step 5




- Separate the two halves of your Kurio Touch 4S and lay them besides each other.

Step 6



- Gently remove the plastic cover that is covering the camera.

Step 7

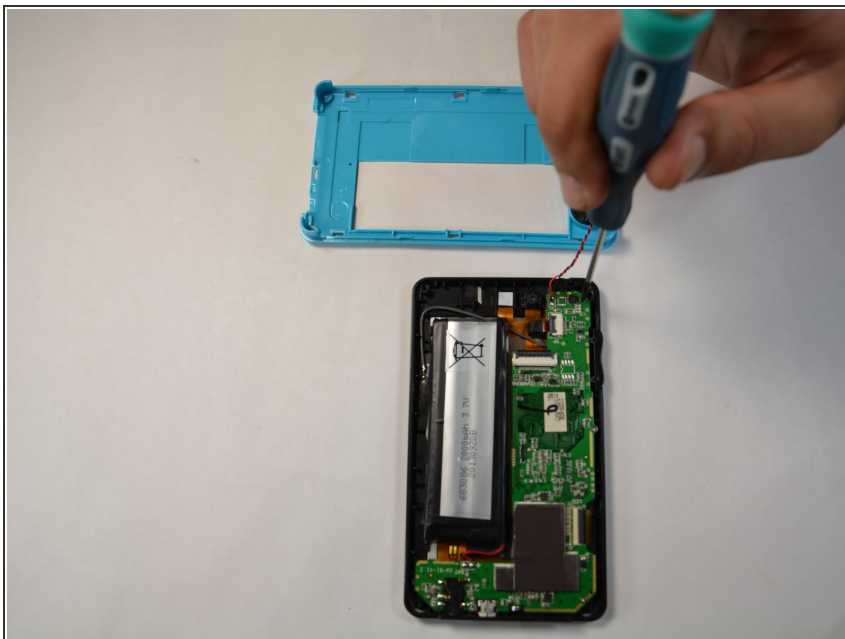

- Use Phillips # 1 screw to open the four 5mm Philips screws on the motherboard.

⚠ Open the screws gently and do not apply too much force as you could damage the motherboard.

Step 8




- Use the plastic opener to remove the battery.

Step 9



- Use tweezers to remove the black tape that is attached to the motherboard.

Step 10

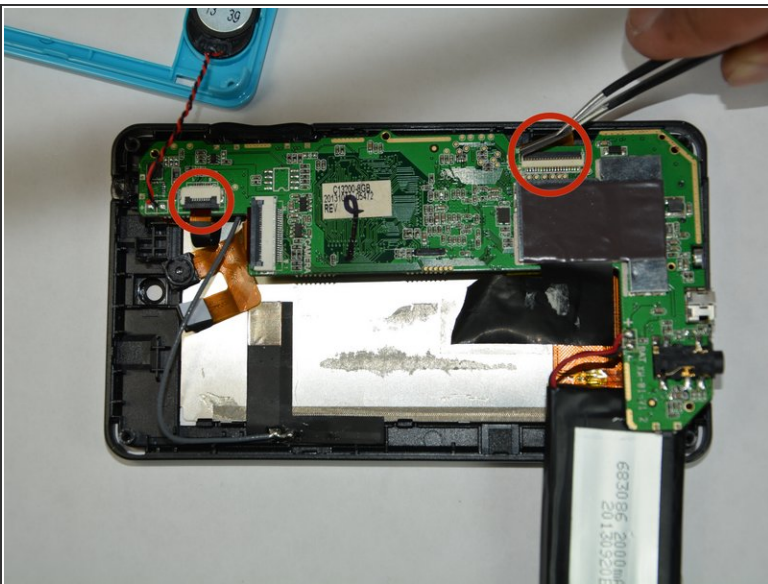


- Detach all the wire that are connected to the motherboard.
- Detach the camera module and other components that are attached to the motherboard.

Step 11



- Remove the motherboard with the help of plastic opener.
- ⓘ Detach the power plug before you remove the motherboard.

Step 12

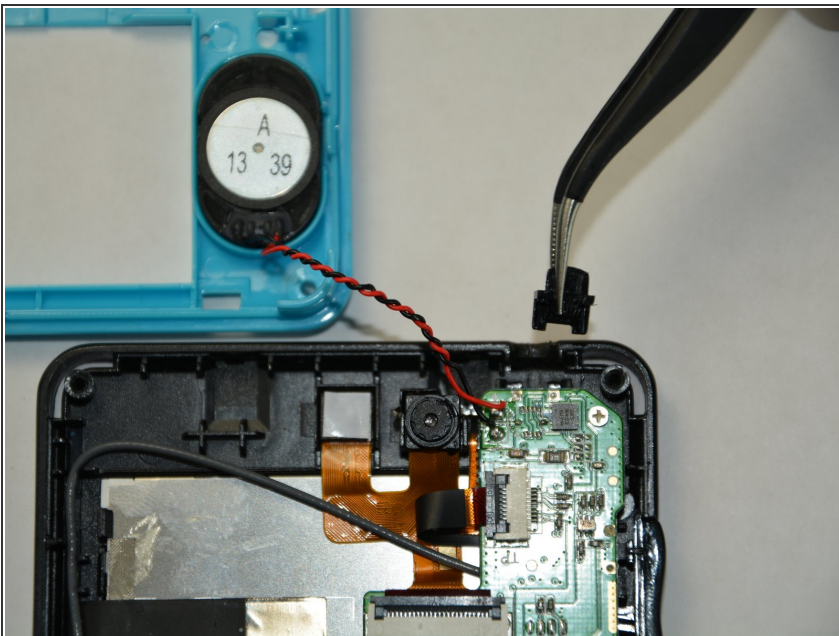

- Use tweezers to hold the power button and gently lift it up.
- Replace the old power button with the new one.

To reassemble your device, follow these instructions in reverse order.