




Kurio Touch 4S Speaker Replacement

This guide will show you how to replace the speakers in your Kurio Touch 4S.

Written By: Moin Khan

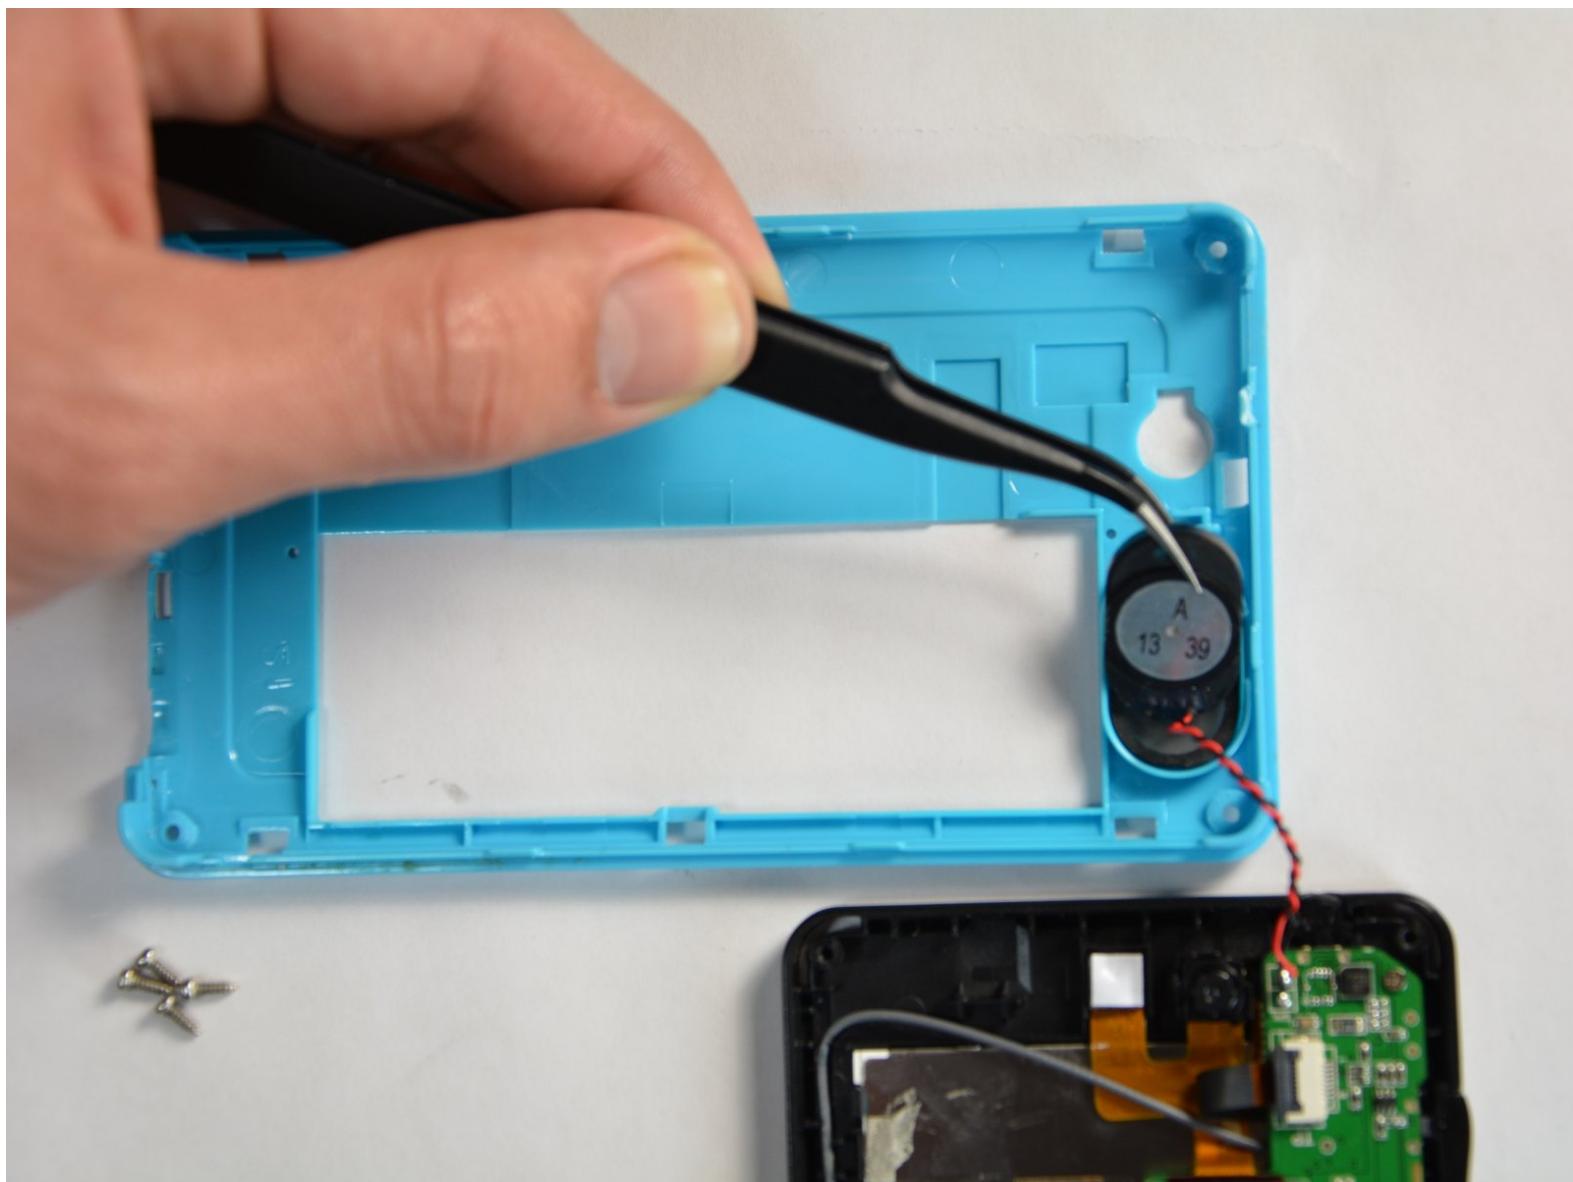

 **TOOLS:**

- [iFixit Opening Tools \(1\)](#)
- [Phillips #1 Screwdriver \(1\)](#)
- [Tweezers \(1\)](#)
- [Detailing Brush \(1\)](#)
- [Soldering Iron \(1\)](#)

Step 1 — Speakers



- Make sure to open the back cover easily using the plastic opening tool.

Step 2



- Remove back cover by prying away from the device.

(i) The easiest place to remove the cover is from the bottom and top; try to open it from the right and left sides.

⚠ Open it gently. Do not open it with too much pressure, so that the plastic back cover do not break.

Step 3




- To remove the battery, make sure the four 5mm Philips screws on each side of your device is open using the Phillips #1 Screwdriver
- After you remove your four 5mm Philips screws, use your plastic opening tool to help you open the plastic cover of your device.

Step 4



- After you remove your four 5mm Philips screws, use your plastic opening tool to help you open the plastic cover of your device.

Step 5

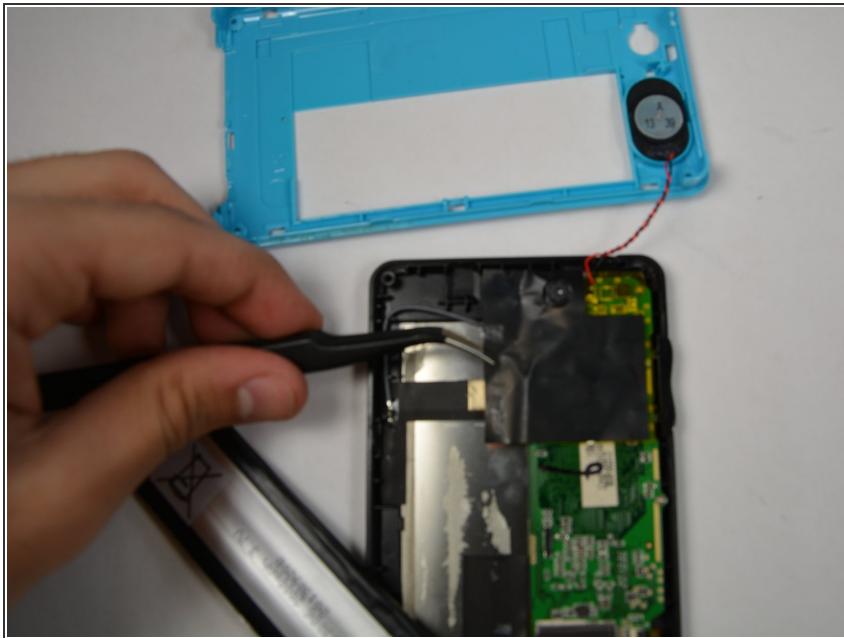

- Gently remove the plastic cover that is covering the camera.

Step 6



- Separate the two halves of your Kurio Touch 4S and lay them besides each other.

Step 7



- Use the soldering tool to detach the speaker wires.

ⓘ For more information on how to solder the wires [Click here](#)


Step 8



- Press the speaker in the manner shown so that it comes out of its slot.

⚠ Be sure not to apply too much force or you can break the back cover.

Step 9

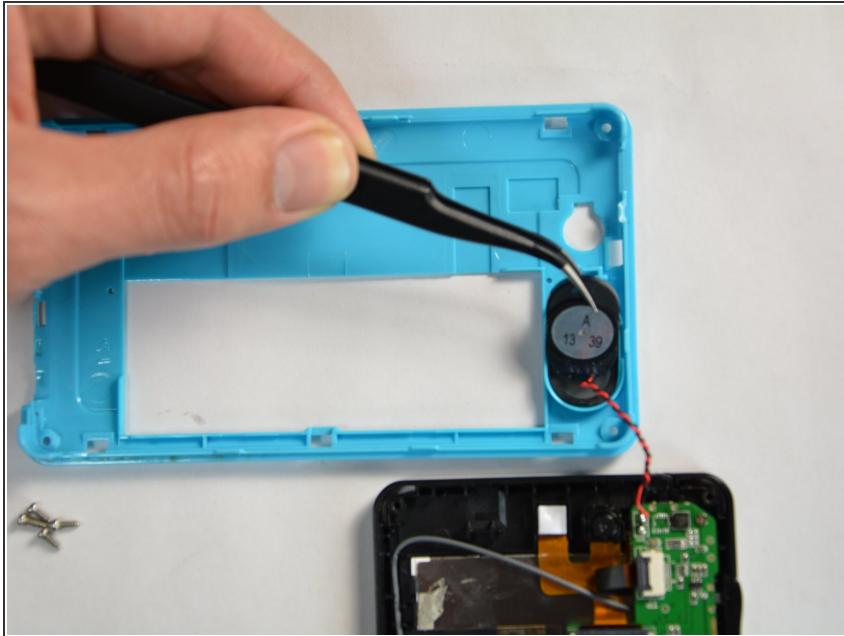

- Use the Tweezers to remove the speaker from its place.

 Remove the speaker gently.

To reassemble your device, follow these instructions in reverse order.