


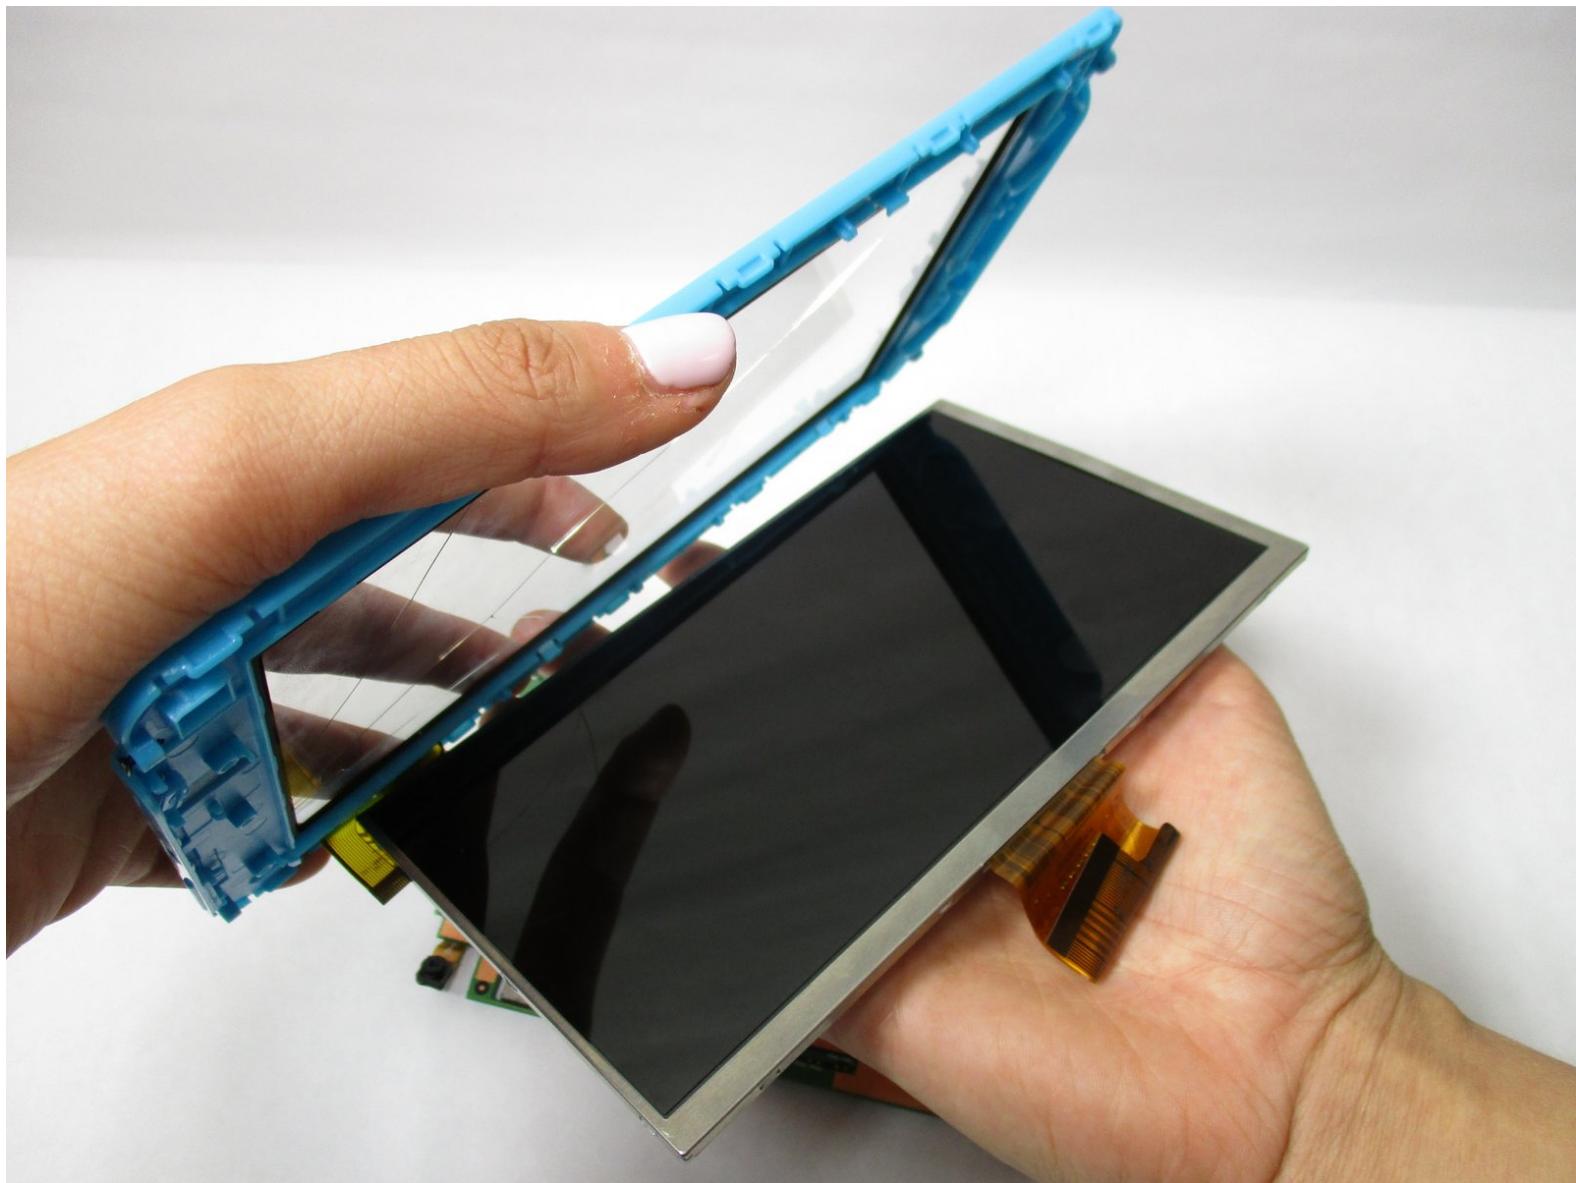

Kurio Xtreme Touch Screen Replacement

Replace the cracked or broken touch screen on your Kurio Xtreme.

Written By: Mallory Myers



INTRODUCTION

If the touch screen on your Kurio Xtreme is cracked or broken, follow this guide to replace it.

TOOLS:


- [Phillips #000 Screwdriver](#) (1)
- [Plastic Cards](#) (1)
- [iFixit Opening Tools](#) (1)
- [Soldering Iron](#) (1)

Step 1 — Back Panel



- Remove the rubber case by beginning to peel from one of the top corners and continue peeling until the cover is completely removed.

Step 2

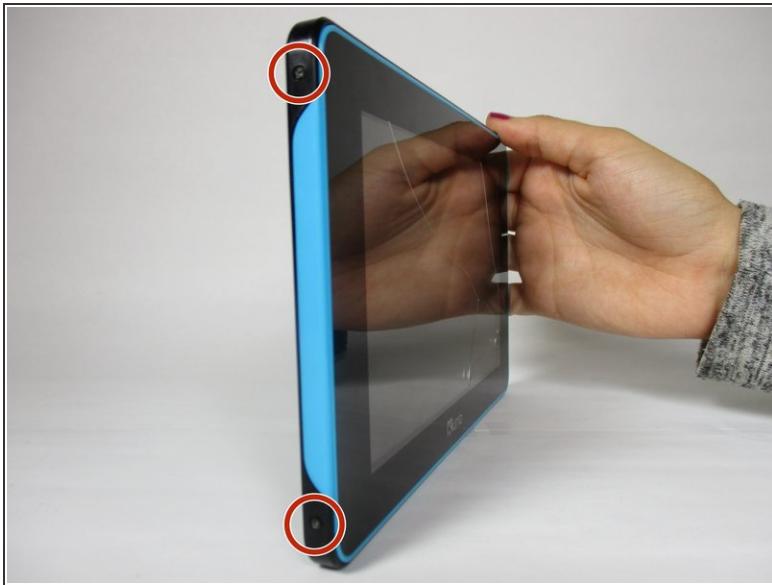

- Unscrew the four 4 mm black screws using a Phillips #000 screw driver.
- There are two screws on each side of the device (four total).

Step 3




- Insert the plastic opening tool in between the edges of the blue front casing and black back casing.
- Slide the plastic opening tool around the perimeter of the device. This may require that you repeatedly run the opening tool up and down the edges of the device.

⚠ Be sure not to break any of the plastic clamps along the edges of the device when removing the back cover.



- Carefully lift the back panel off of the rest of the device.

Step 4 — Touch Screen

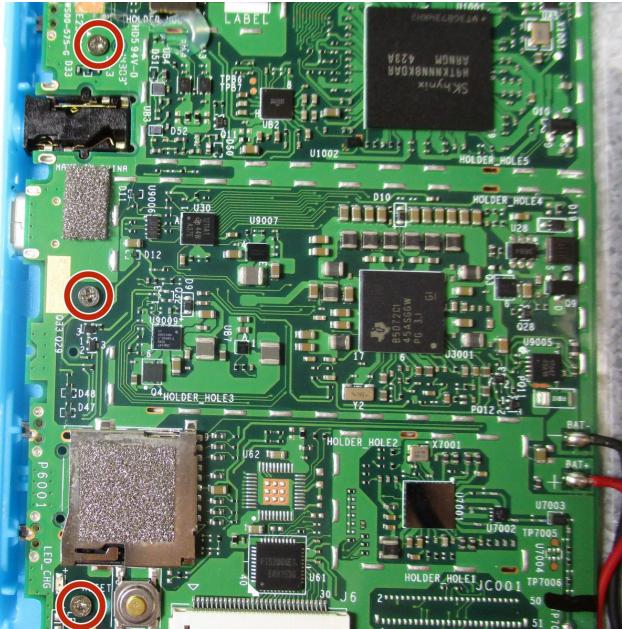



- Unscrew the three 4 mm screws with a Phillips #000 screwdriver.

Step 5

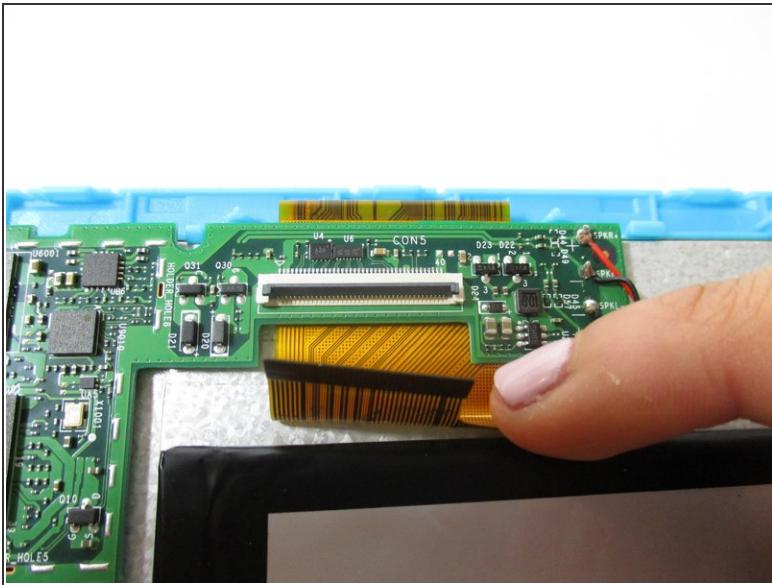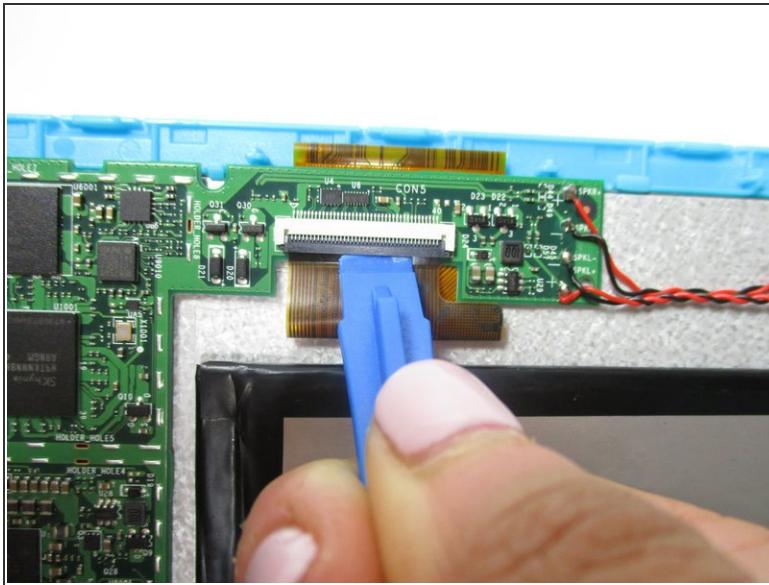


- Remove the orange data display ribbon wire above the battery by prying open the ZIF connector with the plastic opening tool.

Step 6

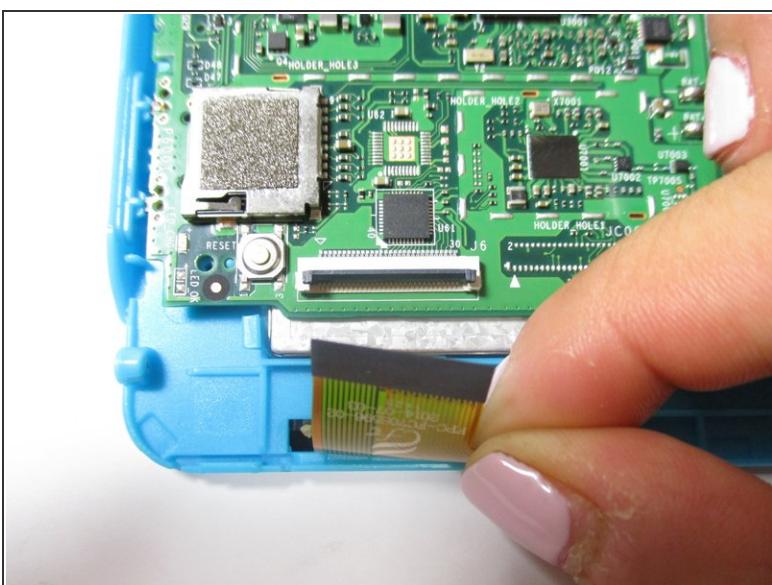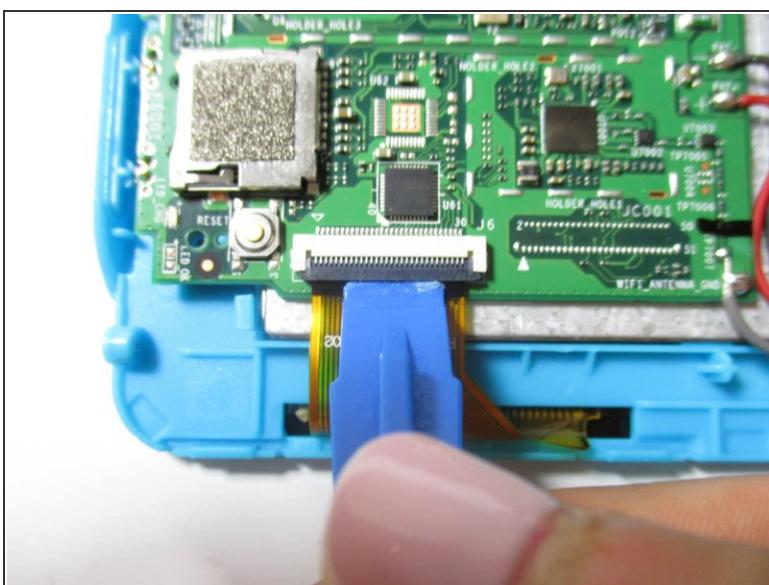


- Remove the orange data display ribbon wire to the left of the battery by prying open the ZIF connector with the plastic opening tool.

Step 7

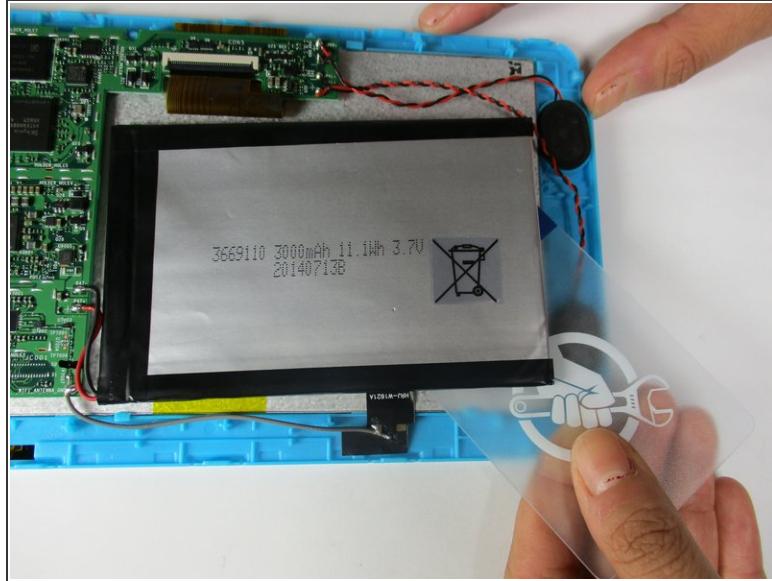

- Slide iFixit's Plastic Card tool or a credit card under the battery to remove the glue that is holding it in place.
 - **(i)** Be patient and gentle. The glue is strong and may take up to 30 seconds to remove.
- Carefully lift the battery out of the device and set it aside.
 - **⚠** Be careful not to disconnect the black and red wires from the motherboard when setting the battery aside.


Step 8

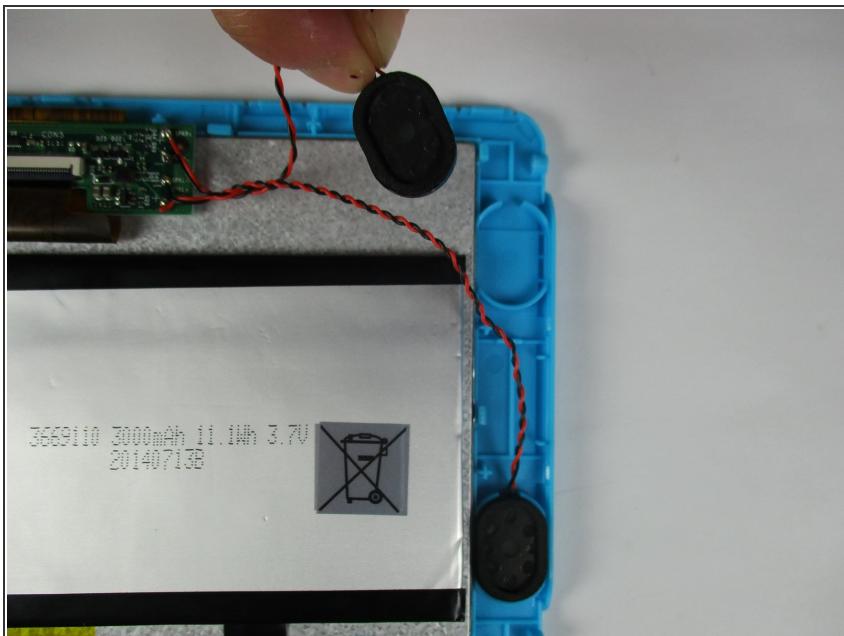

- Carefully remove the speakers out of the plastic molds by lifting up the black and red wires. Set the speakers aside.

 Be careful not to disconnect the black and red wires from the motherboard when setting the speakers aside.


Step 9

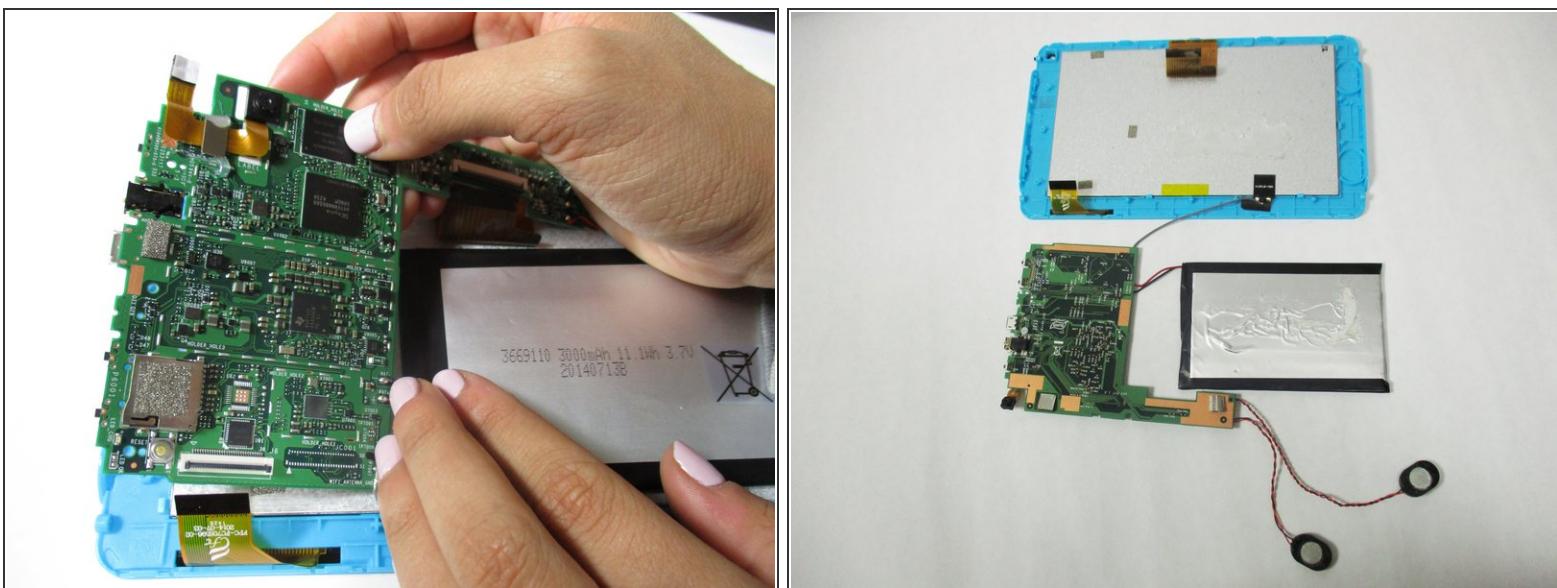

- Remove the motherboard by lifting it out of the casing and set it aside along with the battery and speakers.

 The motherboard will still be connected to the battery, speakers, and the gray ground wire.



Step 10

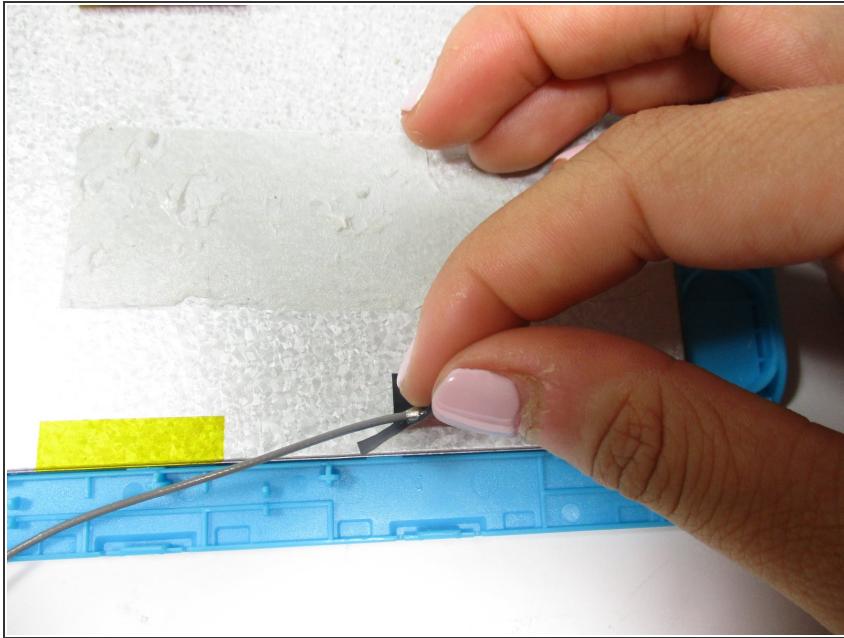

- Carefully peel the ground wire tape off of the blue front screen panel.

(i) It is not necessary to peel the tape off of the back of the silver LCD screen.


Step 11

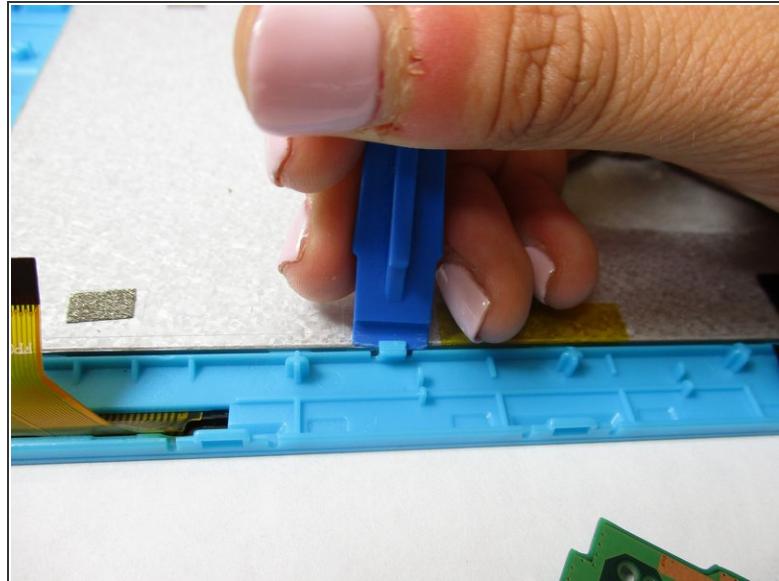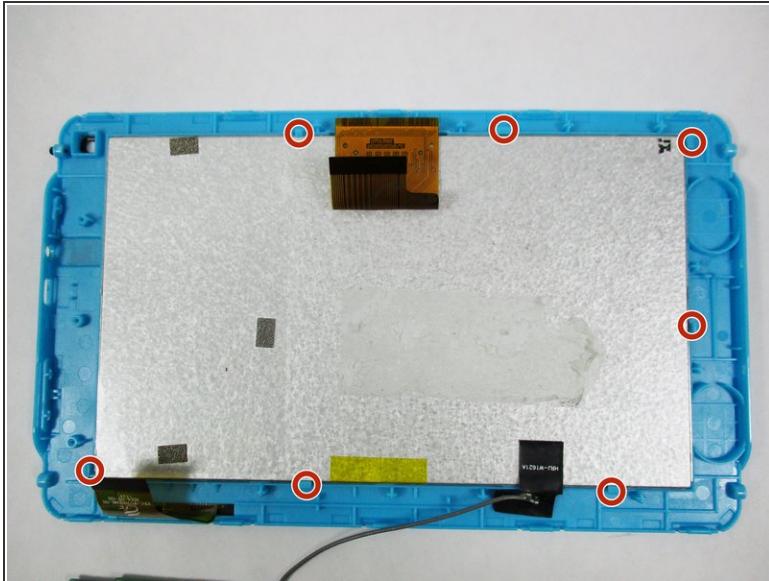

- Pry open all 7 of the blue clamps by wedging the plastic opening tool under them and bending them backward.

(i) The clamps will not "snap" open. This step requires you to actually bend the plastic back.

Step 12

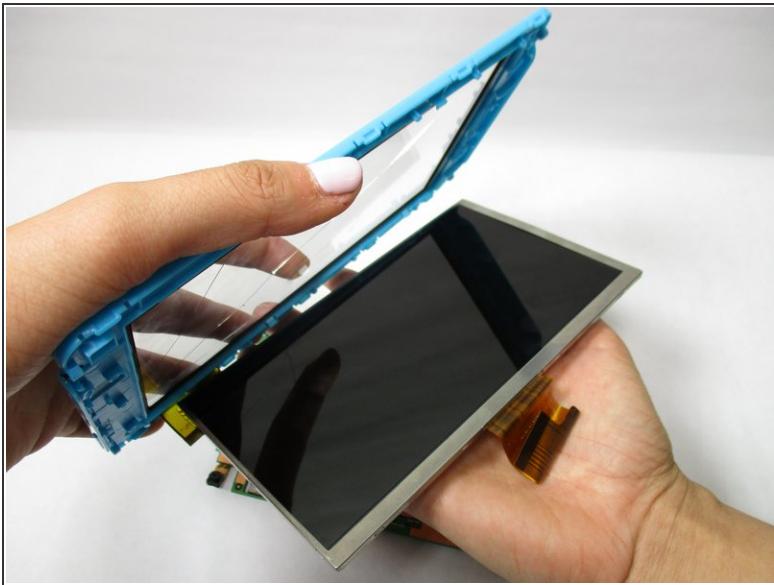

- Remove the LCD display from the blue touch screen casing by gently shaking them apart in the palm of your hand.
- This could be stuck on, so you need heat to loosen the glue.
- Be careful when prying the digitizer from the plastic, if you bend it too much it can break the frame!

To reassemble your device, follow these instructions in reverse order.