



Kyocera Event Battery Replacement

This guide will teach you how to remove the battery in a Kyocera Event and put another battery to Kyocera Event efficiently.

Written By: Jen Michaels



INTRODUCTION

A battery is essential to turn on the phone. In this guide you will learn how to remove the battery in a Kyocera Event and put another battery to Kyocera Event efficiently.

TOOLS:

- [iFixit Opening Tools \(1\)](#)

Step 1 — Battery



- Locate the small notch on the bottom right side of the phone.
- To remove the cover, hook your thumb or fingernail into the slot. Then, gently lift the cover up and off.

(i) The back cover may flex slightly as you remove it. This is normal, but avoid applying excessive force.

Step 2



- Locate the small notch below the battery. You may see a white plastic notch sticking out of this space; if so, grasp that tab to pull the battery out of its compartment. If you do not see a white plastic tab, then place your fingernail in the notch and pull upward to release the battery from its compartment.

(i) The plastic prying tool can be used to help remove the battery.

To reassemble your device, follow these instructions in reverse order.