




# Kyocera Hydro Vibe Lock Button Replacement

This guide will allow you to remove the lock button and replace it with a new lock button.

Written By: Kunal Patel

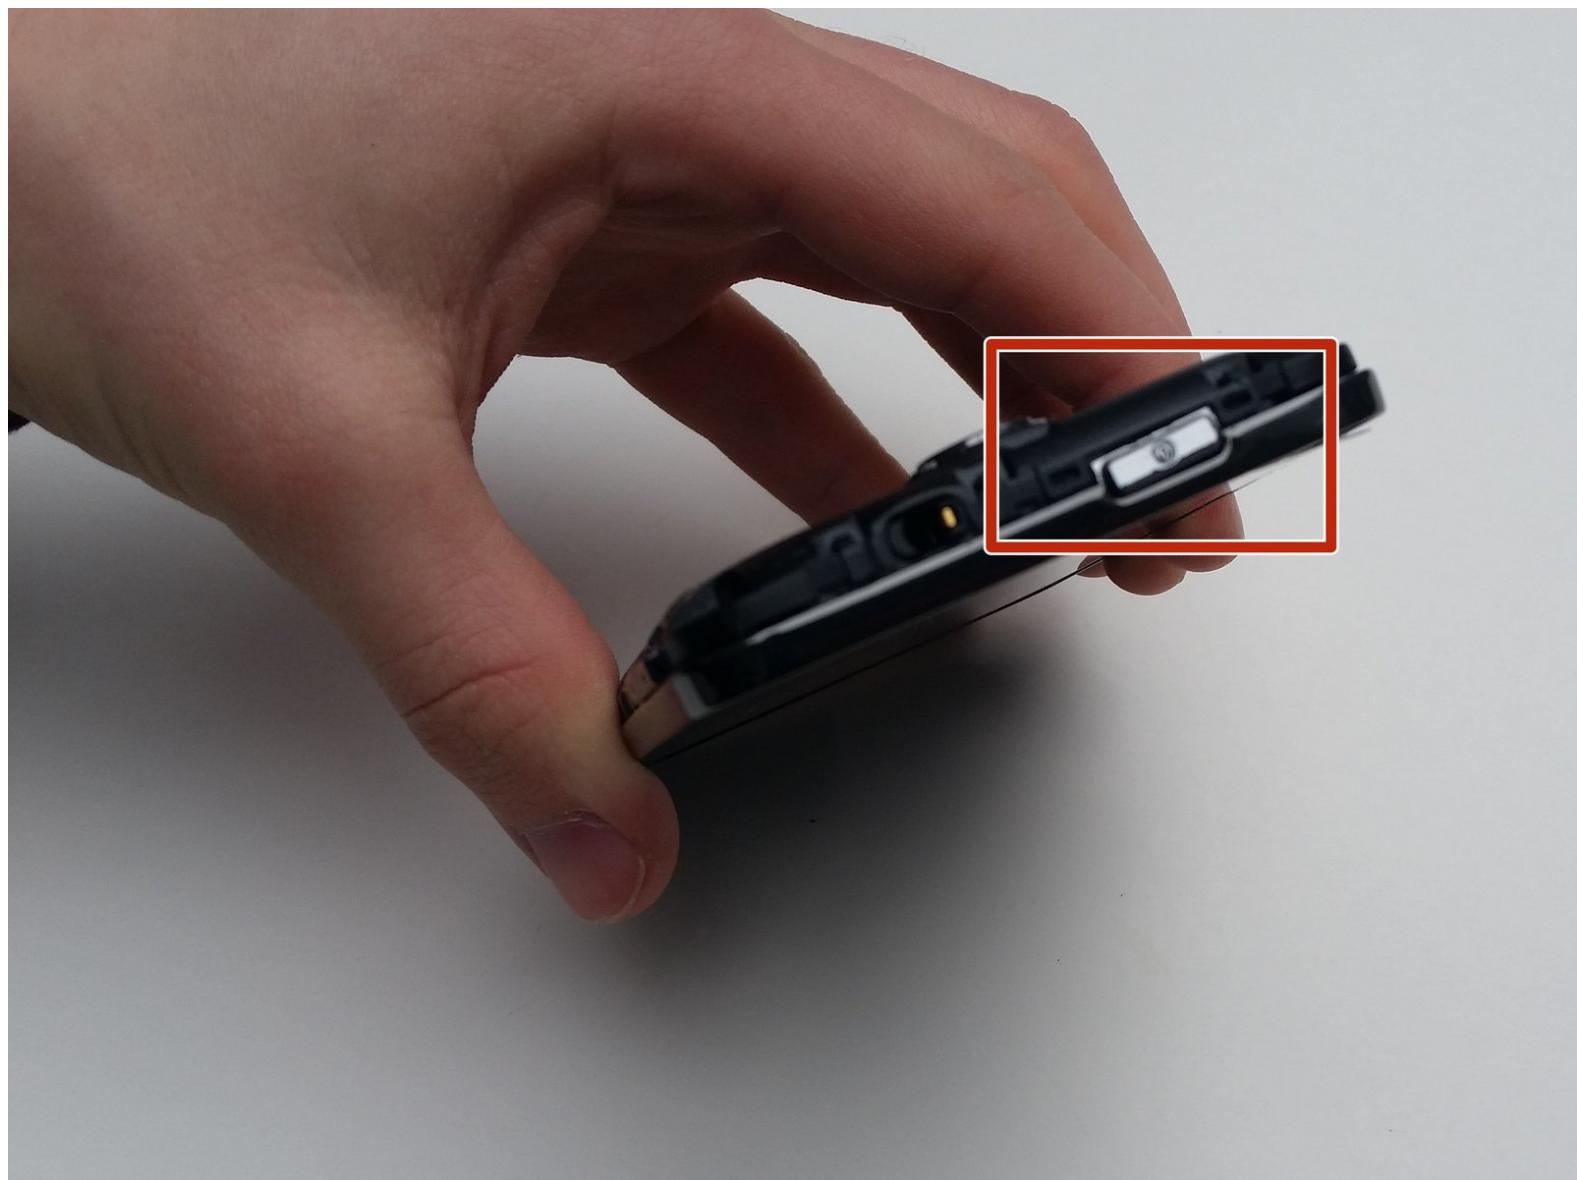

## INTRODUCTION

Sometimes the lock button gets stuck and needs to be replaced this guide will show you how to replace/ fix it.

### TOOLS:

- [Metal Spudger \(1\)](#)
- [iFixit Opening Tools \(1\)](#)
- [Screwdriver \(1\)](#)
- [Precision Tweezers Set \(1\)](#)

## Step 1 — Battery



**i** Make sure that the device is turned off before beginning.

- Look for a small indentation on the bottom of the phone.
- Insert the plastic opening tool into the indentation and lift off the back casing.

## Step 2



- The large white component is the battery. Look for a small indentation under the arrow that says "LIFT."
- Place the plastic opening tool in the indentation and lift the battery out of the socket.

## Step 3 — Trim



- Locate the screws holding the trim which are the four side screws on each corner.
- Remove each screw with a Phillips screw driver #J00. The screws are 5mm Phillips.

## Step 4



- Locate the clasps holding the trim in place.
- You will need to insert the metal spudger through the bottom of the trim and slowly push upwards to release the clasps.

## Step 5



 The trim is flimsy.

- This is what the trim will look like once removed.

## Step 6 — Lock Button



- Once you have taken the trim apart, the lock button will be easily removable.
- The lock button is located on the top of the phone.
- Take the tweezers and remove the lock button.

To reassemble your device, follow these instructions in reverse order.