



LG 305C MicroSD card Replacement

This replacement guide will outline how to replace the microSD card of the LG 305C.

Written By: Ashley Kidwell



INTRODUCTION

Before completing this replacement guide, it is important to make sure that the phone is unplugged. This replacement guide will show how to replace the microSD card from the device.

TOOLS:

- [iFixit Opening Tools \(1\)](#)

Step 1 — Battery



- Pry open the back case on the device with a plastic opening tool and remove it.

Step 2



- Pry the battery out of the device with a plastic opening tool and remove it.

Step 3 — MicroSD card



- Dislodge the microSD card from the microSD card slot using your index finger and remove it.

To reassemble your device, follow these instructions in reverse order.