



LG 440G Battery Replacement

How to replace the LG 440G battery.

Written By: Chris



INTRODUCTION

This guide will show how to replace the battery on this device.

Step 1 — Turn off phone.



- Power phone off by pressing and holding red button.

Step 2 — Flip phone.



- Flip over phone to expose the rear.

Step 3 — Rear cover removal.



- Slide rear cover downward and lift off. You can now access the battery.

Step 4 — Removal of battery.



- Gently lift battery from bottom. Battery should lift out easily.

To reassemble your device, follow these instructions in reverse order.