



# LG Ally VS740 Screen Replacement

Will help guide you into successfully replacing the screen in the LG Ally VS740.

Written By: Billy Carias




## INTRODUCTION

How to replace the screen in an LG Ally VS740.

### TOOLS:



- Essential Electronics Toolkit (1)

## Step 1 — Screen Replacement

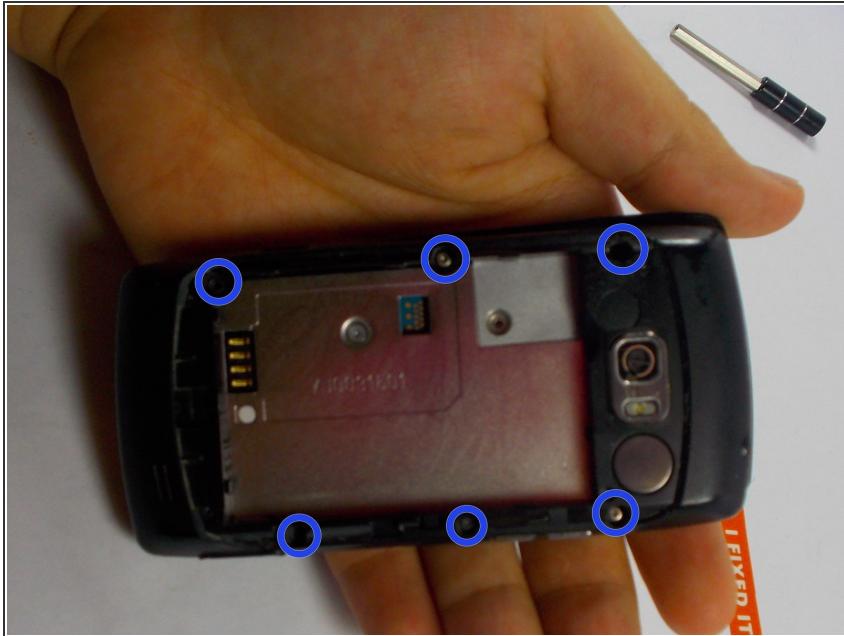



- Remove Battery
- Remove all 6 screws that are on the outer edge of phone

## Step 2

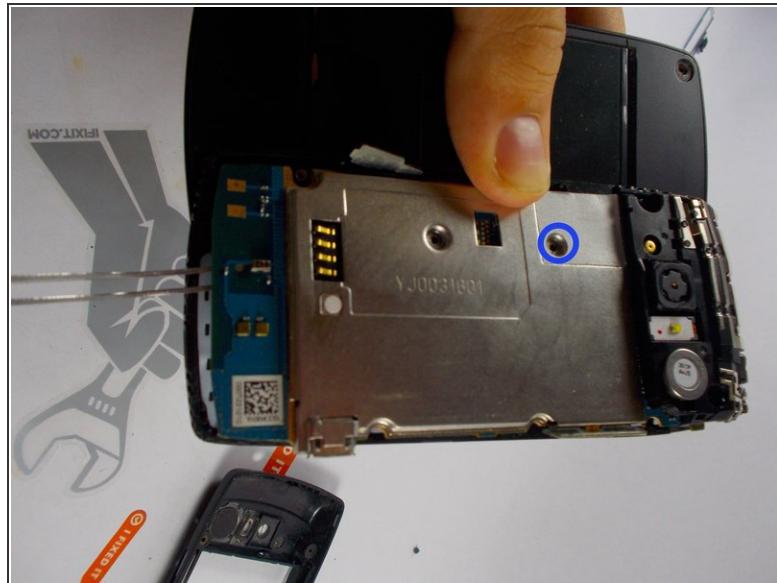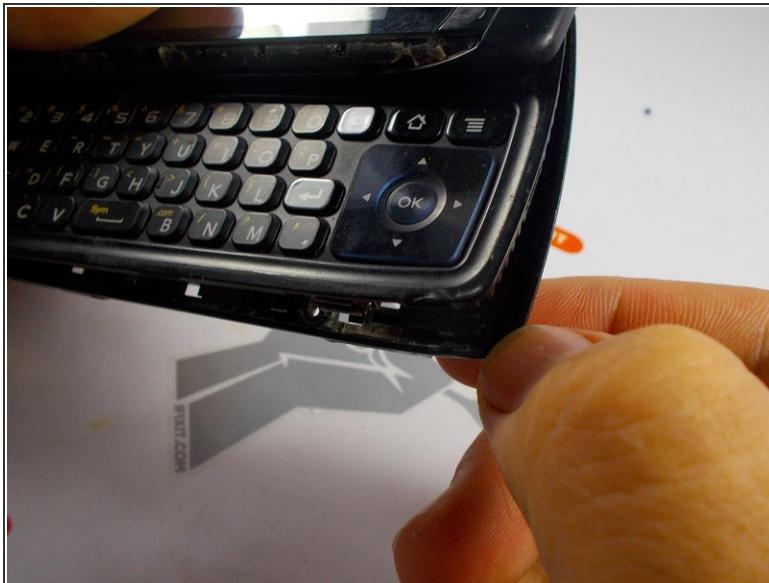


- Remove backcasing connected to the rest of the phone.
- Remove the phillip screw from the small white box on the top left corner that's on the battery platform of the phone.

## Step 3

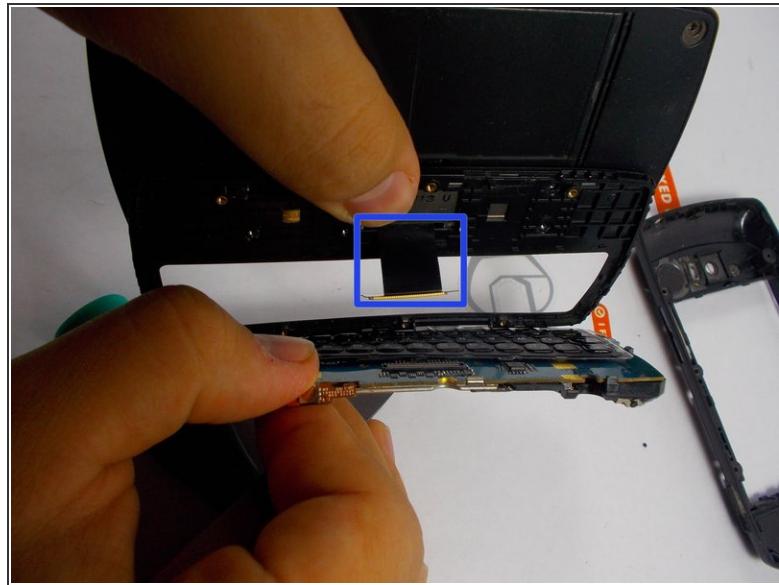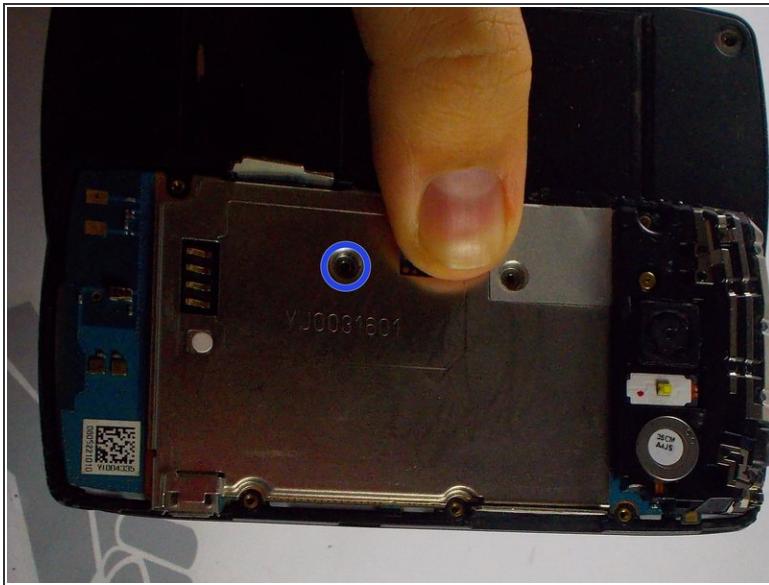


- Remove phone sticker and remove screw under the sticker. Now you can remove the motherboard. Be careful with the tether still connected to it.
- Remove tether.

## Step 4

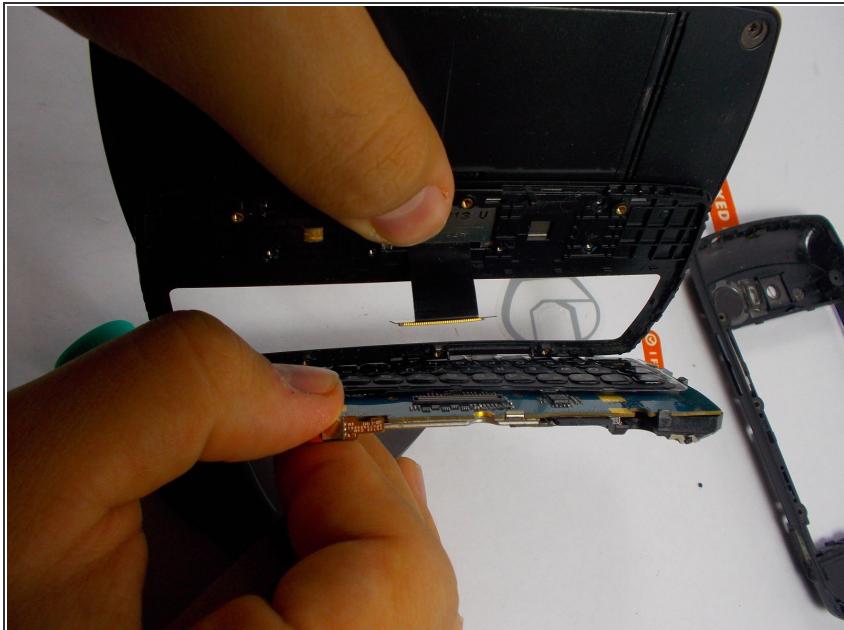

- Remove the keyboard, and the rubber caps behind the phone.
- To the right hand side of where the keyboard was, remove the four screws shown.

## Step 5

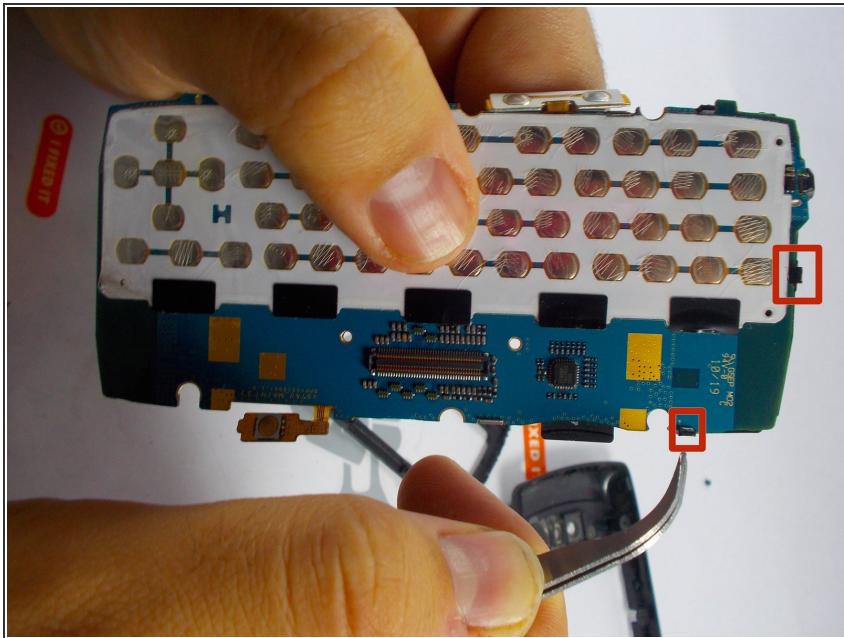

- Release clips with prying tool and take off the next layer of the phone.

## Step 6



- Release the pop-connectors, and the flex cable at the top by the speaker.
- . Now you can easily remove the yellow cabling on the phone.

## Step 7



- Release jaw connector. Now remove LCD screen. You can now replace the screen.

To reassemble your device, follow these instructions in reverse order.