


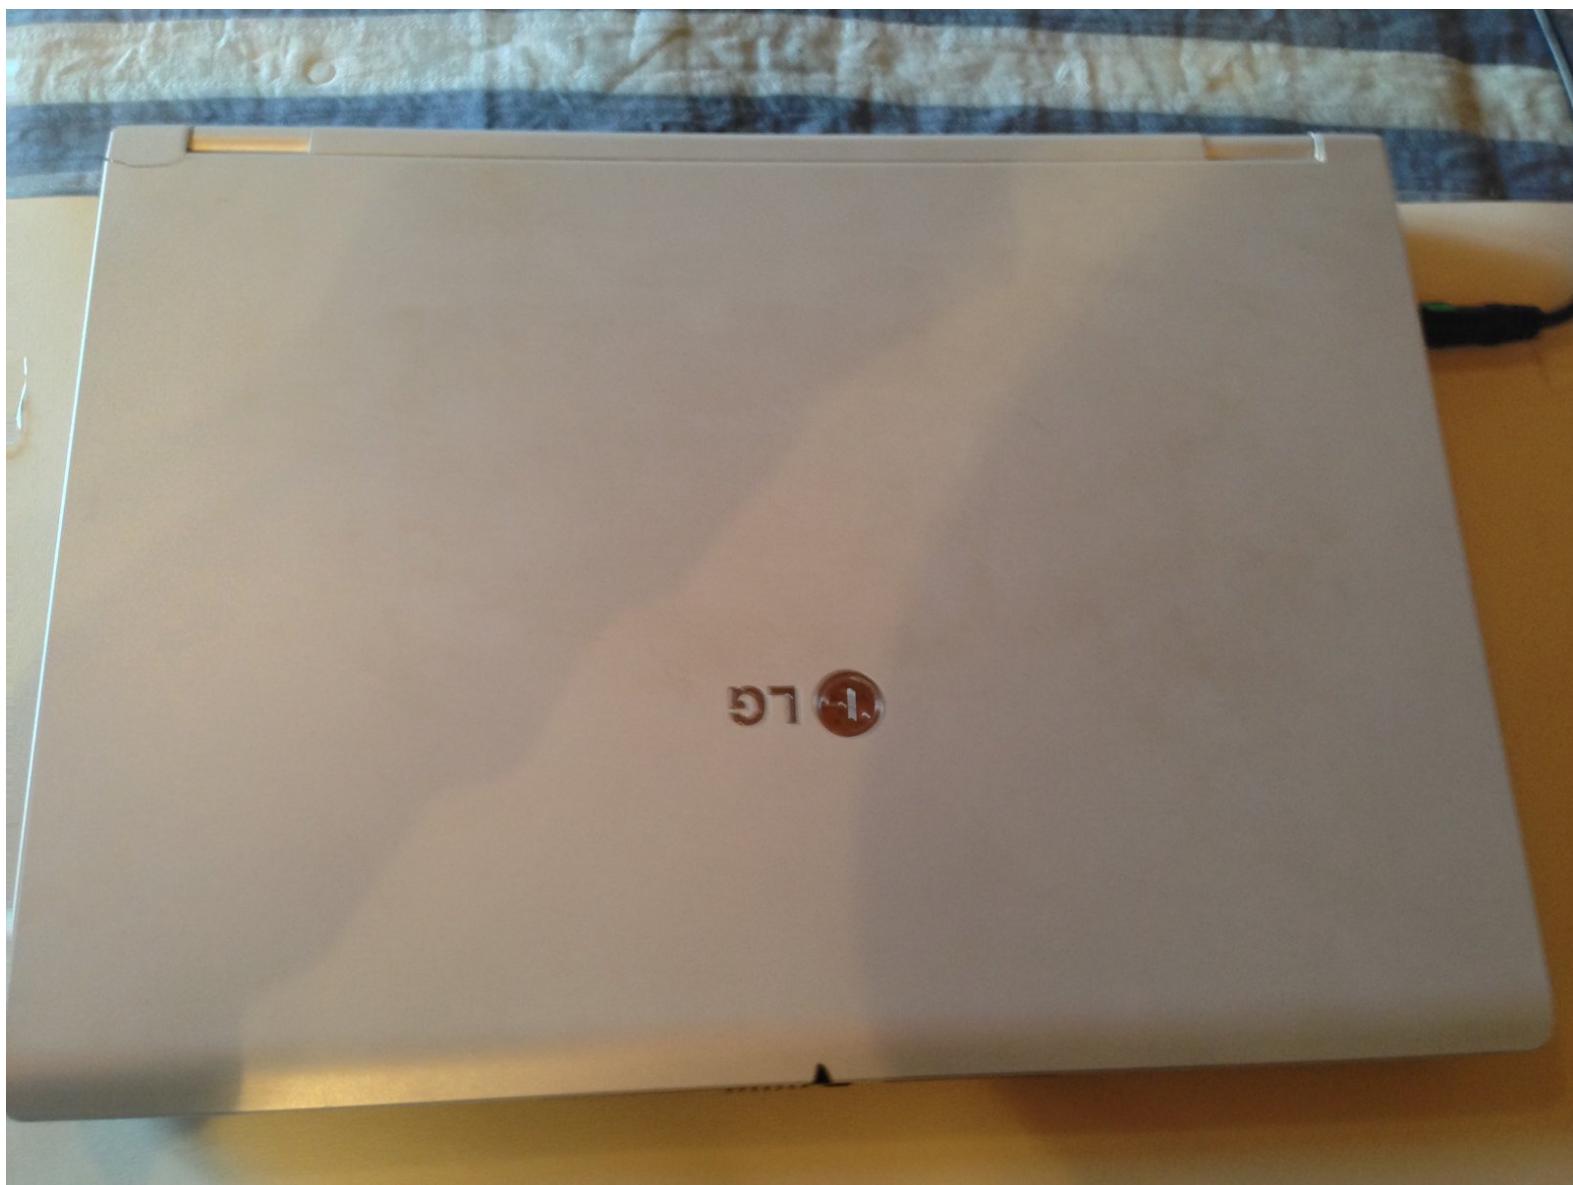

LG E500-K Notebook remove reset BIOS.

LG NOTEBOOK E500-K is a Discontinued Product. A old PC have a bios password. My first Guide.

Written By: olavoskarsen



INTRODUCTION

Take apart CMOS / BIOS Battery

TOOLS:

- Spudger (1)
- Phillips #0 Screwdriver (1)
- Metal Spudger (1)

Step 1 — LG E500-K Notebook remove reset BIOS.



- Turn off the computer and turn it over to its back.
- Remove the battery lock.
- Remove the battery


Step 2



- Remove Phillips screw from the panel.


 The panel clip can break.

Step 3

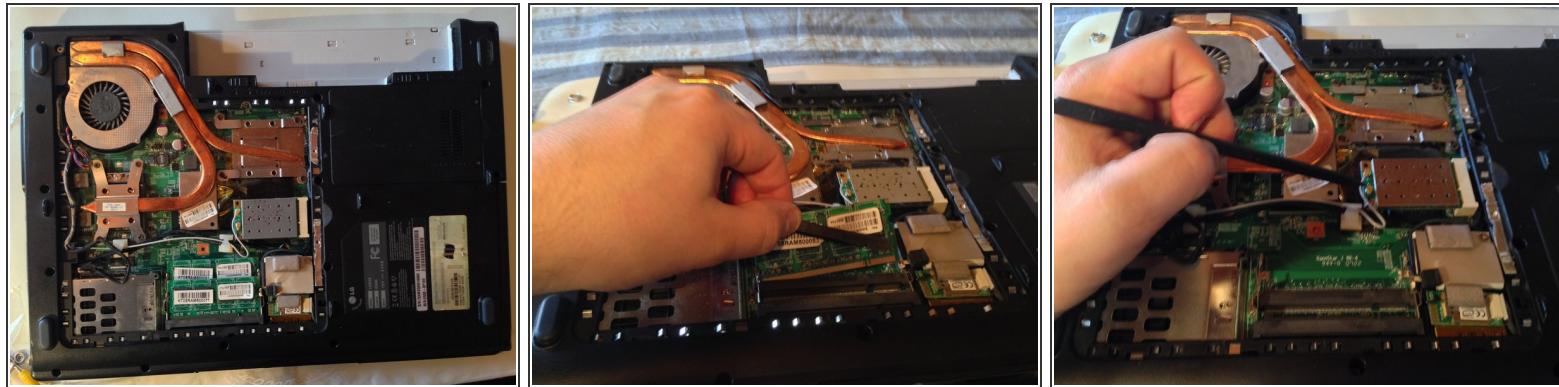


- Now, remove RAM card's from the MB.
- Detach the grey and black cables from Wi-Fi Card

Step 4

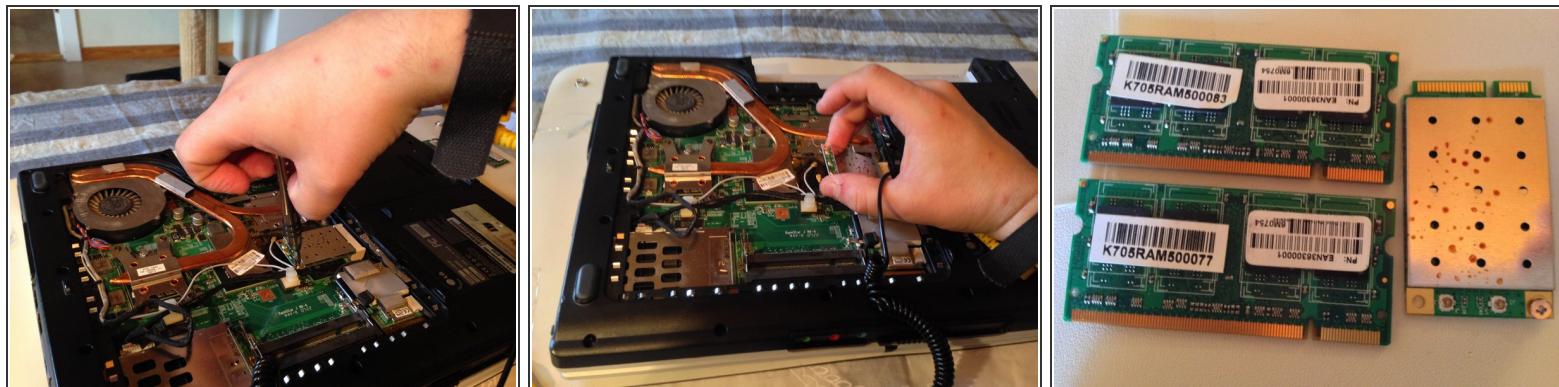

- Remove 1 screw holding Wi-Fi card in place.
- Remove Wi-Fi card from MB.

Step 5

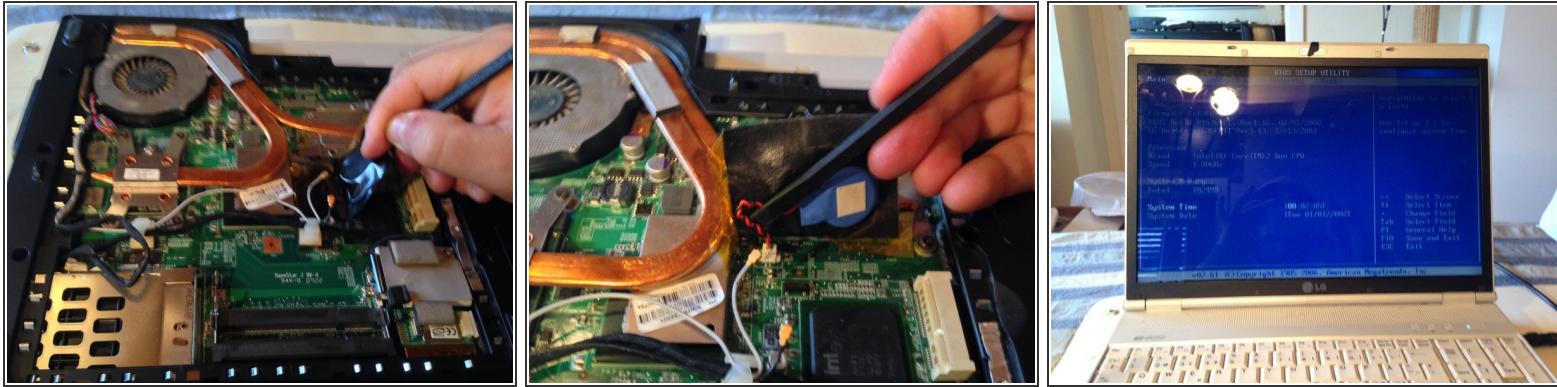

- Remove a black tape.
- lift tape away and disconnect the battery.
- Test the computer. Turn it on.

i Reconnect the battery.

To reassemble your device, follow these instructions in reverse order.