



LG Encore GT550 Audio Jack Replacement

This guide will tell the user how to replace the audio jack.

Written By: Lindsey Harding



 **TOOLS:**

- [Phillips #0 Screwdriver \(1\)](#)
- [iFixit Opening Tools \(1\)](#)

Step 1 — Audio Jack




- Remove back cover.

Step 2



- Remove battery.

Step 3

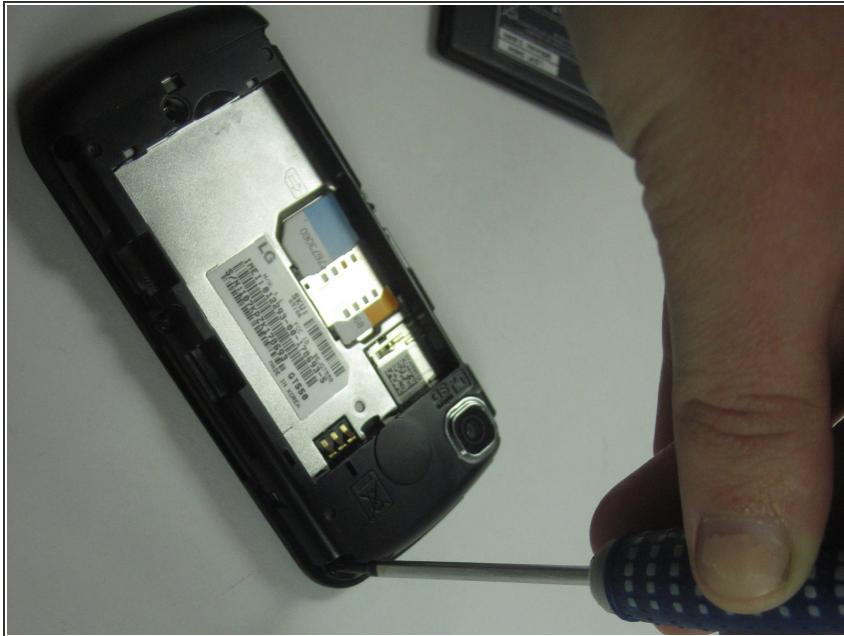



- Remove the six screws around the outside using the Phillips head screwdriver.

Step 4




- Using the iOpener, separate the phone.

Step 5

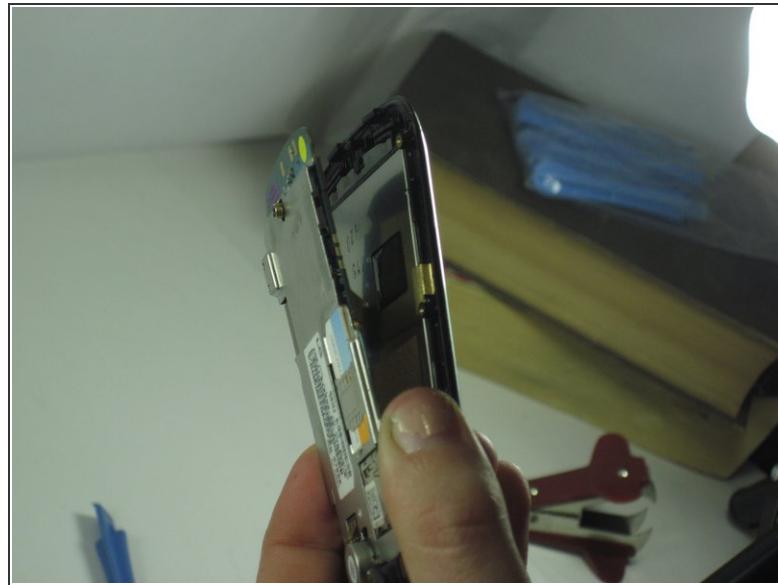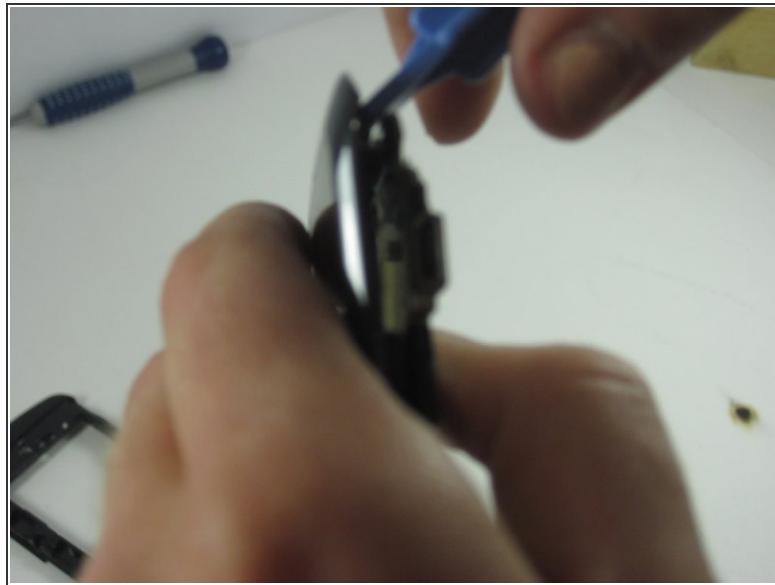

- Using the iOpener, separate the screen and the motherboard.

Step 6

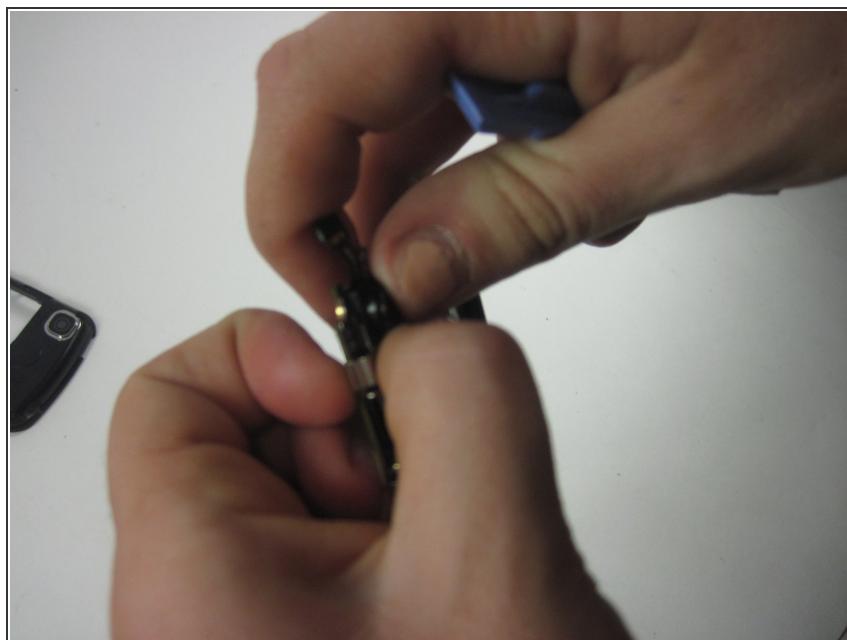

- Push the audio jack out and replace it.

To reassemble your device, follow these instructions in reverse order.