




# LG G Pad 8.3 4G Speakers Replacement

How to replace a LG G Pad 8.3 4G speaker.

Written By: Deja Morrow

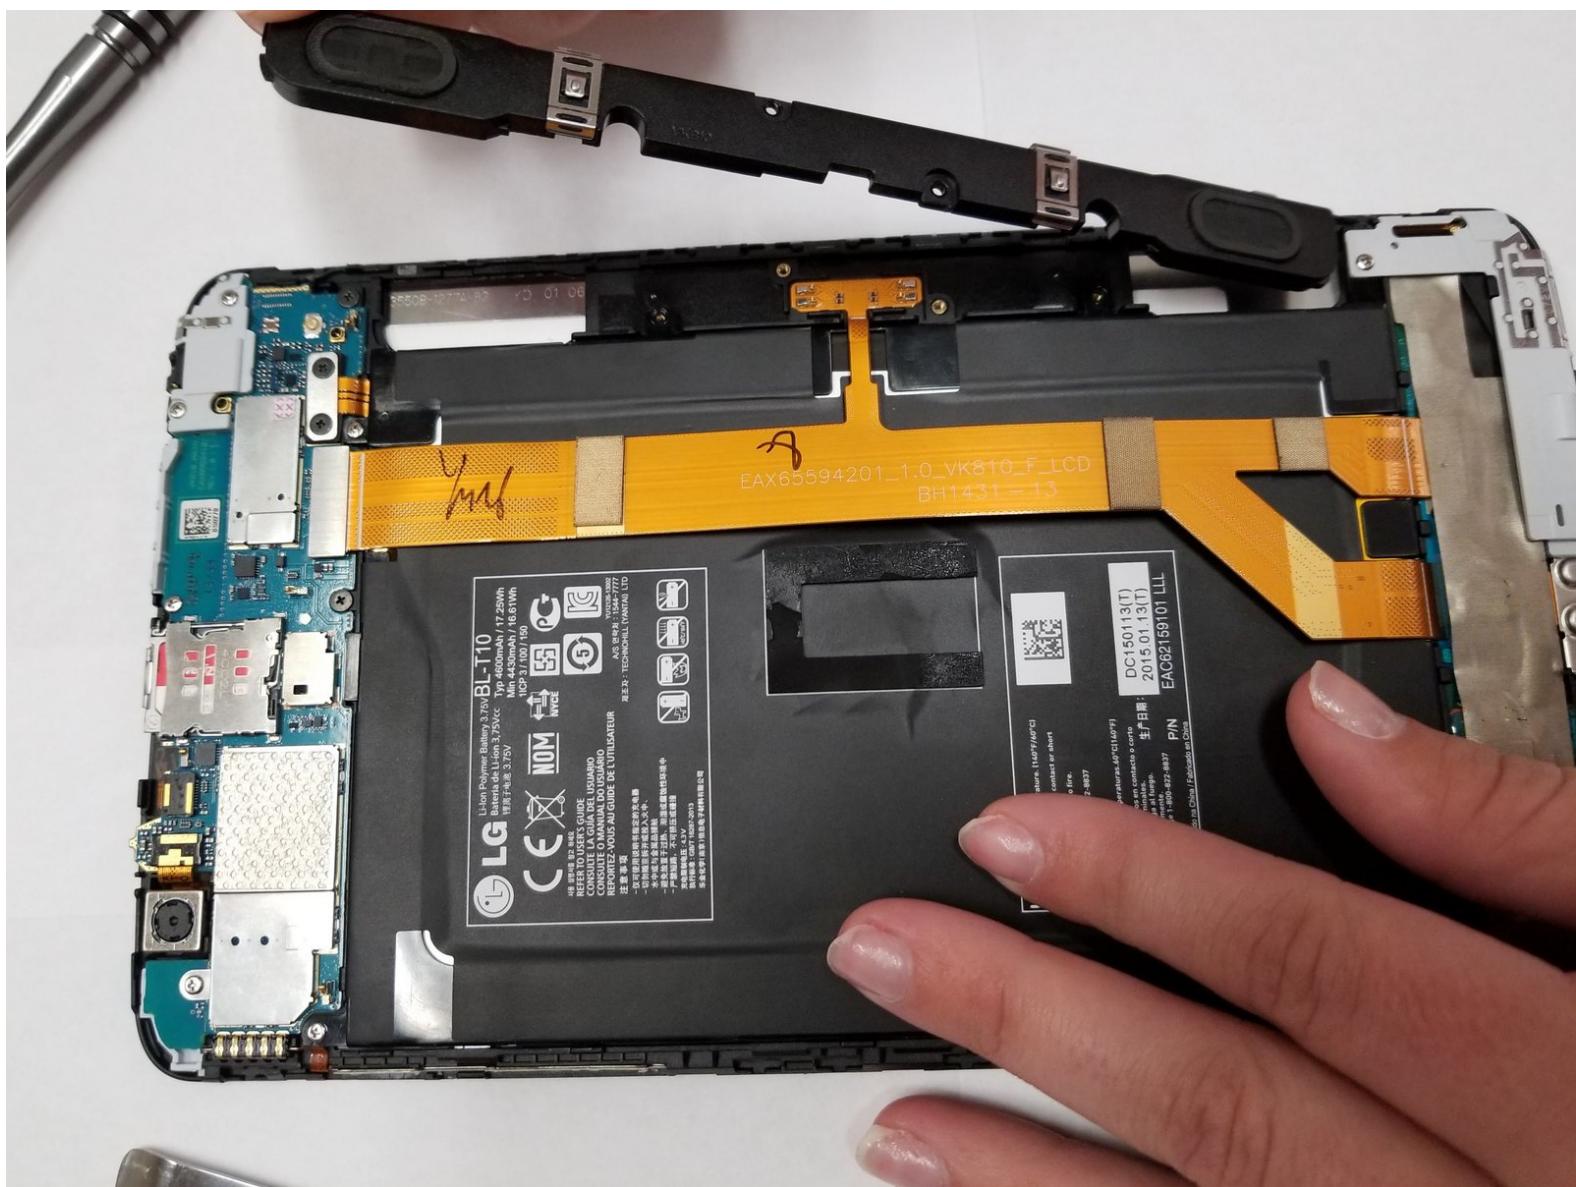

 **TOOLS:**

- [Spudger \(1\)](#)


## Step 1 — Back Panel



- With the screen faced up, insert the metal spudger into the crevice so that it is sticking out between the side panel and the screen.

 Be gentle when popping the panel off.

## Step 2

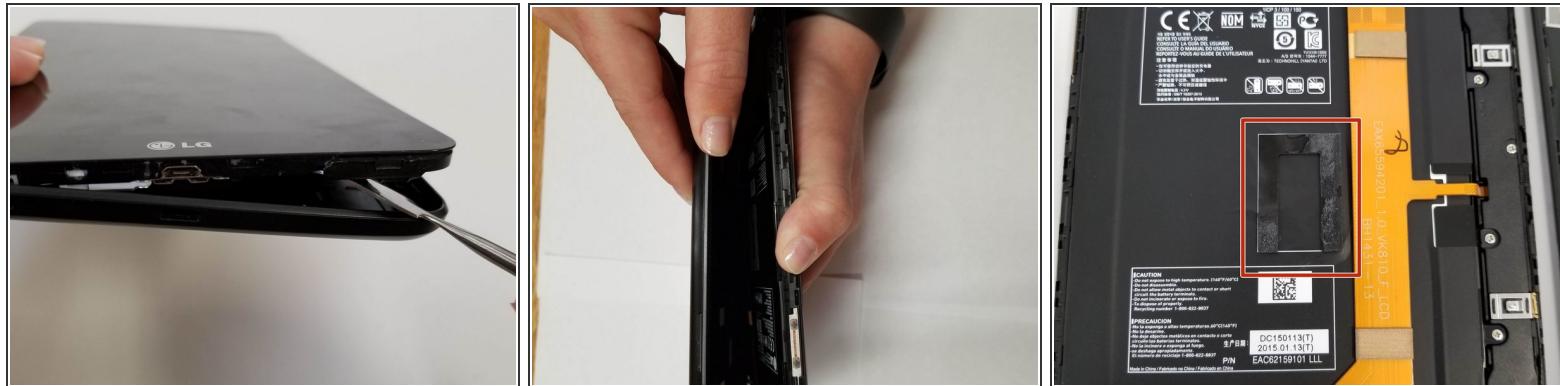

- Take the spudger and slide it around the perimeter of the device.
- Pull gently on the edges to get the panel to pop up.


 If the panel does not budge, be aware that there is adhesive on the back of the battery holding the back shut. Make sure to just move around the perimeter of the back panel until the panel is able to lift forward.

## Step 3 — Speakers



- Remove the 4 1.5 mm screws holding the speakers in place.


## Step 4

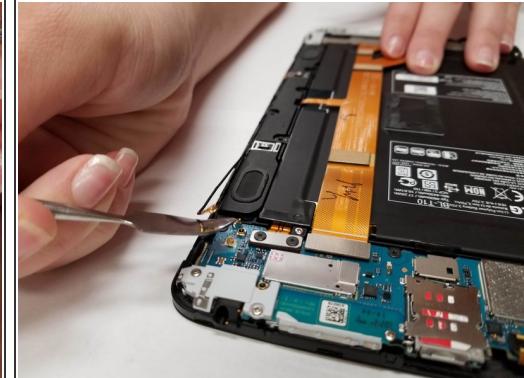

- Put the spudger underneath the gold cap of the cable and lift to disconnect from device.



**⚠** This cable can be damaged easily.

## Step 5

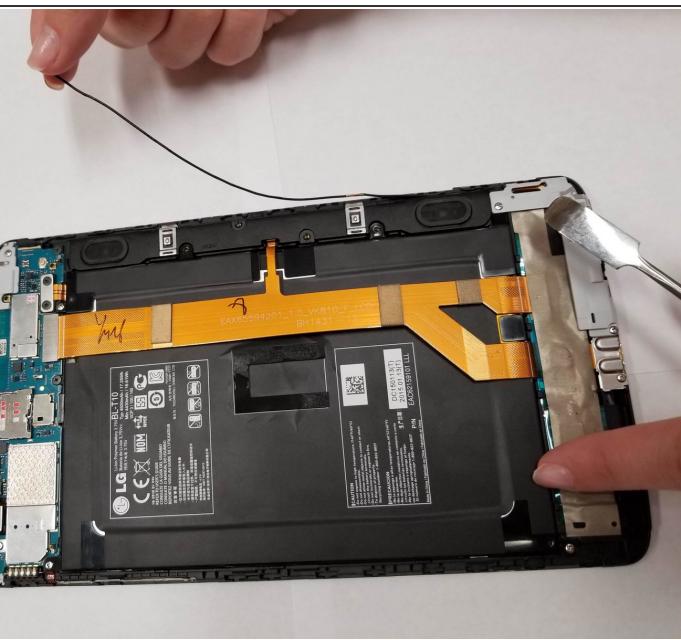

- Pull the cable back and out of the way of the speaker.

## Step 6

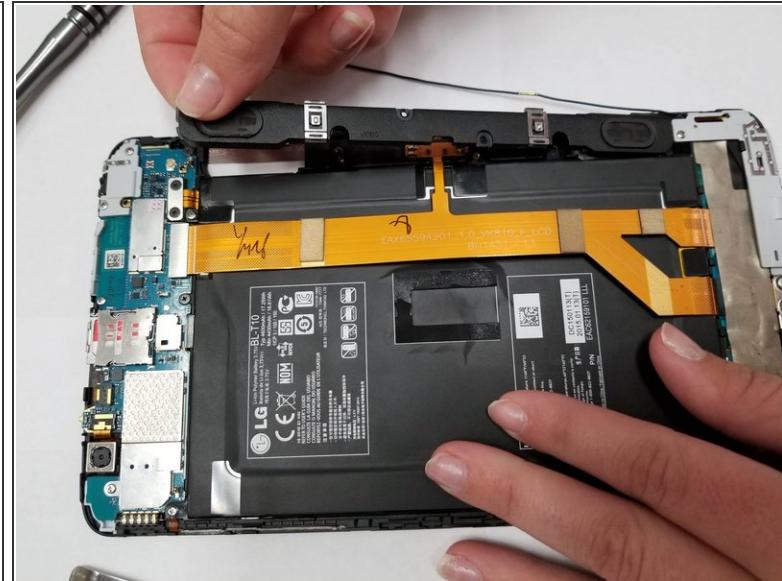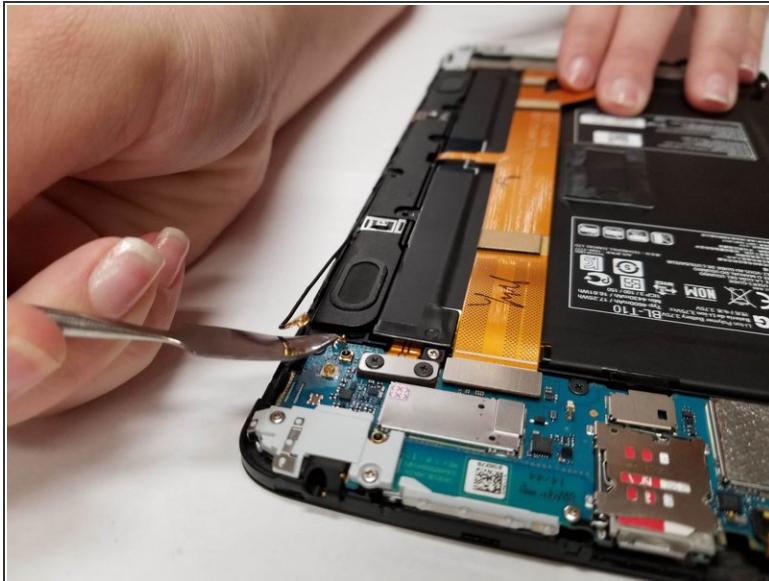

- Place the spudger in between the speaker and the device to pop the speaker out of place.
- Pull the speaker out of the device.

To reassemble your device, follow these instructions in reverse order.