




LG G Pad 8.3 Back Panel Replacement

This guide will teach you how to remove the LG G Pad 8.3 back panel.

Written By: Raenia Haworth

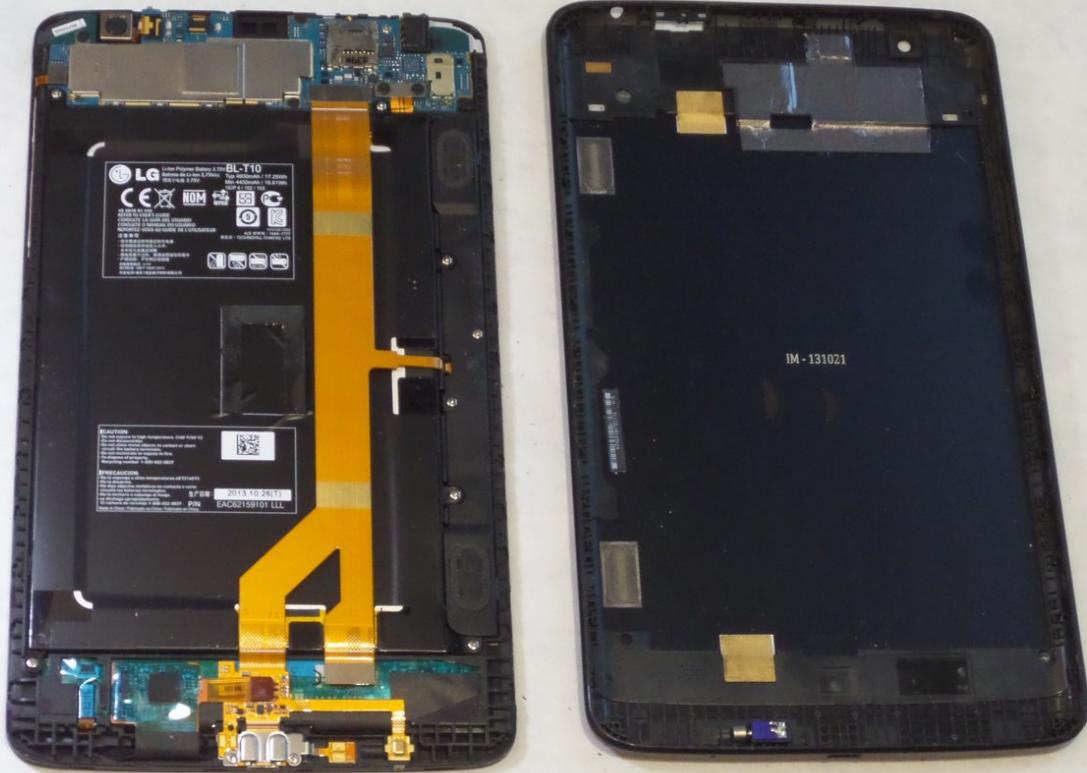

INTRODUCTION

If you need to replace a component inside the LG G Pad 8.3, you will need to remove the back panel. This guide will teach you how to remove the back panel.

TOOLS:


- [iFixit Opening Tools](#) (1)
- [Phillips #000 Screwdriver](#) (1)
- [iOpener Kit](#) (1)

Step 1 — Back Panel



- With the tablet face down, pull the SD card slot cover out.
- Using a Phillips #000 screwdriver, remove the 3mm screw located in the SD card slot.

Step 2

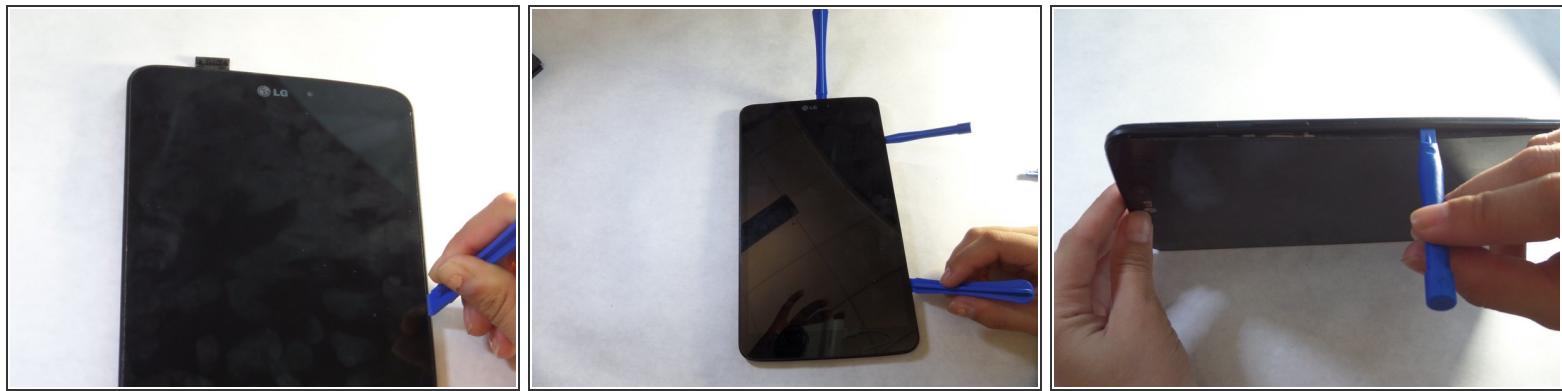

- Insert a plastic opening tool in the small crevasse between the screen and the back panel.
- Pry the screen away from the back panel.
- Repeat this on each edge of the device.

(i) We found it helpful to leave multiple plastic opening tools wedged in the crevasse to prevent it from closing.

(i) This requires heavy force. The back of the device is attached with an adhesive. If the back panel is too hard to remove, use the [iOpener](#).

Step 3



- After using the plastic opening tools, pry the device open with your hands.
- Remove the back panel from the screen.

To reassemble your device, follow these instructions in reverse order.