



LG G Pad 8.3 Battery Replacement

This guide will show you how to replace the LG G Pad 8.3 battery.

Written By: Mario Salguero



INTRODUCTION

If your LG G Pad 8.3 battery isn't working, it may be time to replace it. This guide will show you how to replace the battery.

TOOLS:


- [Phillips #00 Screwdriver](#) (1)
- [Metal Spudger](#) (1)
- [iFixit Opening Tools](#) (1)
- [iOpener Kit](#) (1)

Step 1 — Back Panel



- With the tablet face down, pull the SD card slot cover out.
- Using a Phillips #000 screwdriver, remove the 3mm screw located in the SD card slot.

Step 2

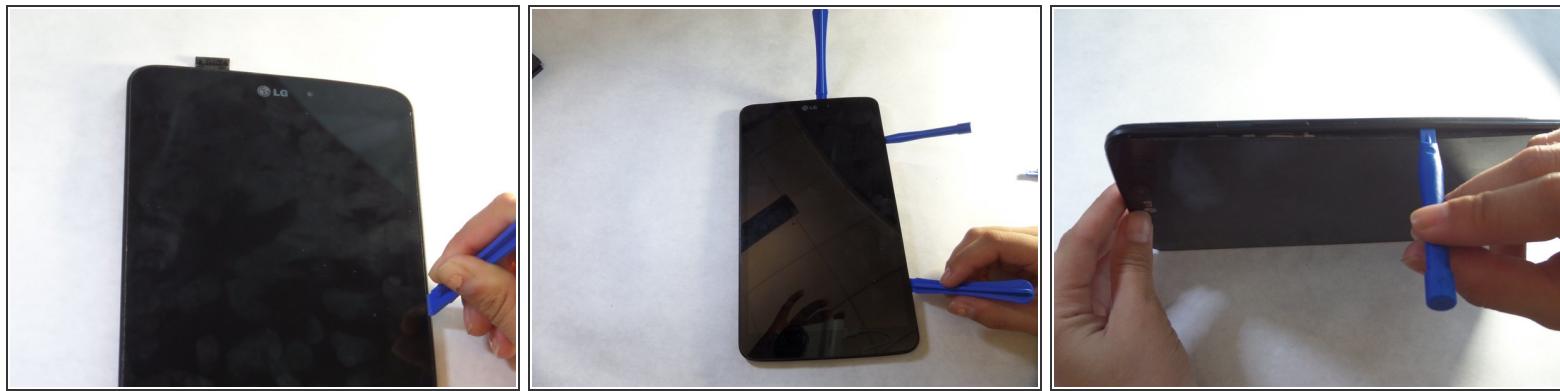


- Insert a plastic opening tool in the small crevasse between the screen and the back panel.
- Pry the screen away from the back panel.
- Repeat this on each edge of the device.

(i) We found it helpful to leave multiple plastic opening tools wedged in the crevasse to prevent it from closing.


(i) This requires heavy force. The back of the device is attached with an adhesive. If the back panel is too hard to remove, use the [iOpener](#).

Step 3

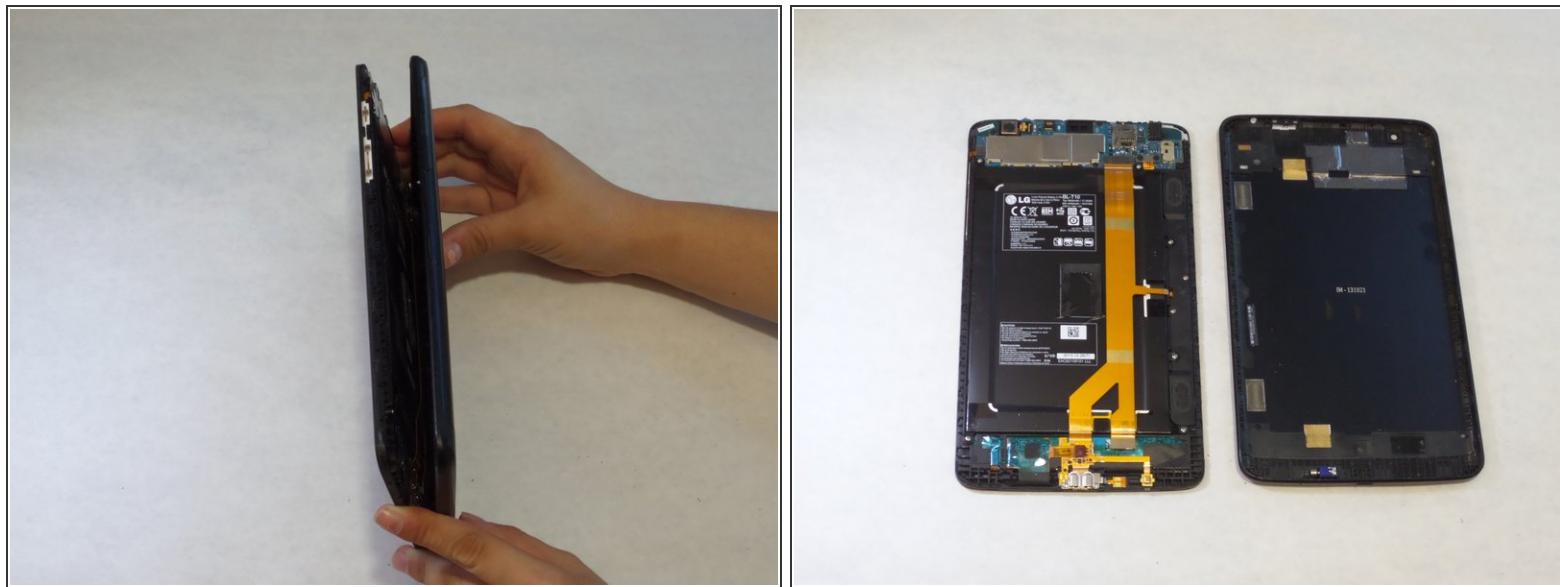

- After using the plastic opening tools, pry the device open with your hands.
- Remove the back panel from the screen.

Step 4 — Speaker

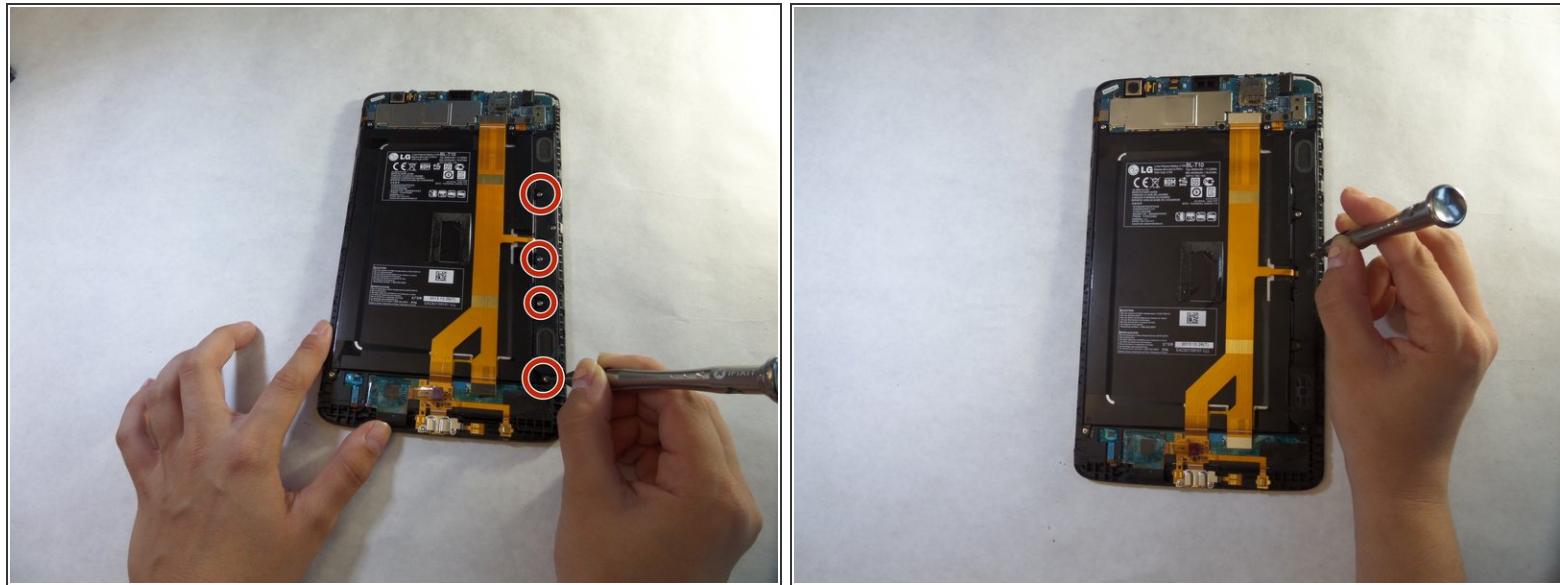

- Remove the four 3 mm Phillips #000 screws that are attached to the speaker.


i These screws are very small so make sure to keep track of them. You can use iFixit's [Pro Magnetic Project Mat](#) to help.

Step 5



- Use your fingers to remove the speaker.

Step 6 — Battery

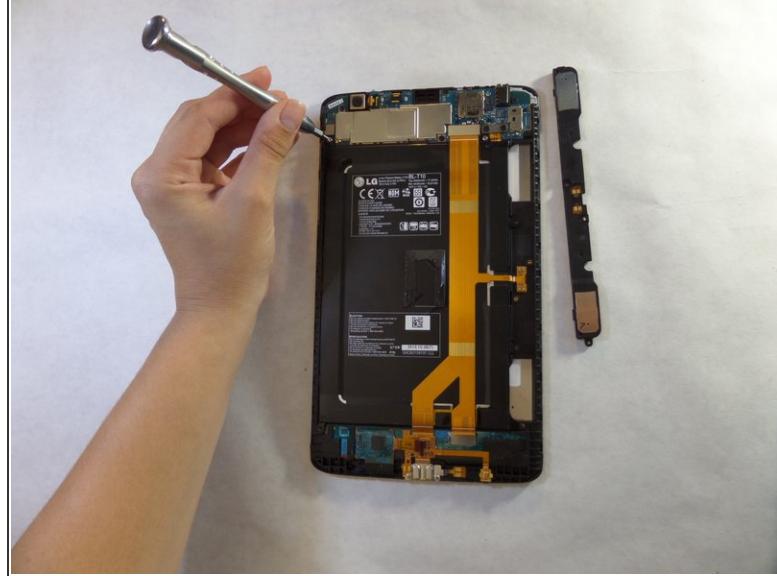

- Remove the 3mm Phillips #000 screws from the corners of the battery.

Step 7



- Using a spudger or a plastic opening tool, disconnect the ribbon cable from the right side of the device.

(i) The cable is attached with an adhesive.

⚠ These images use a metal spudger, which has the potential to damage the device. Use a plastic opening tool or standard spudger instead.

Step 8



- Using the Phillips #000 screwdriver, remove the two 3mm screws located at the bottom of the ribbon cable.
- Remove the ribbon cable from the device.

Step 9



- Unhook the battery from the top of the device.

To reassemble your device, follow these instructions in reverse order.