


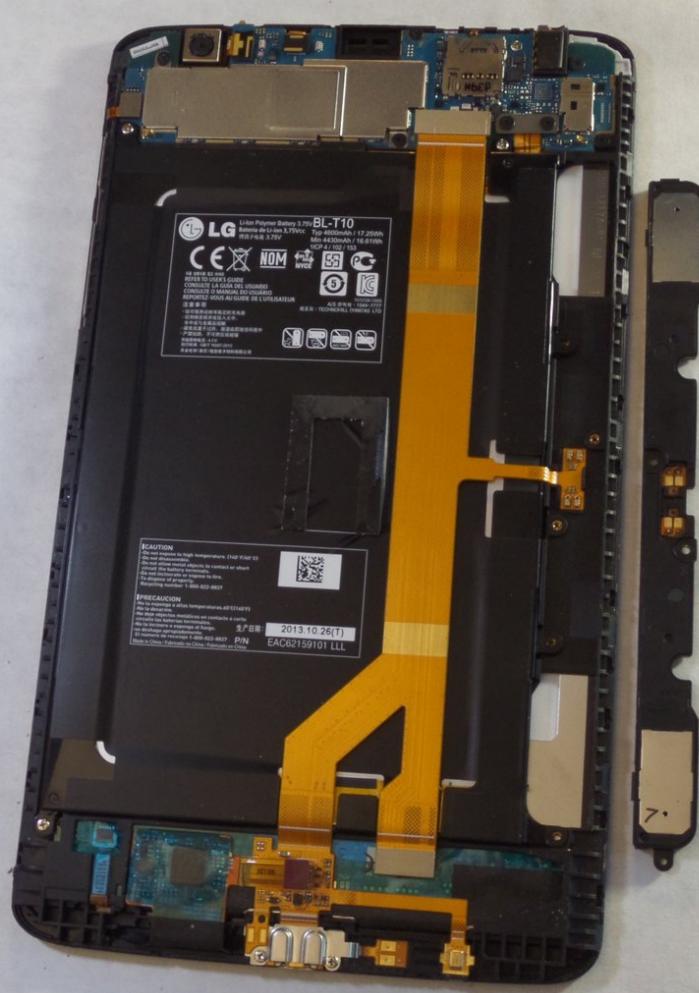

LG G Pad 8.3 Speaker Replacement

The guide will show you how to replace the LG G Pad 8.3 speaker.

Written By: Mario Salguero



INTRODUCTION

If your LG G Pad 8.3 speaker isn't working, it may be time to replace it. This guide will show you how to replace the speaker.

TOOLS:


- [Phillips #000 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)
- [iOpener Kit](#) (1)

Step 1 — Back Panel



- With the tablet face down, pull the SD card slot cover out.
- Using a Phillips #000 screwdriver, remove the 3mm screw located in the SD card slot.

Step 2

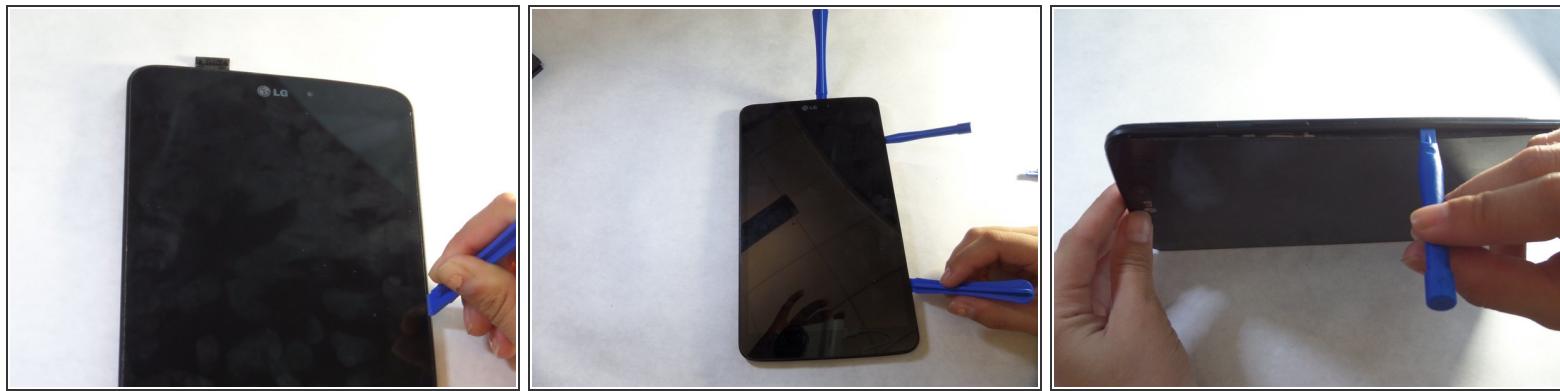


- Insert a plastic opening tool in the small crevasse between the screen and the back panel.
- Pry the screen away from the back panel.
- Repeat this on each edge of the device.

(i) We found it helpful to leave multiple plastic opening tools wedged in the crevasse to prevent it from closing.


(i) This requires heavy force. The back of the device is attached with an adhesive. If the back panel is too hard to remove, use the [iOpener](#).

Step 3

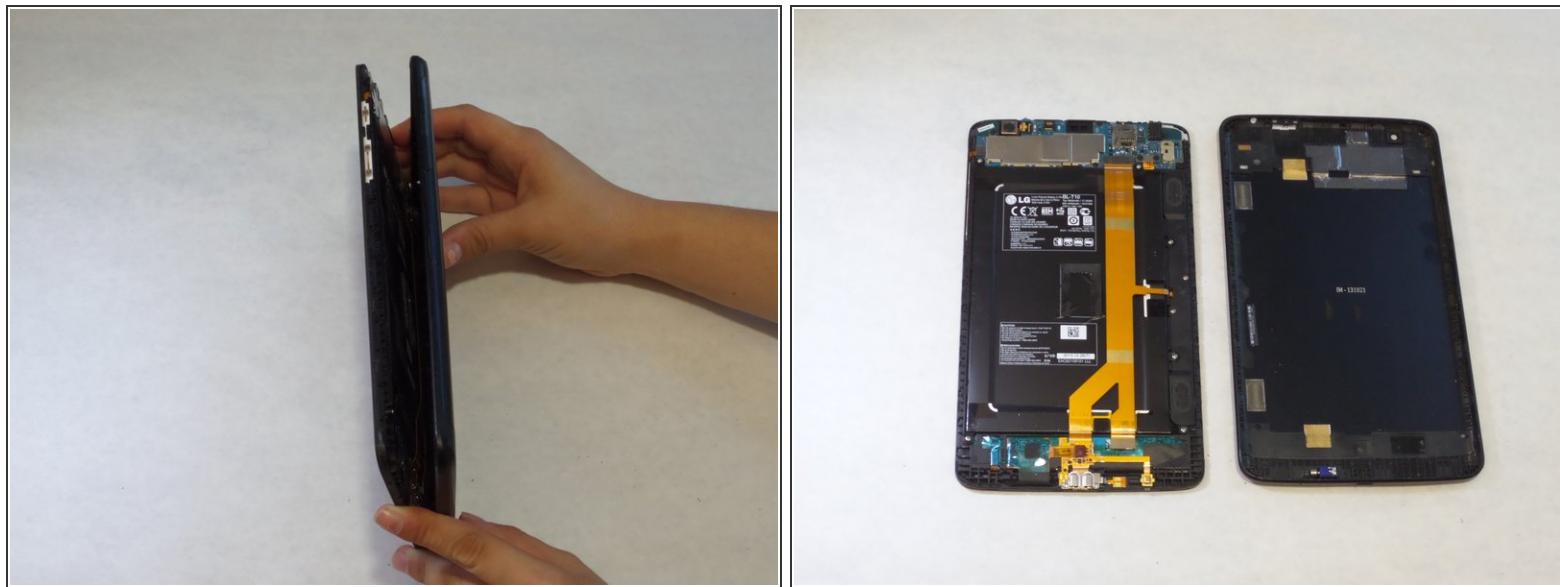

- After using the plastic opening tools, pry the device open with your hands.
- Remove the back panel from the screen.

Step 4 — Speaker

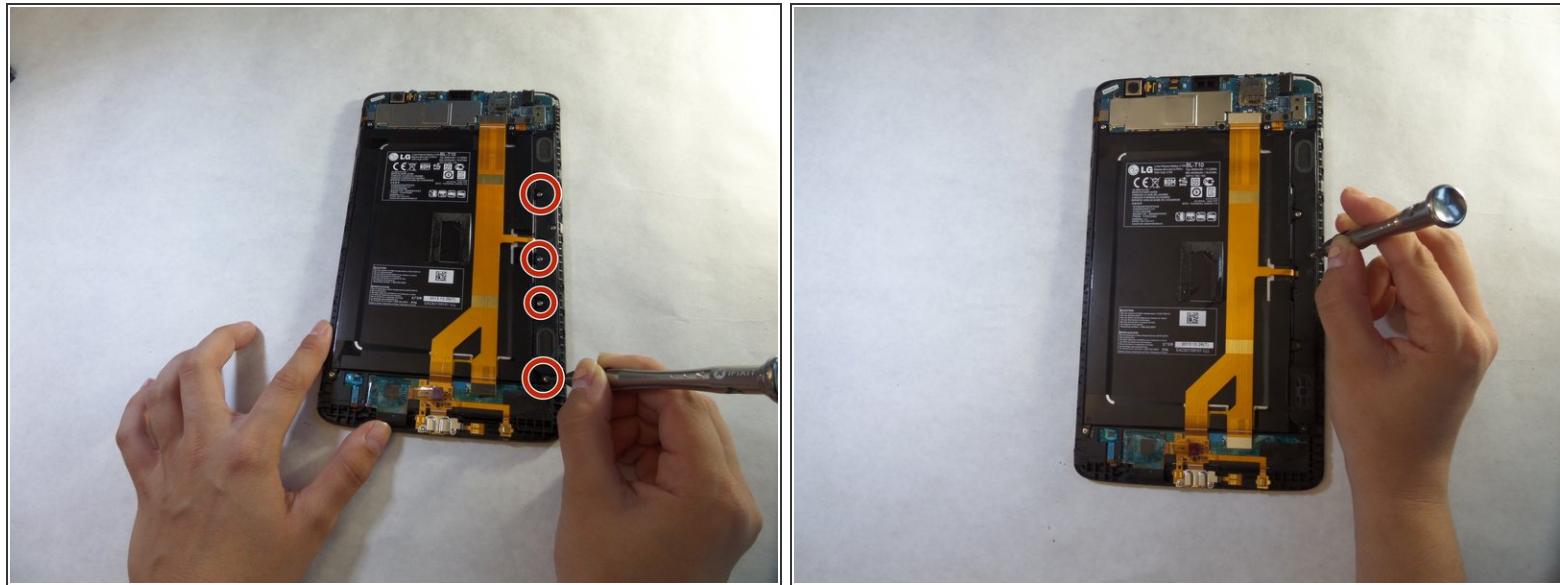

- Remove the four 3 mm Phillips #000 screws that are attached to the speaker.

i These screws are very small so make sure to keep track of them. You can use iFixit's [Pro Magnetic Project Mat](#) to help.

Step 5



- Use your fingers to remove the speaker.

To reassemble your device, follow these instructions in reverse order.