



# LG G Pad F 7.0 Speaker Replacement

Replacement for a LG G Pad F 7.0 Speaker

Written By: Jose Hurtado



## INTRODUCTION

This covers how to replace the speaker on a LG G Pad F 7.0

### TOOLS:

- [iFixit Opening Tools \(1\)](#)

### PARTS:


- [LG G Pad 7.0 LG-V410 Replacement Speaker \(1\)](#)

## Step 1 — Speaker




- Open up the SIM port, on the top right corner (screen face down).
- Press the SIM card (white plastic) to pop it out.
- Remove SIM card and set aside.

## Step 2

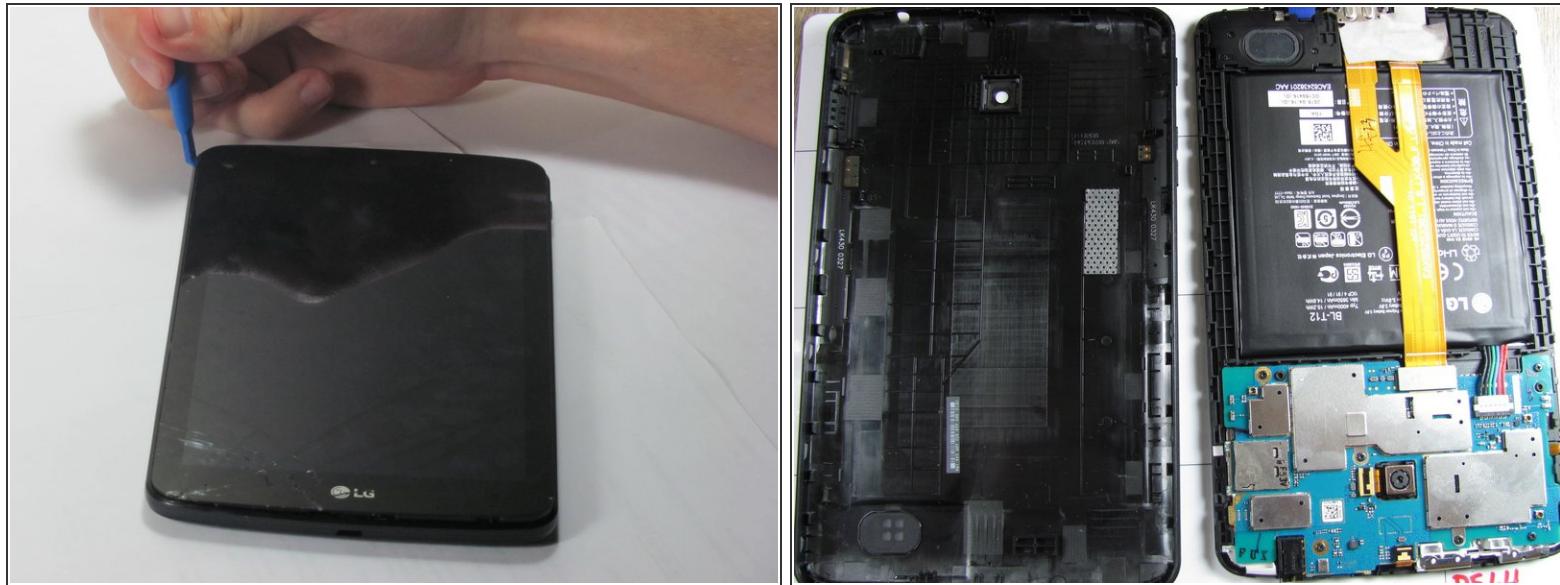

- Use the plastic opening tool to pry the plastic backing off of the internal block. Start at the location with the SIM port to avoid damage to internal components.
- Do this by finding the seam between the edge of the screen and the plastic backing, and prying between the two.
- Work your way all the way around the edge of the screen, and remove the plastic backing when it is loose.

## Step 3

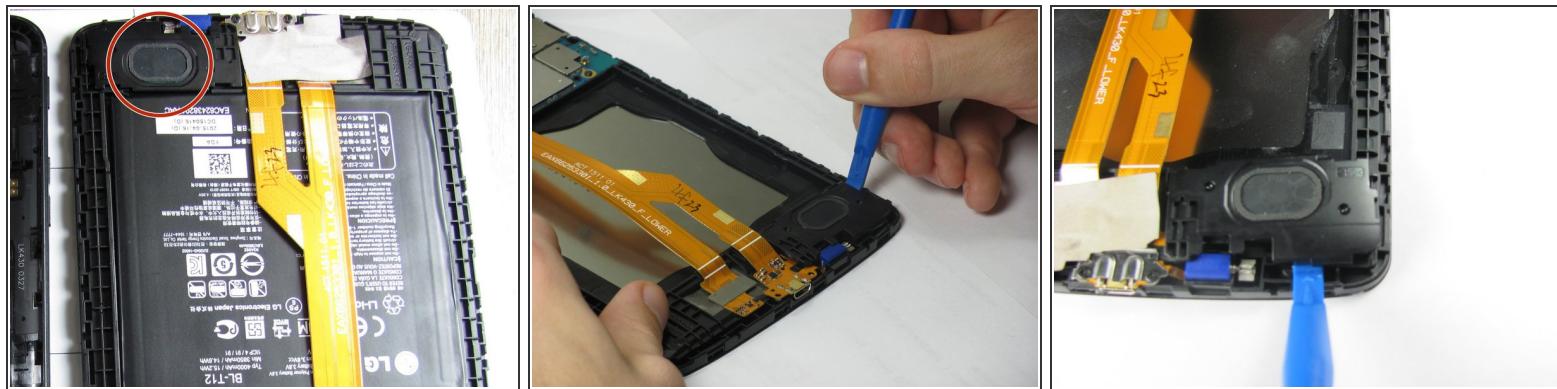

- Locate the LG G Pad F 7.0 speaker
- Insert the plastic opening tool on an edge of the speaker and lift so that it comes off easily
- Remove old speaker and replace with a new one

To reassemble your device, follow these instructions in reverse order.